


Teppan Yaki

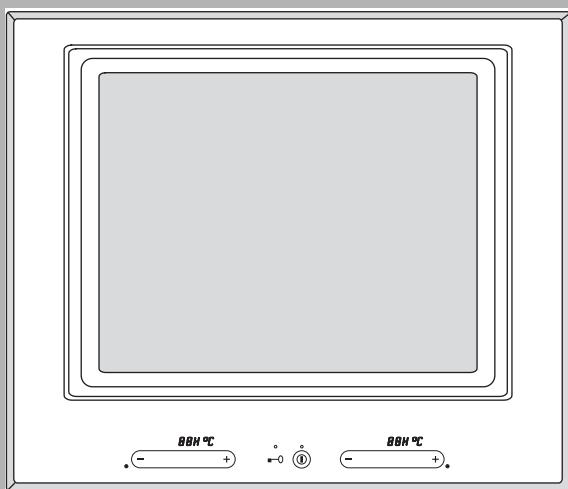

Operating Instructions

Dear V-ZUG Customer,

Thank you for deciding to purchase one of our products. Your appliance meets high standards and is easy to use. Nevertheless, do take the time to read these operating instructions. In this way, you will get to know your appliance and learn how to use it optimally and avoid malfunctions.

Please observe the safety instructions.

Modifications

The text, images and data reflect the technical specifications of the appliance at the time these operating instructions were printed. Modifications based on further development are reserved.

Symbols used



Indicates all safety-relevant instructions. Failure to observe these may lead to injuries, or damage to the appliance or your furnishings!

- ▶ Indicates steps in the procedure you must carry out in sequence.
 - Describes how the appliance reacts to the steps you take.
- Indicates a list of items.



Indicates useful user instructions.

Area of validity

The model number consists of the first 3 digits on the rating plate. These operating instructions are valid for the following model:

Type	Model no.
GK16TEYSF	007

Different versions are mentioned in the text.

Contents

Safety Instructions	4
Measures to be taken prior to initial start-up	4
Proper Use	5
When there are children in the household	5
When using the appliance	6
Your Appliance	8
Description of the appliance	8
Components	8
Operating and display elements	9
User Settings	10
Child safety function	10
Signal tone	10
Operation	11
Safety Functions	12
Automatic safety shut-off	12
Overtemperature protection	12
Care and Maintenance	13
Cleaning the grilling surface	13
Cleaning the glass ceramic frame	14
Solving Problems Yourself	15
What to do when	15
Technical Data	18
Disposal	19
Notes	21
Repair Service	23
Quick Guide	24

Safety Instructions



The appliance meets acknowledged engineering standards and applicable safety regulations. To avoid damage and accidents, however, the appliance must be handled correctly. Please follow the instructions contained in these operating instructions.

According to IEC 60335-1, the following applies:

- Persons (including children) whose physical, sensory or mental capabilities, or lack of experience and knowledge, prevents them from using the appliance safely may not use this appliance without supervision or instruction by a person responsible for their safety.

Measures to be taken prior to initial start-up

- The appliance may only be installed and connected to the mains in accordance with the separate installation instructions. Have the necessary work carried out by a licensed fitter/electrician.
- Dispose of the packaging material according to local regulations.
- Make the user settings you require.

Proper Use

- The appliance is designed for preparing food in the household. We accept no liability for any damages resulting from the appliance being used for unintended purposes or handled incorrectly.
- The appliance must not be used to heat rooms.
- Repairs, modifications or manipulations to or inside this appliance, especially to live parts, may only be carried out by the manufacturer, its customer service, or a similarly qualified person. Incorrect repairs may result in severe accidents, damage to the appliance and your furnishings, and malfunctions. If the appliance is malfunctioning or you would like to place a repair order, please follow the instructions in the 'Repair Service' chapter. Please consult our customer service if necessary.
- Keep the operating instructions in a safe place for later reference. If you sell the appliance or give it to a third party, please pass on the operating instructions and the installation instructions. In this way, the new owner can familiarize himself/herself with the correct use of the appliance and the relevant instructions.

When there are children in the household

- Packaging components (e. g. films, styrofoam) can be dangerous to children.
Danger of suffocation! Keep packaging components away from children.
- The appliance is meant to be used by adults who are familiar with the contents of these operating instructions. Children are often unable to recognize dangers arising from handling electric appliances. Therefore, make sure children are properly supervised, and do not let them play with the appliance.
- You can install a child protector for a stove to protect toddlers. For more information, contact the Swiss Council for Accident Prevention (Beratungsstelle für Unfallverhütung - BfU) in Bern.
- Be sure to use the child safety function.

When using the appliance

- Unpleasant odours can arise during the first few hours that the appliance is used. This is a normal occurrence for new appliances. Make sure the room is sufficiently ventilated.
- Heat up the appliance for a few minutes to 260° C.
- If the appliance is visibly damaged, do not put it into operation and contact our customer service.
- If you discover a malfunction or cracks in the surface caused by extreme mechanical impact, disconnect the appliance from the mains immediately.
- If the supply cable of the appliance is damaged, it must be replaced by the customer service.
- If electronic components fail, you may not be able to switch the appliance off. Unscrew the fuses or switch off the automatic circuit breaker.
- Connection cables of other electrical appliances must not touch the hot grilling surface. This could damage the electrical insulation.

Warning, danger of burns and fire!

- Do not leave the appliance unattended during operation.
- Keep objects made of metal or containing metal components, such as cutlery, aluminium foil, and wrapping paper away from the surface.
- The heated surface remains hot for some time after you have switched the appliance off and cools down to room temperature slowly. Take special care before carrying out any activities such as cleaning.
- If there is smoke or a fire during operation, switch off the fuse/circuit breaker in your household fuse box.
- Overheated fats and oils are highly flammable! Never try to extinguish burning fat or oil with water. Risk of explosion! Smother a fire with damp cloths and keep doors and windows closed.
- Keep pets away from the appliance.

How to prevent damage to the appliance



The surface is not sensitive to heat (up to 300 °C) and temperature fluctuations, and, to some extent, scratch and impact resistant. Nevertheless, observe the following instructions to avoid damage.

- Switch the appliance off in the case of overtemperature (error display **Er 2**) and let it cool down completely.
- Do not step on the appliance.
- Sudden impact, e. g. from a falling salt shaker, can damage the surface. Do not keep such objects above the appliance.
- Do not place hot cookware on the frame.
- Use the two turners to turn food. It is possible to use a knife to cut on the grilling surface, but this is not recommended, as it is likely to scratch the surface. Do not use ceramic knives to cut on the grilling surface.
- Never hit the grilling surface with the turner or the tip of the knife, as this could nick the grilling surface.
- Intensive and prolonged use of the appliance may require additional ventilation, e.g. an open window, or effective ventilation, e.g. operation of the mechanical ventilation device at a higher setting.
- Do not use the appliance as a storage place. In particular, do not put any flammable material, cardboard or plastic packaging on it.
- Objects made of tin, zinc or aluminium (including aluminium foil or an empty espresso maker) can melt on the hot grill zones and cause damage.
- Clean the appliance thoroughly after use to prevent any food remaining on the surface from encrusting.
- Use a damp cloth for cleaning. Never spray the appliance with water. Never use a steam cleaner. Water seeping into the appliance can cause damage!
- The hard chromium plated grilling surface will show signs of wear over time. This, however, does not affect the appliance's function or quality.
- Only original fittings may be used in order to ensure safe operation of this hob.




Your Appliance

Description of the appliance


- Electronic 14-step temperature control
- Automatic safety shut-off
- Child safety function
- Signal tone

Components

- Grilling surface with two grill zones that can be heated separately, total surface of 417 x 284 mm
- Cooking cover, diameter 250 mm
- 2 turners

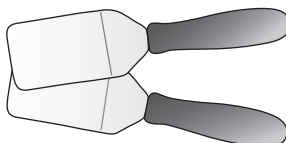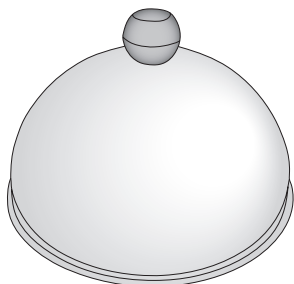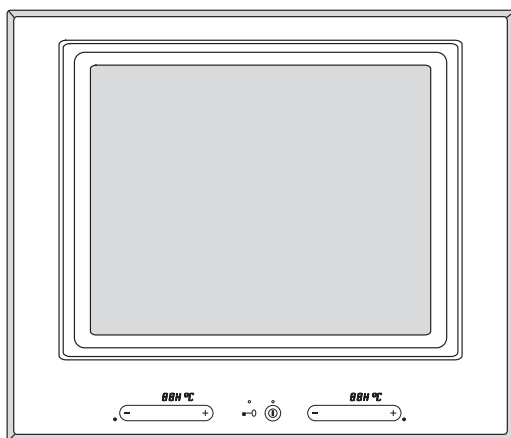


Operating and display elements

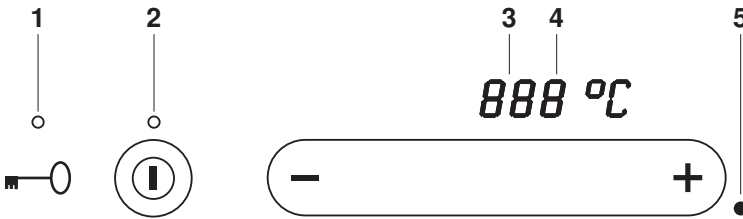

Buttons



 Appliance ON / OFF



Slider for setting the cooking temperature

Displays

- 1 Child safety function active
- 2 "On" indicator
- 3 3-digit temperature display
- 4 Hot surface indicator **H**
- 5 Heating-up indicator



User Settings

Child safety function

The child safety function is meant to prevent the appliance being switched on unintentionally.

Activating the child safety function



The appliance must not be in operation.

- ▶ Press the  button and the "-" position of the left slider and hold them for 3 seconds.
 - The  indicator is illuminated.

It is not possible to switch the appliance on when the child safety function is activated.

Switching off the child safety function

The appliance must not be in operation.


- ▶ Press the  button and the "-" position of the left slider and hold them for 3 seconds.
 - The  indicator goes off.

Signal tone

When you operate a button or slider, a signal tone sounds, confirming your entry (factory setting). You can switch the signal tone on and off.

Signal tone ON/OFF

The appliance must not be in operation.

- ▶ Press the  button and the "-" position of the right-hand slider and hold them for 3 seconds.
 - You will hear a signal tone for confirmation.





When you switch the appliance off, the last setting is preserved.

You cannot switch the signal tone on or off as long as the child safety function is activated.

Operation


When the appliance is switched off, all indicators are unlit, except the hot surface indicator **H** if the grill zone is still hot.

Switching the grill zone on


- ▶ Press and hold button  about 1 second.
 - The "On" indicator is illuminated.
 - Both displays flash **000**.
- ▶ Set the cooking temperature you require by moving your finger along the slider  within 10 seconds.

If you do not touch the slider within 10 seconds, the appliance switches itself off for safety reasons.


Setting the cooking temperature

- ▶ Move your finger from left to right along the slider .
 - The cooking temperature is raised.

or

- ▶ Move your finger from right to left along the slider .
 - The cooking temperature is lowered.


Switching off the grill zone

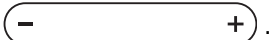- ▶ Move your finger all the way to the left along the slider .

If nothing else is entered, the appliance switches itself off after another 10 seconds.

Switching off the appliance

You can switch the appliance off at any time.

- ▶ Press and hold button  about 1 second.
 - The "On" indicator goes off.

Safety Functions

Automatic safety shut-off

The appliance has a time monitoring feature for the grill zones. This automatically switches the grill zone off after two hours.



You can switch the grill zone back on in the usual way.

Overtemperature protection

Control panel

The control panel is equipped with an overtemperature sensor. When the sensor is triggered, the grill zones are switched off.

- The display shows a flashing **Er 2**.

The grill zones cannot be used again until the control panel has cooled down.

- Once the controls have cooled down, you can stop the flashing **Er 2** display by pressing any button. After this, you can switch the grill zones back on.

Grilling surface

The grilling surface is equipped with an overtemperature sensor. When this sensor is triggered, the whole appliance, including the controls, is switched off.

Once the appliance has cooled down, you can switch the grill zones back on.

Care and Maintenance

Cleaning the grilling surface



To avoid burns, be careful while cleaning the appliance if it is hot. During and after cleaning, make sure that no grill zone has been switched on unintentionally.


Remove stains as quickly as possible. Dried or encrusted dirt is more difficult to remove.

- ▶ To clean the appliance, only use the turners, a soft and, if possible, heat-resistant cloth or a sponge, water and an appropriate cleaning or care product. Observe the information supplied by the manufacturer of the cleaning product when doing so.



Never use abrasive cleaning agents, scouring sponges that could scratch the surface, metal wool, etc. Cleaning agents containing chlorine must not be used. Such products will damage the surface.

Improper handling during cleaning can damage the surface.

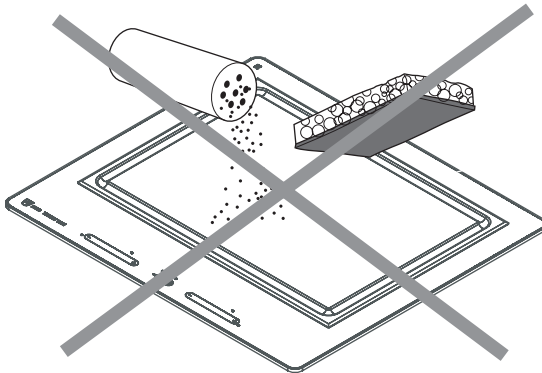

Cleaning the appliance while it is hot

- ▶ Place a few ice cubes or cold water on the hot grilling surface.
 - Warning: hot steam rises from the appliance when you do this!
- ▶ Remove larger accumulations of dirt from the grilling surface using the turner.
- ▶ Then clean the grilling surface with water and washing-up liquid, rinse with clear water and then wipe dry.

Cleaning the appliance when it is cold

- ▶ Apply boiling water mixed with washing-up liquid to the grilling surface. Remove larger accumulations of dirt from the grilling surface using the turner.
- ▶ Then clean the grilling surface with water and washing-up liquid, rinse with clear water and then wipe dry.
- ▶ Residue from egg white should be removed with vinegar or lemon when the appliance is cold.

Cleaning the glass ceramic frame

- ▶ Do not start cleaning until the hot surface indicator goes off. Exception: Immediately remove any sugar and melted plastic with a glass scraper while the surface is still hot.
- ▶ Encrusted dirt and food which has boiled over should be removed with a glass scraper.
- ▶ Heavy dirt and spots which glitter like mother of pearl can be removed with a cleaning agent for stainless steel.
- ▶ For the protection and maintenance of the glass ceramic frame, we recommend using protective care products. Observe the information supplied by the manufacturer of the cleaning product when doing so.

Solving Problems Yourself

What to do when ...

... the appliance is not working and all displays are unlit

Possible cause	Remedy
■ The fuse or automatic circuit breaker in your building's/household's fuse box is defective.	▶ Change the fuse. ▶ Switch the automatic circuit breaker back on.
■ The fuse or automatic circuit breaker trips several times.	▶ Call our service department.
■ Power supply interrupted.	▶ Check power supply.
■ The automatic safety shut-off has switched the appliance off after two hours of operation during which no changes to the settings were made.	▶ You can switch the appliance back on in the usual way.
■ The overtemperature protection was triggered.	▶ Put the appliance into operation and watch it. ▶ If the same happens again, call the service department.

... there is a continuous signal tone and the appliance switches off

Possible cause	Remedy
■ You have placed an object (pan, bowl etc.) on the control panel.	▶ Remove the object and operate the appliance as usual.
■ There is spilt food on the control panel.	▶ Remove the spilt food and operate the appliance as usual.

... the displays show "-"

Possible cause	Remedy
■ The child safety function is active	▶ Observe the instructions on how to operate the appliance with the child safety function. ▶ Switch off the child safety function.

... the display shows *U0*

Possible cause	Remedy
■ Power supply interrupted	▶ Confirm the display by pressing any button.

... *UH* is flashing on both displays

Possible cause	Remedy
■ The automatic safety shut-off was triggered.	▶ Switch the appliance back on if required.

... the display shows *Er 2*

Possible cause	Remedy
■ The overtemperature control was triggered.	▶ Let the appliance cool down, then operate it as usual.

... the display shows *Er* and a figure in succession

Possible cause	Remedy
■ Various messages can result in an "Er" message.	▶ Make a note of the error number. ▶ Call our service department.

... unpleasant odours arise when you are operating a grill zone for the first time

Possible cause	Remedy
■ This is a normal occurrence for new appliances.	▶ Make sure the room is well ventilated. ▶ The odours subside after the first operating hours.

Technical Data

Electrical connections

Voltage: 230 V~ 50 Hz
Fusing: 16 A

Connected load

GK16TIWF 3000 W

Dimensions (H × W × D)

86 × 547 × 477 mm

Disposal

Packaging

- The packaging material (cardboard, PE plastic film and EPS styrofoam) is labelled and should be recycled, when possible, and disposed of in an environmentally friendly manner.


Deinstallation

- Disconnect the appliance from the mains. If the appliance has been permanently attached, this must be done by a licensed electrician!

Safety

- To avoid accidents due to improper use, especially by children while playing, you should make sure the appliance cannot be used.
- Unplug it from the mains or have an electrician remove the connection. Then cut off the power cable at the appliance.

Disposal

- The old appliance is not worthless waste. By disposing of it in the proper way, you can make sure the raw materials are recycled.
- There is a  symbol on the rating plate of the appliance. It indicates that you must not dispose of it as part of normal household waste.
- You must dispose of it in accordance with local regulations on waste disposal. Please consult the responsible authorities within your local government, the local household waste recycling centre or the dealer from whom you purchased the appliance for further information on handling, reusing and recycling the product.

A		O	
Appliance		Operating elements	9
Switching off.....	24	Operation.....	11
Switching on.....	24	Overtemperature	12
Automatic safety shut-off.....	12		
B		P	
Buttons.....	9	Packaging.....	19
		Power failure	15
C		Q	
Care.....	13	Quick guide.....	24
Child safety function.....	10		
Cleaning	13	R	
Components	8	Repair service.....	23
D		S	
Deinstallation	19	Safety.....	19
Description of the appliance	8	Safety functions	12
Display elements	9	Safety instructions	
Displays	9	Before using for the first time..	4
Disposal.....	19	Proper use	5
		When there are children in the	
F		household	5
Fault.....	15	When using the appliance	6
		Signal tone	10
G		Start of operation	4
Grill zone		Switching off.....	11, 24
Switching off.....	11	Switching on.....	11
Switching on.....	11	Symbols	2
H		T	
Hot surface indicator.....	9	Technical data	18
M		U	
Maintenance	13	User settings.....	10

Notes

Repair Service



The chapter 'Solving problems yourself' helps you to deal with small malfunctions yourself.

You can dispense with calling a service technician, avoiding the resulting costs.

If you do contact us because of a malfunction or to place an order, always give us the serial number (SN) and designation of your appliance. Enter these specifications here and also on the service label included with the appliance. Attach this where it is easily accessible, or in your telephone notebook.

SN

Appliance

You will find these specifications on the certificate of guarantee, the original invoice and the rating plate of your appliance.

- ▶ Open the lower built-in unit.
 - The rating plate can be found behind the front panel.


Quick Guide

Please read the safety instructions included in these operating instructions first!

Switching on the appliance

- ▶ Press and hold button  about 1 second.


Setting the cooking temperature(s)

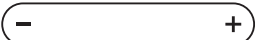- ▶ Use the  slider to set the cooking temperature within 10 seconds.

Switching off the grill zone

- ▶ Move your finger to the far left along the slider .

Switching off the appliance

- ▶ Briefly press the  button.

V-ZUG Ltd

Industriestrasse 66, CH-6301 Zug
vzug@vzug.ch, www.vzug.ch

J007.353-0