




Range hood

DW-SM9

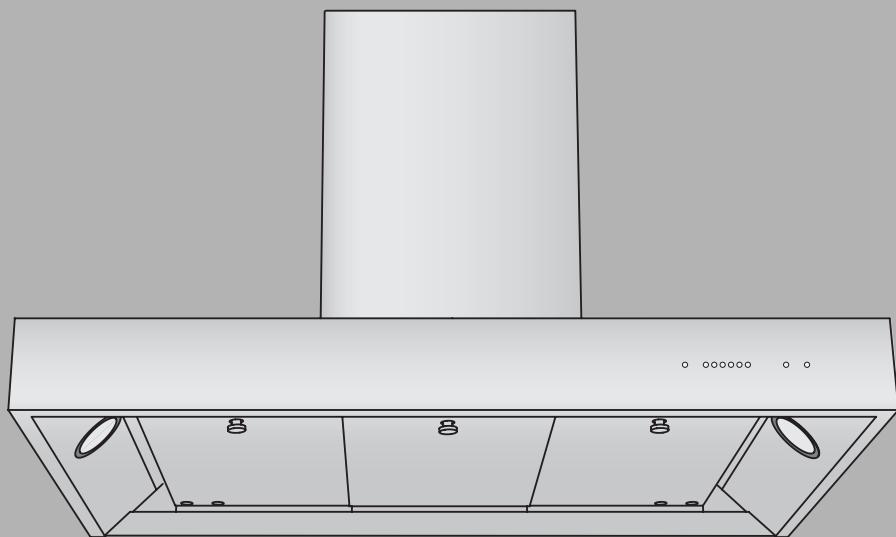

Operating instructions

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarize yourself with the appliance and get the best use out of it.

Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliance is reserved.

Symbols used



Denotes important safety precautions. Failure to observe said precautions can result in injury or damage to the appliance or fittings!

- ▶ Indicates step-by-step instructions.
 - Describes how the appliance reacts to the steps taken.
- Indicates a list.



Denotes useful tips for the user.

Validity

The model number corresponds to the first three digits on the identification plate. These operating instructions apply to the model:

Type	Model no.
DW-SM9	330

Variations depending on the model are noted in the text.

Contents

Safety precautions	5
Before using for the first time	5
Correct use	6
Children in the home	6
Note on use	7
Appliance description	9
Extraction mode	9
Recirculation mode	9
Fitted with	10
Construction	11
Operating and display elements	12
Use	13
Operation	13
Intensive level	14
Illumination	14
Saturation indicator	15
Care and maintenance	16
Cleaning the housing	16
Cleaning the grease filters	17
Changing the standard activated charcoal filter	19
Cleaning and changing the long-life activated charcoal filter	20
Changing the halogen light	22
Trouble-shooting	23
What to do if	23

Accessories and spare parts	24
Technical data	25
Disposal	26
Notes	27
Index	29
Repair service	31
Quick instructions	32

Safety precautions



The appliance corresponds to recognised technology standards and the relevant safety regulations. Proper use of the appliance is however essential to avoid damage and accidents. Please therefore follow the precautions given in these operating instructions.

In accordance with the requirements of IEC 60335-1:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or unless they have been given instruction concerning the use of the appliance by a person responsible for their safety.

Before using for the first time

- The appliance must be installed and connected up to the electricity supply according to the separate installation instructions. The necessary work should be carried out by a qualified fitter or electrician.
- Dispose of the packaging material in accordance with local regulations.

Correct use

- The appliance is designed for use in the home for extracting cooking fumes and smells from above the cooking surface.
- Any repairs, modifications or manipulations to the appliance, especially any electrically live parts, should only be carried out by the manufacturer, its Customer Services or similarly qualified persons. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance. If the appliance is not working properly or in case of a repair order, follow the instructions given in the 'Repair service' section. Please contact our Customer Services if necessary.
- Use original spare parts only.
- Retain these operating instructions for future reference. If you sell or pass the appliance on to a third party, please ensure these operating instructions, together with the installation instructions, accompany the appliance. In this way, the new owner can inform themselves about how to use the appliance correctly and read the pertinent safety precautions.

Children in the home

- Packaging material e.g. plastic and polystyrene can be dangerous for children. Danger of suffocation! Please keep packaging material away from children.
- The appliance is designed for use by adults who are familiar with these operating instructions. Children are often unable to recognise the danger of electrical appliances. Ensure proper supervision and do not allow children to play with the appliance – there is a danger that children can hurt themselves.

Note on use

- If the appliance is visibly damaged, do not use it. Contact our Customer Services.
- If the appliance is not operating properly, disconnect it from the electricity supply immediately.
- Caution: Accessible parts may become hot when used with cooking appliances.
- Do not flambé food underneath the hood as the grease filters if laden with grease could catch fire.
- If frying on the cooking surface, do not leave the frying appliance unattended. The cooking oil in the frying appliance could overheat and catch fire. Constantly monitor the temperature of the cooking oil, keeping it below the temperature at which it can catch fire. Change the cooking oil regularly – dirty oil catches fire more easily than clean oil.
- Clean the filters regularly. Failure to do so can increase the fire hazard due to the build-up of grease in the grease filter.
- Do not operate the individual cooking zones of the cooking surface without a pan on them or with an empty pan on them so as to avoid damaging the appliance or the kitchen fittings through a build-up of heat. Avoid open fires with oil, gas, wood and coal fired cookers.
- Ensure there is adequate ventilation when the extraction fan is on so as to avoid creating a disturbing underpressure in the kitchen and to achieve optimal air extraction.
- Avoid a cross-current of air, which could blow the cooking vapours over the cooking area.

... Safety precautions

- If another appliance – fuelled by gas or other fuels – is being used at the same time, ensure that there is a sufficient supply of fresh air. This does not apply to air recirculation units.
- With the simultaneous operation of firing (e.g. wood, gas, oil or coal-fired heating systems), safe operation is only possible providing a room negative pressure of 4 Pa (0.04 mbar) is not exceeded at the location of the appliance. Risk of toxic fumes! An adequate flow of fresh air must be guaranteed, e.g. via non-closable openings in doors and windows and combined with ventilation wall bricks for incoming and exhaust air or by other technical means.
- When carrying out maintenance work on the appliance, including replacing the light bulb, cut off the electricity supply to the appliance (remove the screw fuse from the holder or switch the circuit breaker off, or disconnect from the mains supply).
- When cleaning the appliance make sure no water gets inside the appliance. Use a moderately damp cloth. Do not spray the inside or outside of the appliance with water. Do not use a steam cleaner. If water gets inside the appliance, it can cause damage.

Appliance description

The appliance is designed for use in the home for extracting cooking fumes and smells from the cooking area. The appliance is based on a completely new functional concept whereby more cooking fumes can be removed with significantly less air being extracted. The grease particles in the extracted air are trapped very efficiently in the combi filters and metal grease filters.

The appliance can be used in extraction or recirculation mode.

Extraction mode

The cooking fumes and smells above the cooking area are removed by an extractor fan. The extracted air is filtered through the combi filters and metal grease filters and passed through a pipe with an integrated non-return valve and then through an air duct to the outside.



When the appliance is in use, ensure that there is a sufficient supply of fresh air to replace the air that is being extracted.

Recirculation mode

The cooking fumes and smells above the cooking area after being filtered through the combi filters and metal grease filters are passed through an activated charcoal filter. The filtered air is then circulated back into the room through the side openings.



If activated charcoal filters are not supplied with the appliance, these should be ordered and installed before using the appliance. Furthermore, the saturation indicator for the activated charcoal filters must also be activated.


Fitted with

- 1 extraction fan
- Illumination
- 2 metal grease filters
- 3 combi filters
- 1 activated charcoal filter

The extraction fan has 4 power levels.


- 1 = Low, 2 = Medium, 3 = High and Intensive level.
- Power levels 1–3 can be used for longer periods of operation.
- The intensive level is for shorter bursts of intensive extraction of the cooking fumes and smells, e.g. when searing meat. The intensive level runs for a maximum of 5 minutes at a time.

Construction

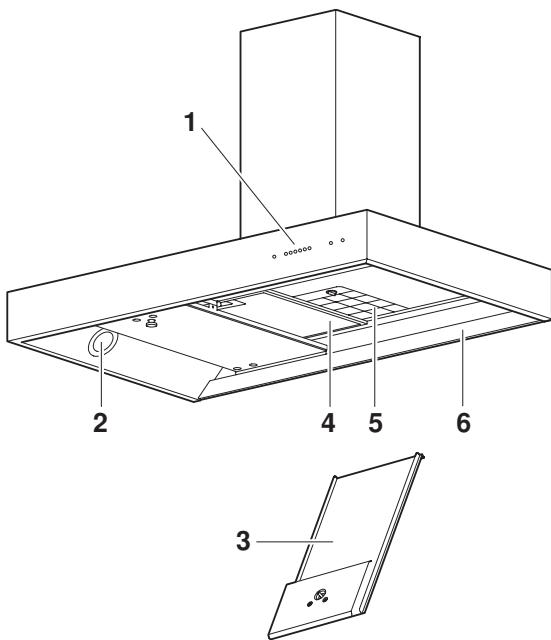

- 1** Operating elements
- 2** Halogen light
- 3** Combi filter
- 4** Metal grease filter
- 5** Activated charcoal filter
- 6** Profile slot

Operating and display elements

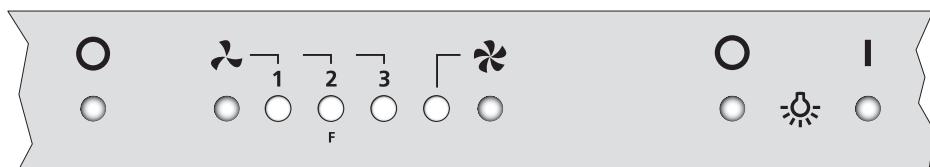

Buttons ●

Operation

- Switch off / Reset saturation indicator
- ↗ Switch on / Power level
- ※ Intensive

Illumination ☺

- Off
- | On

Indicator lights ○

- 1 Power level 1
- 2 / F Power level 2 / Saturation indicator for metal grease filters, combi filters and long-life activated charcoal filter
- 3 Power level 3 / Saturation indicator for standard activated charcoal filter
- Intensive level



Depending on the model and features, the specification of the appliance may differ from the standard specification described herein.

Use

Operation

Switching the appliance on / Selecting the power level

- Pressing the  button switches the appliance on at power level 1.
 - The indicator light 1 comes on.
- To select power levels 2 or 3, repeatedly press the  button.
 - The indicator light shows which power level is currently being used.



We recommend switching the appliance on at power level 1 some 5 minutes before cooking. Use a low power level for normal cooking smells and a higher power level for very strong cooking fumes and smells.

Switching the appliance off

- Press the  button to switch the appliance off.



After you have finished cooking, allow the appliance to run for another 15 minutes so that the cooking fumes and smells can be extracted.

Intensive level

The intensive level can be selected irrespective of whether the appliance is switched on or off.

- ▶ Press the  button to switch the intensive level on for 5 minutes.
 - The indicator light lights up.
 - If a different power level had been running beforehand, then the appliance will automatically revert to this after the 5 minutes has elapsed.
 - If the appliance had been switched on beforehand, then the appliance will automatically switch off after the 5 minutes has elapsed.
- ▶ Press the  or  button to stop the intensive level before the 5 minutes is up.

Illumination

- ▶ Press the  button to switch the illumination on.
- ▶ Press the  button to switch the illumination off.



The illumination can be used on its own.

Saturation indicator

Saturation indicator for metal grease filters, combi filters and the long-life activated charcoal filter

The indicator light **2 / F** flashes after 40 operating hours. The saturation level is reached, the grease filters have to be cleaned.

Saturation indicator for the standard-activated charcoal filter

The indicator light **3** flashes after 160 operating hours. The saturation level is reached, the standard-activated charcoal filter needs to be replaced.



The saturation indicator is deactivated at the factory. If the appliance is being used as a recirculation model, the saturation indicator must

To activate the saturation indicator

- ▶ Depress the and buttons at the same time for 3 seconds.
 - The indicator light **2 / F** flashes.
 - After 3 seconds the indicator light **3** flashes. The saturation indicator is activated.

To deactivate the saturation indicator

- ▶ Depress the and buttons at the same time again.
 - After 3 seconds the indicator light **3** goes out. The saturation indicator is deactivated.

Care and maintenance

Cleaning the housing



Take care that no water gets into the housing of the appliance! If water gets into the housing, it can cause damage.



Do not use abrasive cleaners, scouring pads, steel wool etc. to clean the appliance as they can damage the surface.

Cleaning the outside / inside

- ▶ Clean the outside using a slightly damp cloth – and detergent if necessary
 - and wipe dry.

Grease and condensate water can build up around the combi filters on the inside.

- ▶ Clean using a slightly damp cloth – and detergent if necessary – and wipe dry.

Cleaning the grease filters

The grease filters should be cleaned at least once a month with normal use or whenever the indicator light 2 / F flashes. If properly cared for, the grease filters should provide unlimited years of service.

- ▶ The grease filters can be cleaned in a dishwasher.
- ▶ Select an «intensive» – or «heavy soil» – wash programme with a warm pre-wash.




Cleaning may cause the grease filters to become discoloured. However, this will not affect the functioning of the filter in any way.

If you do not have a dishwasher:

- ▶ Clean the grease filters in the sink with hot water and detergent.
- ▶ Then soak the filters in hot water in the sink for about 2 hours and finally clean with a washing-up brush.

Removing the metal grease filters and the combi filters

- Loosen the fastening screw **1** in the combi filter in the middle.
- With the other hand, fold the combi filter downwards.
- Remove the combi filter from out of the profile slot.
- Remove the left and right combi filters in the same way.
- On the metal grease filter push the grip **2** back.
- Carefully pull the metal grease filter down and out of the holder.

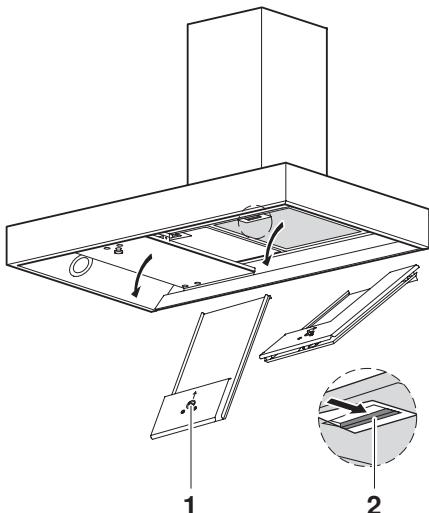

Take care not to damage the grease filters.

Replacing the metal grease filters and the combi filters

- Replace the metal grease filters.
- Put the right combi filter in the profile slot at the back and fold upwards. Tighten the fastening screw **1** slightly.
- Install the left and the middle combi filters in the same way.
- Depress the **O** button for at least 3 seconds.
 - An acoustic signal is given off.
 - The indicator light **2 / F** goes out.

Changing the standard activated charcoal filter



Remove screw fuse or switch off circuit breaker.



Standard activated charcoal filters are only used in the recirculation mode.

Standard activated charcoal filters become less effective with use. With normal use, they have to be replaced at least every 4 months or whenever the indicator light 3 flashes. They cannot be washed or regenerated.



The standard activated charcoal filter can be disposed of in the household waste.

- ▶ Remove and clean the grease filters.
- ▶ Turn both knobs **A** 90 ° and remove the standard activated charcoal filter from the bottom.
- ▶ Insert the new standard activated charcoal filter and secure at the front with both knobs **A**.
- ▶ Replace the grease filters.
- ▶ Replace the fuse, switch the circuit breaker back on again and plug the appliance back into the mains supply.
- ▶ Depress the **O** button for at least 3 seconds.
 - An acoustic signal is given off.
 - The indicator light 3 goes out.

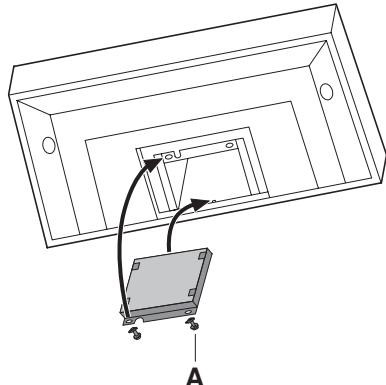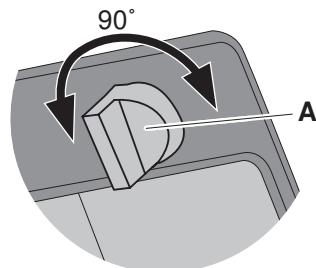

Cleaning and changing the long-life activated charcoal filter



Remove screw fuse or switch off circuit breaker.

Long-life activated charcoal filters are only used in the recirculation mode.


Unlike the standard activated charcoal filter, the long-life activated charcoal filter can be cleaned and reactivated. The long-life activated charcoal filter should be changed ever month with normal use or whenever the indicator light 2 / F flashes. The filter can be cleaned in a dishwasher at 65 °C (select an «intensive» or «heavy soil» wash programme). Wash the filter separately so that it does not become clogged with food particles. If it is not possible to wash the filter in a dishwasher, soak the filter in 60 °C water and detergent for one hour. Then rinse well. To reactivate the activated charcoal, dry the filter without the frame in the oven.

- ▶ Select top and bottom heat or hot air and set the temperature to 100 °C. Place the filter on a wire shelf and allow to dry for 60 minutes.



The long-life activated charcoal filter needs to be replaced after about 3 years as its ability to absorb odours declines. The spent long-life activated charcoal filter can be disposed of in the household waste.

- ▶ Remove and clean the metal grease filters.
- ▶ Turn both knobs 90 ° and remove the long-life activated charcoal filter from the bottom.
- ▶ Remove, clean, reactivate and replace the filter **1** into the frame **2**. Take care not to damage the filter. If necessary, replace the used long-life activated charcoal filter by a new one.
- ▶ Replace the long-life activated charcoal filter and engage it at the back and secure at the front with the knobs.
- ▶ Replace the metal grease filters.
- ▶ Replace the fuse, switch the circuit breaker back on again.
- ▶ Depress the **O** button for at least 3 seconds.
 - An acoustic signal is given off.
 - The indicator light **2 / F** goes out.

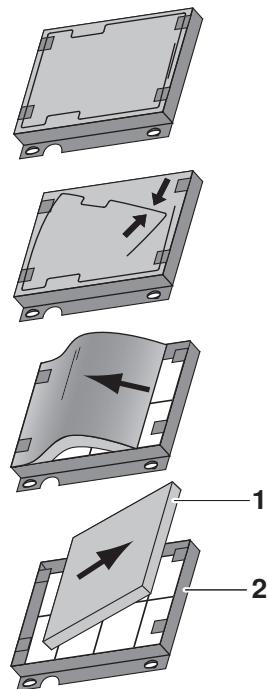


Changing the halogen light



Remove screw fuse or switch off circuit breaker.

Halogen lights get hot during operation! Allow to cool down first.

- ▶ Using a small screw driver, carefully remove the ring.
- ▶ Replace the defective halogen light with a bulb of the same type (max. 20 watts).
- ▶  Avoid touching the new halogen light with bare hands. Use a soft, dry and grease-free cloth.
- ▶ Clean the ring and the glass.
- ▶ Fit the ring and the glass back into the openings.
- ▶ Put screw fuse back in or switch circuit breaker on again.

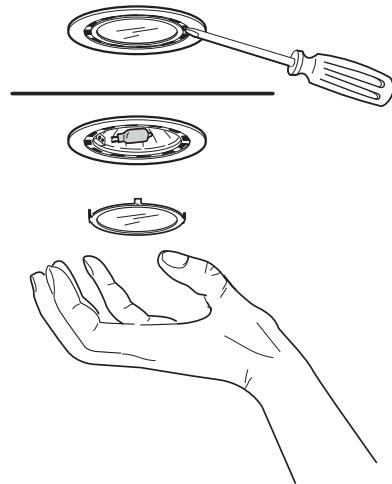

Trouble-shooting

What to do if ...

... the illumination is not working

Possible cause	Solution
■ Fuse or circuit breaker for electrical installations in the home is faulty.	► Change the fuse. ► Reset the circuit breaker.
■ Interruption in the power supply.	► Check the power supply.
■ The halogen light is faulty.	► Change the halogen light.


... the appliance is not extracting the cooking fumes and smells satisfactorily

Possible cause	Solutions
■ The grease filters are dirty.	► Clean the grease filters.
■ The activated charcoal filter (in recirculation models) is spent.	► Change the standard activated charcoal filter. ► Clean or change the long-life activated charcoal filter.


Accessories and spare parts

Please give model number and exact description when ordering parts.


Halogen light

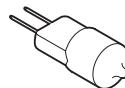


Metal grease filter

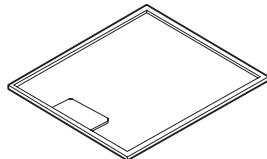

Standard activated charcoal filter

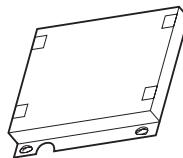

Long-life activated charcoal filter

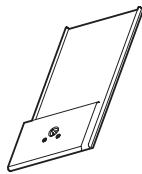

Middle

Combi filter

Left

Right



The halogen light is also available from specialist retailers.

Technical data

Electrical connection

- ▶ See identification plate
- ▶ Remove metal grease filter.
 - The identification plate is located on the inside of the appliance.

Disposal

Packaging

- All packaging materials (cardboard, plastic film (PE) and polystyrene (EPS)) are marked and should, if possible, be collected for recycling and disposed of in an environmentally friendly way.

Disconnection

- Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician!

Safety

- Disable the appliance to prevent accidents caused by improper use, especially through children playing.
- Pull the plug out of the mains socket or have the appliance disconnected from the mains by a qualified electrician. Then cut off the mains cable.

Disposal

- The old appliance should not be discarded as worthless rubbish. If disposed of correctly, the raw materials can be recovered for recycling.
- The  symbol on the identification plate warns that the appliance may not be disposed of in normal household waste.
- The appliance must be disposed of in accordance with local regulations on waste disposal. For more information on the handling, disposal and recycling of the product, please contact the local authorities, the local recycling facilities for household waste or the retailer from whom you purchased the appliance.

Notes

Index

A

- Accessories 24
- Activated charcoal filter 11
 - Long-life 20
 - Standard 15, 19
- Appliance description 9

C

- Care 16
- Children in the home 6
- Cleaning 16
 - Grease filters 17
- Combi filter 11
 - Saturation indicator 15
- Construction 11

D

- Disconnection 26
- Display element 12
- Disposal 26

E

- Electrical connection 25
- Extraction mode 9

F

- Filter 11
 - Activated charcoal filter 19
 - Combi filter 17
 - Metal grease filter 17
- Fittings 10

H

- Halogen light 11, 22

I

- Identification plate 25
- Illumination 14
- Intensive level 14

L

- Long-life activated charcoal filter 20
 - Cleaning and changing 20
 - Saturation indicator 15

M

- Maintenance 16
- Malfunction 23
- Metal grease filter 11
 - Saturation indicator 15
- Model no. 2

O

- Operating element 12
- Operating elements 11

P

- Packaging 26
- Profile slot 11

Q

- Quick instructions 32

R

- Recirculation mode 9
- Repair service 31

S

Safety	26
Safety precautions	
Before using for the first time .	5
Children in the home	6
Correct use.....	6
Note on use.....	7
Saturation indicator	15
Selecting the power level.....	13
Spare parts	24
Standard activated charcoal filter.....	19
Saturation indicator.....	15
Switching off	13
Switching on	13
Symbols.....	2

T

Technical data	25
Type	2
U	
Use.....	13
Using for the first time.....	5

Repair service



The 'Trouble-shooting' section will help you to carry out small repairs yourself, saving you the time and trouble of calling out a service engineer and the cost that goes along with it.

Whether you contact us about a malfunction or an order, please always state the serial number (FN) and the model type of your appliance. Enter these details below and also on the service sticker which comes with the appliance. Stick it in a conspicuous place or in your telephone or address book.

FN


Appliance

You will also find the same details on the certificate of guarantee, the original sales invoice and the identification plate of the appliance.

- Remove metal grease filter.
 - The identification plate is located on the inside of the appliance.

Quick instructions

Please first read the safety precautions in these operating instructions!

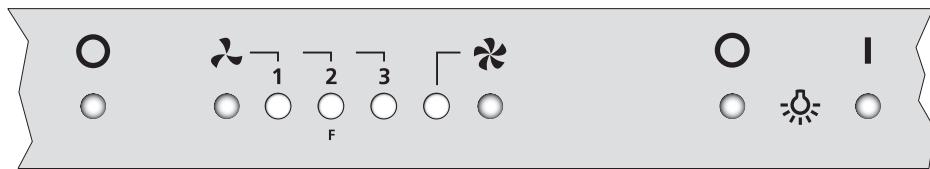

Operation

- Switch off / Reset saturation indicator
- ↗ Switch on / Power level
- ✿ Intensive

Illumination

- Off
- | On

V-ZUG Ltd

Industriestrasse 66, CH-6301 Zug
vzug@vzug.ch, www.vzug.com



J330.352-1