

Operating instructions

DWVHR9

Range hood

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarize yourself with the appliance and get the best use out of it.

Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliances is reserved.

Validity

The model number corresponds to the first alphanumeric on the identification plate. These operating instructions apply to:

Type	Product family	Size system
DWVHR9	62010	90
DWVHR9	62030	90

Variations depending on the model are noted in the text.

Contents

1	Safety precautions	4	11	Service & Support	23
1.1	Symbols used.....	4			
1.2	General safety precautions.....	4			
1.3	Appliance-specific safety precautions	4			
1.4	Instructions for use.....	5			
2	Appliance description	7			
2.1	Appliance description.....	7			
2.2	Extraction model.....	7			
2.3	Recirculation model.....	7			
2.4	Equipment.....	7			
2.5	Construction	8			
2.6	Operating and display elements.....	8			
2.7	Remote control.....	9			
3	Operating the appliance	9			
3.1	Operation using the operating and display elements	9			
3.2	Illumination.....	9			
3.3	Intensive level.....	10			
3.4	After-running time	10			
3.5	Wipe protection.....	10			
3.6	CleanAir function	10			
3.7	Saturation indicators	11			
3.8	Operation with remote control.....	11			
4	Care and maintenance	13			
4.1	Cleaning the housing.....	13			
4.2	Metal grease filters.....	13			
4.3	Activated charcoal filter display.....	15			
4.4	Cleaning the long-life activated charcoal filter.....	15			
5	Trouble-shooting	17			
5.1	What to do if	17			
6	Accessories and spare parts	18			
7	Technical data	18			
8	Disposal	19			
9	Index	20			
10	Notes	22			

1 Safety precautions

1.1 Symbols used



Denotes important safety precautions.

Failure to observe said precautions can result in injury or in damage to the appliance or fittings!



Information and precautions that should be observed.



Information on disposal



Information about the Operating Instructions

- ▶ Indicates step-by-step instructions.
 - Describes how the appliance reacts to the steps taken.
- Indicates a list.

1.2 General safety precautions



- Read the operating instructions before using the appliance for the first time!



- This appliance can be used by children aged 8 and above and by persons with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, provided they are supervised or have been instructed on the safe use of the appliance and have understood the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be undertaken by children without supervision.

- If an appliance is not equipped with a mains cable and a plug or other means for disconnecting from the mains with a contact opening on each pole complying with the conditions of overvoltage category III for full isolation, an isolating device must be incorporated into the permanently installed electrical installation in accordance with the installation regulations.
- If the mains cable of this appliance is damaged, it must be replaced by the manufacturer or its Customer Services or a similarly qualified person in order to avoid hazard.

1.3 Appliance-specific safety precautions

- The room must be adequately ventilated when operating the range hood at the same time as other appliances that burn gas or other fuels.
- Observe the official regulations for the exhaust-air layout.

- The extracted air must not be fed into a chimney which is used for exhausting fumes from appliances burning gas or other fuels.
- The minimum distance between the supporting surface for the cooking equipment on the hob and the lowest part of the range hood must be observed. If the range hood is installed above a gas appliance, this distance must not be less than 65 cm. If the installation instructions for the gas hob stipulate a larger distance, this must be observed.
- **WARNING:** Before replacing the light bulb, ensure the appliance is switched off and disconnected from the mains power supply to avoid possible electric shock.
- When replacing a light bulb, the maximum wattage rating of replaceable light bulbs must be visible.
- This appliance is intended for use in the home and similar settings such as: in staff kitchens in shops, offices and other commercial establishments; in agricultural establishments; by guests in hotels, motels and other accommodation establishments; in bed and breakfast establishments.
- Do not operate the appliance using an external time switch or a separate remote control system.
- Failure to follow the cleaning instructions may cause a fire hazard.
- Do not flambé food underneath the range hood.

1.4 Instructions for use

Before using for the first time

- The appliance must be installed and connected to the electricity supply in accordance with the separate installation instructions. Have a qualified fitter/electrician carry out the necessary work.
- Observe the official regulations for the exhaust-air layout.
- Dispose of the packaging material in accordance with local regulations.

Correct use

- The appliance is designed for use in the home for extracting cooking fumes and smells from above the cooking surface.
- Any repairs, modifications or manipulations to the appliance, especially any electrically live parts, may only be carried out by the manufacturer, its customer service department or similarly qualified persons. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance. If the appliance is not working properly or in case a repair is needed, follow the instructions given in the 'Service & Support' section. Contact our Customer Services if necessary.

1 Safety precautions

- Use original spare parts only.
- Retain these operating instructions for future reference.

Note on use

- If the appliance is visibly damaged, do not use it. Contact our Customer Services.
- If the appliance is not functioning properly, disconnect it from the power supply immediately.
- Ensure there is adequate ventilation when the extractor fan is on so as to avoid creating underpressure in the kitchen and to achieve optimal air extraction.
- Avoid a cross-current of air, which could blow the cooking vapours over the cooking area.
- If other appliances – fired by gas or other fuels – are being used at the same time, ensure that there is a sufficient supply of fresh air. This does not apply to air recirculation appliances.
- If other firing systems are being used at the same time (e.g. wood, gas, oil or coal fired heating appliances), safe operation is only possible providing a room negative pressure of 4 Pa (0.04 mbar) is not exceeded at the location of the appliance. Risk of toxic fumes! An adequate flow of fresh air must be guaranteed e.g. via non-closable openings in doors or windows and in combination with an air-intake/exhaust-air wall box or by other technical means.
- When cleaning the appliance make sure no water gets inside it. Use a moderately damp cloth only. Do not spray the inside or outside of the appliance with water. Do not use a steam cleaner. If water gets inside the appliance, it can cause damage.
- Accessible parts may become hot when used with cooking appliances.

Caution: Burns hazard!

- Do not leave the appliance unattended when deep-frying on the cooking surface. The cooking oil in the deep-frying appliance could overheat and catch fire. Constantly monitor the temperature of the cooking oil, keeping it below the temperature at which it can catch fire. Change the cooking oil regularly – dirty oil catches fire more easily than clean oil.

Caution: Risk to life!

- Packaging material, e.g. plastic film and polystyrene, can be dangerous for children and animals. Danger of suffocation! Keep packaging material away from children and animals.
- When carrying out maintenance work on the appliance, including replacing light bulbs, cut off the electricity supply to the appliance: remove the screw fuse from the holder or switch the circuit breaker off, or disconnect from the mains supply.

How to avoid damaging the appliance

- Observe the cleaning intervals. Failure to do so can increase the fire hazard due to the build-up of grease in the metal grease filters.

2 Appliance description

2.1 Appliance description

The appliance is designed for use in the home for extracting cooking fumes and smells from above the cooking surface.

The model can be used to extract or recirculate air.

2.2 Extraction model

A fan draws cooking fumes and smells from above the cooking area. The metal grease filters clean the extracted air, which is passed through a connecting pipe fitted with an integrated non-return valve and through the air duct to the outside.



When in use, ensure there is a sufficient supply of fresh air to replace the air that is being extracted.

2.3 Recirculation model

After being filtered through the metal grease filters, the cooking fumes and smells above the cooking area are passed through an activated charcoal filter. The filtered air is then circulated back into the room through the opening in the top of the hood.



If activated charcoal filters are not supplied with the appliance, these should be ordered and installed before using the appliance for the first time. Moisture is not filtered out of the air.

2.4 Equipment


- 1 extraction fan
- Illumination
- 2 metal grease filters
- 2 long-life activated charcoal filters (not included in scope of delivery)
- Remote control (not included in scope of delivery)

The extraction fan has 4 power levels.


- 1 = low, 2 = medium, 3 = high, and intensive level.
- Power levels 1–3 are suitable for continuous operation.
- The intensive level is used for shorter bursts of intensive extraction of cooking fumes and smells, e.g. when searing meat. The intensive level runs for a maximum of six minutes at a time.

2.5 Construction

- 1 Operating elements
- 2 Metal grease filter (large)
- 3 Glass panel, hinged
- 4 Illumination
- 5 Return air in recirculation model
- 6 Long-life activated charcoal filter
- 7 Metal grease filter (small)

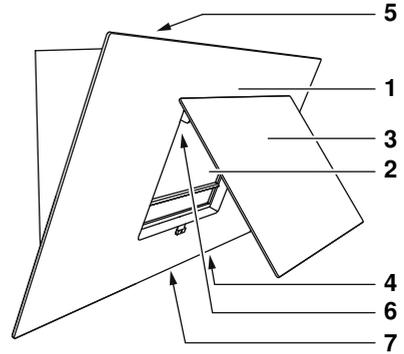

2.6 Operating and display elements

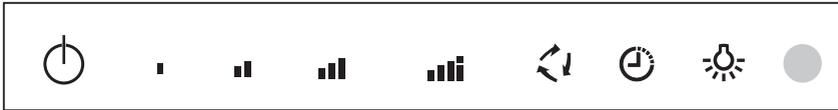

-  Switch off / activate or deactivate button lock
-  Power level 1 / activate or deactivate remote control
-  Power level 2
-  Power level 3
-  Intensive level
-  CleanAir function (air extraction every hour for 10 minutes)
-  After-running time, delays the switching-off of the appliance by 15 minutes
-  Illumination ON/OFF / dimmer function (hold depressed for two seconds)
-  Infrared port for the remote control
-  Flashing: Clean grease filters
-  Flashing: Clean long-life activated charcoal filters (recirculation model)

 Depending on the model and features, the specification of the appliance may differ from the standard specification described herein.

2.7 Remote control


This appliance can be operated remotely. The remote control is powered by a 3V battery type CR2032 (not included in scope of delivery).



Do not place the remote control near any heat sources. The batteries must be disposed of properly in accordance with the regulatory requirements.

Operating and display elements

-  Switch illumination on/off, change light intensity
-  Switch appliance on/off
-  Stepwise decrease power level
-  Stepwise increase power level
-  Switch intensive level on / off before time
-  Switch after-running time on / off before time

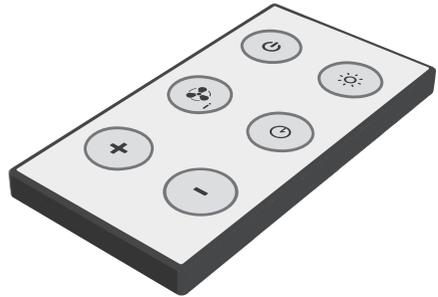

3 Operating the appliance

3.1 Operation using the operating and display elements

Switching the appliance on

- ▶ Touching the  or  button switches the appliance on at power level 1, 2, 3 or intensive.
 - The corresponding button illuminates to indicate which power level is being used.



We recommend switching the appliance on at power level 1 some five minutes before starting to cook. Use a low power level for normal cooking smells and a higher power level for very strong cooking fumes and smells.

Switching the appliance off

- ▶ Touching the  button switches the appliance off.



After you have finished cooking, allow the appliance to run for another 15 minutes [after-running time] so that the cooking fumes and smells can be extracted.

3.2 Illumination

- ▶ Touch the  button to switch the illumination on.
- ▶ Touch the  button again to switch the illumination off.
- ▶ Depress the  button for two seconds.
 - The light is dimmed.
- ▶ Touch the  button again.
 - The light intensity is increased.

3.3 Intensive level

- ▶ Touch the  button.
 - The  button illuminates.
 - The intensive level switches on.
- If another power level had been running beforehand, then the appliance will automatically revert to this power level after six minutes has elapsed.
- If the appliance had not been switched on beforehand, then the appliance will automatically switch off after the six minutes has elapsed.
- ▶ Touch the  or  button.
 - The  button illuminates.
 - The intensive level switches off before time.

3.4 After-running time

With the after-running time function, the appliance runs for another 15 minutes and then switches off.

- ▶ Touch the  or  button and select the desired power level.
- ▶ Touch the  button.
 - The after-running time switches on.
 - The  button illuminates for 15 minutes.
- ▶ Touch the  or  button again.
 - The LED for the corresponding power level no longer flashes.
 - The after-running time function switches off before time.

3.5 Wipe protection

Activating wipe protection

- ▶ Hold the  button depressed for five seconds.
 - Wipe protection is activated, all the buttons flash on once and then flash from left to right.



Wipe protection is useful when cleaning the hood.

Deactivating wipe protection

- ▶ Hold the  button depressed for five seconds.
 - Wipe protection is deactivated.

3.6 CleanAir function

Switching on/off

- ▶ Touch the  button.
 - The LED flashes.
 - The range hood switches on every hour for ten minutes at level .
- ▶ Touch the  or  button.
 - The LED no longer flashes.
 - The CleanAir function switches off.

3.7 Saturation indicators

Saturation indicator for the metal grease filter

The  button flashes after 100 operating hours. The saturation level has been reached and the grease filters must be cleaned.

Saturation indicator for the long-life activated charcoal filter

The activated charcoal filters must be cleaned as soon as the  button flashes or at the latest after one month when the saturation level has been reached.

Resetting the filter saturation indicator

- ✓ The grease filter has been cleaned.
- ▶ With the range hood switched off, hold the  button depressed until all the LEDs flash three times.
 - The flashing LEDs  (grease filters) or  (activated charcoal filters) no longer flash.

3.8 Operation with remote control

Activating/deactivating the remote control

- ▶ With the appliance switched off, hold the  button depressed for five seconds.
 - All LEDs flash twice.
 - The range hood can now be operated using the remote control.
- ▶ With the appliance switched off, hold the  button depressed for five seconds.
 - All LEDs flash once.
 - The range hood can only be operated using the operating and display elements.

Switching the appliance on/off

- ▶ Touch the  button.
 - The appliance switches on at power level 1.
- ▶ Touch the  button again.
 - The appliance switches off.

Switching the illumination on/off

- ▶ Touch the  button.
 - The illumination switches on at maximum intensity.
- ▶ Touch the  button again.
 - The illumination switches off.

Changing the light intensity

- ▶ When the illumination is switched on, hold the  button depressed for two seconds.
 - The light intensity is lowered.
- ▶ When the light intensity is low, touch the  button.
 - The light intensity is increased.
- The illumination switches off if the  button has been held depressed for two seconds when the light intensity is low or if it is touched when the light intensity is high.



The illumination can be used independently of the extractor fan.

Changing the power level

- ▶ Press the  button.
 - The next lower power level is activated.
- ▶ Press the  button.
 - The next higher power level is activated.

Switching the intensive level on / off before time

- ▶ Touch the  button.
 - The  button illuminates.
 - The intensive level switches on.
- If another power level had been running beforehand, then the appliance will automatically revert to this power level after six minutes has elapsed.
- If the appliance had not been switched on beforehand, then the appliance will automatically switch off after the six minutes has elapsed.
- ▶ Press the  or  button.
 - The  button light goes out.
 - The intensive level switches off before time.

Switching after-running time on/off

In the after-running time, the motor, fan blades and illumination run for another 15 minutes and then switch off.

- ▶ Touch the  button.
- ▶ Touch the  or  button repeatedly until the desired power level is reached.
- ▶ Touch the  button.
 - The after-running time switches on.
 - The LED for the corresponding power level illuminates and the LED for the  button flashes for 15 minutes.
- ▶ Touch the  button again.
 - The LED for the corresponding power level no longer illuminates.
 - The after-running time function switches off before time.

4 Care and maintenance

4.1 Cleaning the housing



Take care that no water gets into the housing of the appliance! If water gets into the housing, it can cause damage. Do not use abrasive cleaners, scouring pads, steel wool, etc. for cleaning, as they can damage the surface. Remove the screw fuse or switch off the circuit breaker.

Cleaning the outside/inside

- ▶ Depress the  button for five seconds.
 - Wipe protection is activated, all the buttons flash on once and then flash from left to right.
- ▶ Clean the outside using a slightly damp cloth – and detergent if necessary – and wipe dry.

Grease and condensate water can build up on the inside next to the grease filters.


- ▶ Clean using a slightly damp cloth – and detergent if necessary – and wipe dry.
- ▶ After cleaning, depress the  button for five seconds.
 - Wipe protection is deactivated.

4.2 Metal grease filters

The filter can be cleaned.


Removing the upper grease filter

- ▶ Swing the glass panel **1** up.
- ▶ Press the grip **2** upwards, swing the grease filter **3** forwards and remove from the bracket **4**.

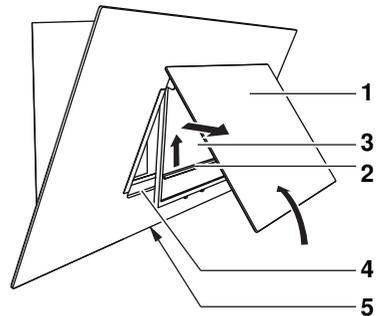

Removing the lower grease filter

Push the grip **6** towards the middle and remove the filter **5**.

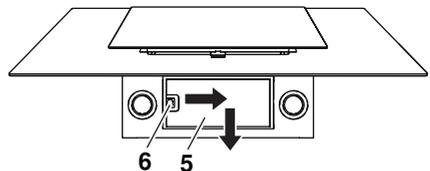

Be careful not to damage the filter.

Cleaning

The grease filters must be cleaned at least once a month with normal use or whenever the  indicator light flashes. If properly cared for, the service life of the grease filters should be as long as the service life of the range hood.

- ▶ Clean the large metal grease filter (with the grip facing upwards so that the grease can drain away) and the small grease filter in the dishwasher.
- ▶ Select an «intensive» – or «heavy soiling» – wash programme with a warm pre-wash.




Cleaning may cause the grease filters to become discoloured. This will not affect the functioning of the filters in any way.

If no dishwasher is available:

- ▶ Clean the grease filters in hot water and detergent.
- ▶ Soak the grease filters in hot water and detergent for about two hours, then clean with a washing-up brush and rinse well with clean water.


Installing the upper grease filter

- ▶ Insert the grease filter **3** into the bracket **4** at the top.
- ▶ Press the grip **2** upwards and engage the grease filter **3** in the bracket at the bottom.
- ▶ Swing the glass panel **1** down.

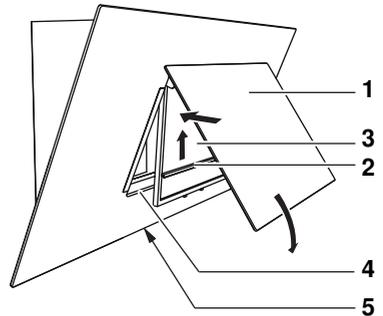

Installing the lower grease filter

- ▶ Push the grip **6** on the lower grease filter towards the middle. Engage the grease filter **5** in the bracket at the right and press the grease filter **5** upwards.

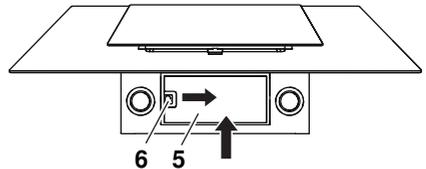

- ▶ With the range hood switched off, hold the  button depressed until all the LEDs flash three times.
 - The flashing button  goes out.

4.3 Activated charcoal filter display

Activating the activated charcoal filter display



This function must only be activated with the recirculation model.

- ▶ With the appliance switched off, hold the  button depressed for five seconds.
 - All LEDs flash twice.
 - The activated charcoal filter display is activated.

Deactivating the activated charcoal filter display

- ▶ With the appliance switched off, hold the  button depressed for five seconds.
 - All LEDs flash once.
 - The activated charcoal filter display is deactivated.

4.4 Cleaning the long-life activated charcoal filter



Long-life activated charcoal filters are only used in the recirculation model.

The long-life activated charcoal filter can be cleaned and reactivated. With normal use the long-life activated charcoal filter should be cleaned every other month or whenever the  indicator light flashes. It can be cleaned in a dishwasher at 65°C (select an «intensive» or «heavy soiling» wash programme). Wash the filter separately so that it does not become clogged with food particles. If it is not possible to wash the filter in a dishwasher, soak it in 60°C water with a little washing-up liquid for one hour. Then rinse well. To reactivate the activated charcoal, dry the filter without the frame in the oven.


- ▶ Select top/bottom heat or hot air and set the temperature to 100 °C. Place the filter on a wire shelf and allow to dry for 60 minutes.




After about three years the long-life activated charcoal filter must be replaced because its ability to absorb odours will be reduced. The spent long-life activated charcoal filter can be disposed of in the household waste.

Removing the long-life activated charcoal filter

- ▶ Swing the glass panel **1** up.
- ▶ Press the grip **2** upwards, swing the grease filter **3** forwards and remove from the bracket **4**.

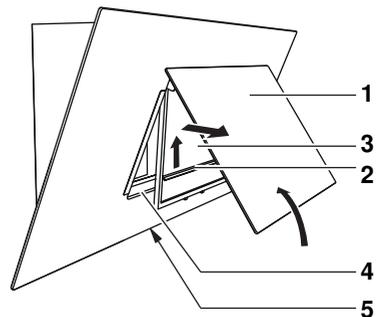

- ▶ Remove the activated charcoal filter 7.

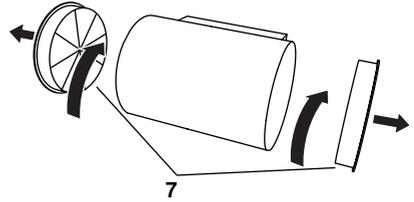


Cleaning


- ▶ Clean and reactivate the long-life activated charcoal filter 7. Take care not to damage the filter. If necessary, replace the used long-life activated charcoal filter with a new one.

Installing

- ▶ Install the cleaned long-life activated charcoal filter 7.

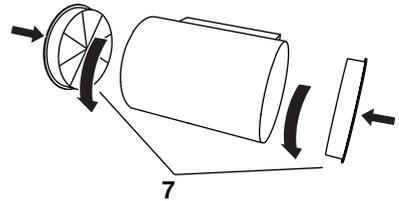

- ▶ Insert the grease filter 3 into the bracket 4 at the top.
- ▶ Press the grip 2 upwards and engage the grease filter 3 in the bracket at the bottom.
- ▶ Swing the glass panel 1 down.
- ▶ With the range hood switched off, hold the  button depressed until all the LEDs flash three times.
 - The  indicator light goes out.

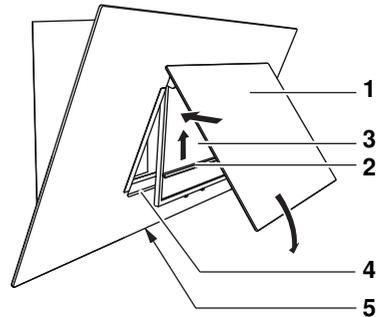

5 Trouble-shooting

5.1 What to do if ...

... the illumination is not working

Possible cause	Solution
<ul style="list-style-type: none"> ▪ Fuse or automatic circuit breaker for electrical installations in the home is defective. 	<ul style="list-style-type: none"> ▶ Replace the fuse. ▶ Reset the automatic circuit breaker.
<ul style="list-style-type: none"> ▪ An interruption in the power supply. 	<ul style="list-style-type: none"> ▶ Check the power supply.
<ul style="list-style-type: none"> ▪ LED is defective. 	<ul style="list-style-type: none"> ▶ Inform Customer Services.

... the appliance is not extracting enough air

Possible cause	Solution
<ul style="list-style-type: none"> ▪ Grease filters are dirty. 	<ul style="list-style-type: none"> ▶ Clean the grease filters.
<ul style="list-style-type: none"> ▪ Only for recirculation model: The long-life activated charcoal filters are saturated. 	<ul style="list-style-type: none"> ▶ Replace the long-life activated charcoal filters.
<ul style="list-style-type: none"> ▪ Only for extraction model: The fresh air intake is insufficient. 	<ul style="list-style-type: none"> ▶ Ensure the fresh air intake is sufficient.

... Saturation indicator illuminates

Possible cause	Solution
<ul style="list-style-type: none"> ▪ The metal grease filters are dirty. 	<ul style="list-style-type: none"> ▶ Clean the metal grease filters.
<ul style="list-style-type: none"> ▪ The long-life activated charcoal filters are dirty. 	<ul style="list-style-type: none"> ▶ Reactivate the long-life activated charcoal filters.
<ul style="list-style-type: none"> ▪ The activated charcoal filters are dirty. 	<ul style="list-style-type: none"> ▶ Replace the activated charcoal filters.
	<p>Valid for all three filter models.</p> <ul style="list-style-type: none"> ▶ After cleaning, hold the  button depressed for at least five seconds. ▶ The display goes out.


... the range hood or the operating element is not working

Possible cause	Solution
<ul style="list-style-type: none"> ▪ The range hood or the operating element is not working. 	<ul style="list-style-type: none"> ▶ Disconnect the power supply for at least five seconds. ▶ Switch the range hood back on again. <p>The fault cannot be remedied.</p> <ul style="list-style-type: none"> ▪ Contact Customer Services.


6 Accessories and spare parts

Please give model number and exact designation when ordering parts.


Metal grease filter for extraction and recirculation model (large)

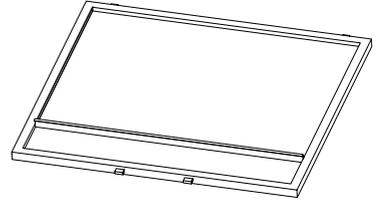

Metal grease filter for extraction and recirculation model (small)

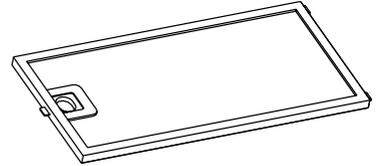

Long-life activated charcoal filter for recirculation model

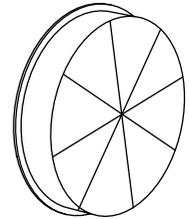

7 Technical data

Electrical connection

- ▶ See identification plate.
 - ▶ Remove the metal grease filters.
 - The identification plate is located on the inside of the appliance.

8 Disposal

8.1 Packaging



Never allow children to play with packaging material due to the danger of injury or suffocation. Store the packaging material in a safe location or dispose of it in an environmentally-friendly way.

8.2 Safety

Render the appliance unusable to prevent accidents caused by improper use (e.g. through children playing):

- ▶ Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician. Then cut the mains cable off flush with the appliance.

8.3 Disposal



-  The «crossed out wheeled bin» symbol requires the separate collection of waste electrical and electronic equipment (WEEE). Such equipment can contain hazardous, environmentally harmful materials.
- These appliances are to be handed over to a designated collection point for the recycling of electrical and electronic equipment and must not be disposed of with unsorted household waste. And in this way, you will be helping to protect resources and the environment.
- For more information, please contact the local authorities.

9 Index

A	
Accessories	18
Activated charcoal filter display	
Activating.....	15
Deactivating	15
After-running time	
On the hood.....	10
Remote control.....	12
Appliance	
Operating	9
Appliance description	7
Appliance disposal.....	19
C	
Changing light intensity	
On the hood.....	9
Cleaning the housing	13
Construction.....	8
D	
Display elements	
Hood	8
Remote control.....	9
Disposal.....	19
E	
Electrical connection.....	18
Equipment	7
Extraction model.....	7
I	
Identification plate.....	18
Illumination	
On the hood.....	9
With remote control.....	11
Initial set-up.....	5
Intensive level	
On the hood.....	10
With remote control.....	12
L	
Long-life activated charcoal filter	
Cleaning	15
Replacing.....	15
M	
Malfunction	
Illumination not working.....	17
Metal grease filter	
Cleaning	13
Installing	13
Removing.....	13
Model designation	2
Model number	2
N	
Notes	22
O	
Operating elements	
Hood	8
Remote control.....	9
P	
Power level	
Changing.....	12
Q	
Queries	23
R	
Recirculation model.....	7
Remote control.....	9
Activating/deactivating	11
Resetting the filter saturation indicator	
.....	11
S	
Safety precautions	
Appliance-specific	4
Before using for the first time.....	5
Correct use	5
General.....	4
Instructions for use.....	5
Note on use	6
Saturation indicator	
Grease filter	11
Long-life activated charcoal filter	
.....	11
Service & Support.....	23
Service agreement.....	23
Spare parts	18
Switching appliance on/off	
With remote control.....	11
Symbols.....	4
T	
Technical data	18
Type.....	2
V	
Validity.....	2

W

What to do if

Range hood not working..... 17

The appliance is not extracting enough air
..... 17

The illumination is not working 17

The saturation indicator illuminates
..... 17

Wipe protection

Activating..... 10

Deactivating 10

10 Notes

11 Service & Support



The «Trouble-shooting» section gives you valuable tips on how to deal with minor malfunctions yourself, saving you the time and trouble of calling out a service technician and any cost that goes along with it.

Information on the V-ZUG warranty can be found at www.vzug.com →Service →Warranty information. Please read this information carefully.

Please register your V-ZUG appliance straightaway:

- online at www.vzug.com →Service →Online warranty registration or
- using the enclosed registration card.

This will allow you to take advantage of the best possible support in the event of a fault in the appliance during the guarantee period. You will require the serial number (SN) and appliance designation to register your appliance. You will find them on the identification plate of your appliance.

My appliance information:

SN: _____ **Appliance:** _____

Please have this appliance information to hand when contacting V-ZUG. Thank you.

- ▶ Remove the metal grease filters.
 - The identification plate is located on the inside of the appliance.
 - A second identification plate is included in the scope of delivery and should be retained for the purpose of appliance identification.

Your repair order

Call the free service number 0800 850 850 to contact your nearest V-ZUG service centre. You can arrange an on-site visit by us by phone if you wish.

General queries, accessories and service agreement

V-ZUG will be happy to help you with any general administrative or technical queries, to accept your orders for accessories and spare parts and to inform you about our progressive service agreements. You can contact us by calling tel. +41 58 767 67 67 or by going to our website at www.vzug.com.

Quick instructions

Please first read the safety precautions in the operating instructions!



-  Switch off / activate/deactivate button lock
-  Power level 1 / activate/deactivate remote control
-  Power level 2
-  Power level 3
-  Intensive level
-  CleanAir function (air extraction every hour for 10 minutes)
-  After-running time, delays the switching-off of the appliance by 15 minutes
-  Illumination ON/OFF / dimmer function (hold depressed for two seconds)
-  Infrared interface for the remote control
-  Flashing: Clean grease filters
-  Flashing: Clean long-life activated charcoal filters (recirculation model)



J62010013-R05

