

Operating instructions

GK35TEPS | GK55TES

Toptronic hob

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarise yourself with the appliance and get the best use out of it.

Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliance is reserved.

Validity

The product family (model number) corresponds to the first alphanumeric on the identification plate. These operating instructions apply to:

Type	Product family
GK35TEPS/C/F	31032
GK55TES/C/F	31042

Variations depending on the model are noted in the text.

Contents

1	Safety precautions	4
1.1	Symbols used.....	4
1.2	General safety precautions	5
1.3	Appliance-specific safety precautions.....	6
1.4	Instructions for use	7
2	Disposal	9
3	Using for the first time	10
4	Your appliance	11
4.1	Appliance overview.....	11
4.2	Operating and display elements.....	12
4.3	Cookware	13
5	Operating the appliance	14
5.1	Switching the appliance on and off.....	14
5.2	Selecting a cooking zone.....	14
5.3	Overview of power levels.....	14
5.4	Switching a cooking zone off	14
5.5	Residual heat indicator	14
5.6	PowerTronic	15
5.7	Switching the dual ring zone on and off.....	15
5.8	Automatic boost.....	16
5.9	Operating time.....	17
5.10	Timer.....	19
5.11	Childproof lock	20
5.12	Restore function	21
5.13	Pause cooking.....	21
5.14	Wipe protection	21
6	User settings	22
6.1	Changing user settings.....	23
6.2	Cancelling user settings	23
7	Care and maintenance	24
8	Trouble-shooting	25
9	Technical data	27
9.1	Product fiche.....	27
10	Index	28
11	Service & Support	31

1 Safety precautions

1.1 Symbols used



Denotes important safety precautions.

Failure to observe said precautions can result in injury or in damage to the appliance or fittings!



Information and precautions that should be observed.



Information on disposal



Information about the operating instructions

- ▶ Indicates step-by-step instructions.
 - Describes how the appliance reacts to the steps taken.
- Indicates a list.

1.2 General safety precautions



- Read the operating instructions before using the appliance for the first time!



- This appliance can be used by children aged 8 and above and by persons with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, provided they are supervised or have been instructed on the safe use of the appliance and have understood the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be undertaken by children without supervision.
- If an appliance is not equipped with a mains cable and a plug or other means for disconnecting from the mains with a contact opening on each pole complying with the conditions of overvoltage category III for full isolation, an isolating device must be incorporated into the permanently installed electrical installation in accordance with the installation regulations.
- If the mains cable of this appliance is damaged, it must be replaced by the manufacturer or its Customer Services or a similarly qualified person in order to avoid hazard.

1.3 Appliance-specific safety precautions



- **WARNING:** If the surface has a crack running through the thickness of the material, switch the appliance off and disconnect it from the mains to avoid possible electric shock.
- **WARNING:** The appliance and its accessible parts get hot during use. Be careful not to touch the heating elements.
- Under no circumstances use a steam cleaner to clean the appliance.
- Do not place metal objects such as knives, forks, spoons, lids or aluminium foil on the hob as they can get hot.
- **WARNING:** It can be dangerous to leave the hob unattended when cooking with fat or oil, as this can lead to fires. NEVER attempt to extinguish a fire with water. Instead, switch the appliance off and then carefully smother the flames with, for example, a lid or a fire blanket.
- **WARNING:** Never store objects on the hob due to the risk of fire.
- **WARNING:** The cooking process should always be supervised. Shorter cooking processes, in particular, must be supervised the entire time.
- Do not operate the appliance using an external time switch or a separate remote control system.

1.4 Instructions for use

Before using for the first time

- The appliance must be installed and connected to the electricity supply in accordance with the separate installation instructions. Have a qualified fitter/ electrician carry out the necessary work.

Correct use

- The appliance is designed for use in the home for preparing food. No liability is assumed for any damage caused by improper use or incorrect handling.
- Any repairs, modifications or manipulations to the appliance, especially any electrically live parts, may only be carried out by the manufacturer, its Customer Services or a similarly qualified person. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance. If the appliance is not working properly or in case of a repair order, follow the instructions given in the 'Repair service' section. Contact our Customer Services if necessary.
- Use original spare parts only.
- Retain these operating instructions for future reference. If you sell the appliance or pass it on to a third party, please ensure these operating instructions accompany the appliance, together with the installation instructions.
- The appliance corresponds to recognized technology standards and the relevant safety regulations. However, proper use of the appliance is essential to avoid damage and accidents. Please therefore follow the precautions given in these operating instructions.
- The heated surface will remain hot for some time after it is switched off and will cool down only slowly to room temperature. Please allow sufficient time for the appliance to cool down before, for instance, cleaning it.

Caution: Burns hazard

- Overheated fat and oil can easily catch fire. Never attempt to extinguish burning oil or fat with water. Danger of explosion! Smother the flames with a fire blanket. Keep doors and windows closed.

Caution: Risk of injury

- Keep pets away from the appliance.

Caution: Risk to life

- Packaging materials, e.g. plastic film and polystyrene, can be dangerous for children. Danger of suffocation! Keep packaging material away from children.

How to avoid damaging the appliance

- In case of overheating, switch the hotplate off and allow it to cool down completely. Do not put any dishes on it. Under no circumstances use cold water to cool it down quickly.
- Do not climb on to the appliance.
- Do not put hot cookware on the hob frame in order not to damage the silicone joints.
- Do not cut or prepare food on the surface and avoid impact with hard objects. Do not drag cookware across the surface.
- Take particular care that sugary foods or juices do not get onto the hot cooking zones as it can damage them. If sugary foods or juices do get on to the hot cooking zones clean away immediately (while still hot) with a scraper.
- Pots with pure copper or aluminium bases should not be used for cooking as they can leave behind traces that can be difficult to clean. If the traces are not removed immediately after cooking with a suitable cleaning agent, they can be permanently burned on and therefore permanently ruin the visual appearance of the appliance.
- Sliding pans and cookware across the glass ceramic causes scratches. This can be largely prevented by lifting pans and cookware up and then placing them down in position.
- The hob is designed to be used – signs of use, such as scratches or the wear and tear from pans and cookware, are normal. The more intensively it is used, the greater the signs of use; however, the appliance remains in perfect working order and therefore does not give a right of complaint. Safety is guaranteed at all times.
- There is no such thing as completely scratch-proof glass; scratches can even develop on sapphire glass, which is used in watches. The glass ceramic used is of the best quality available on the market.

2 Disposal

Packaging

- All packaging materials (cardboard, plastic film (PE) and polystyrene (EPS)) are marked and should, if possible, be collected for recycling and disposed of in an environmentally friendly way.

Disconnection

- Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician!

Safety

- Disable the appliance to prevent accidents caused by improper use, especially through children playing.
- Pull the plug out of the mains socket or have the appliance disconnected from the mains by an electrician. Then cut the mains cable off flush with the appliance.

Disposal

- The old appliance should not be discarded as worthless rubbish. If disposed of correctly, the raw materials can be recovered for recycling.



- The  symbol on the identification plate warns that the appliance may not be disposed of in normal household waste.
- The appliance must be disposed of in accordance with local regulations on waste disposal. For more information on the handling, disposal and recycling of the product, please contact the local authorities, the local recycling facilities for household waste or the retailer from whom you purchased the appliance.

3 Using for the first time




The appliance must be installed and connected to the electricity supply in accordance with the separate installation instructions. Have a qualified fitter/electrician carry out the necessary work.



During the first few hours of use, a cooking zone can give off an unpleasant smell. This is normal for brand new appliances. Ensure that the room is well ventilated.

Where is the identification plate?

The identification plate and the connection plate are located on the underside of the hob.

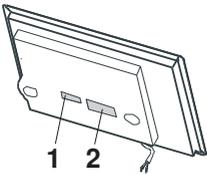

- 1 Identification plate with serial number (FN)
- 2 Connection plate

A second identification plate is supplied and should be affixed in the fitted unit underneath the hob.

Note down the serial number (FN) of your appliance on the back page of these operating instructions.




The serial number is required for identifying the appliance. Only then can customer services guarantee a faultless service.

4 Your appliance

4.1 Appliance overview


GK35TEPS, GK35TEPSC, GK35TEPSF

- 1 cooking zone Ø 230 mm with PowerTronic
- 1 dual ring cooking zone Ø 175/210 mm
- 1 cooking zone Ø 140 mm

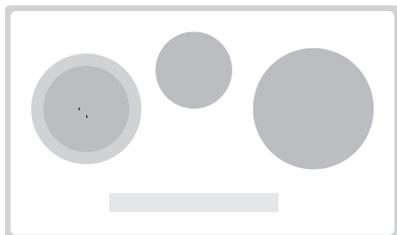


GK55TES, GK55TESC, GK55TESF

- 1 cooking zone Ø 230 mm with PowerTronic
- 1 cooking zone Ø 210 mm
- 2 cooking zones Ø 180 mm
- 1 cooking zone Ø 140 mm

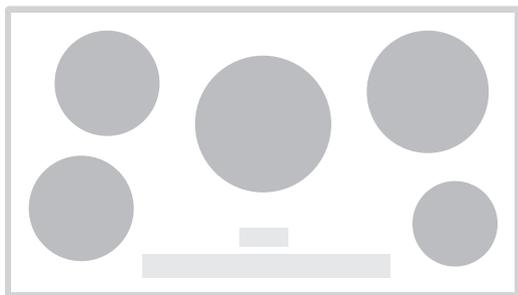


4.2 Operating and display elements

GK35TEPS ...

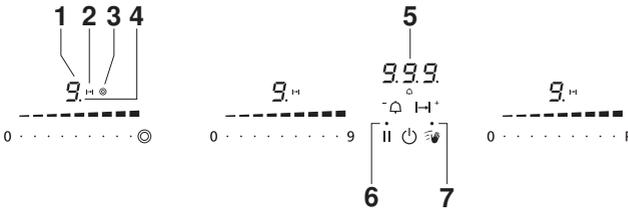

GK55TES ...

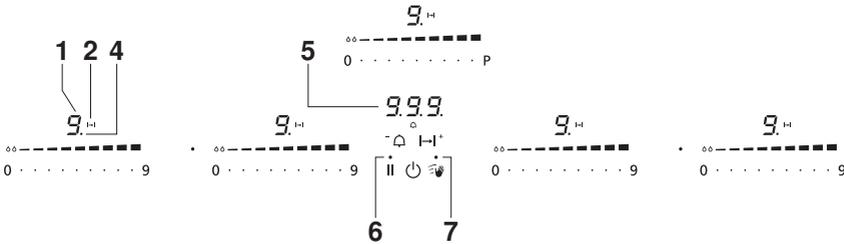

Buttons

-  Device ON/OFF
- 0** · · Slider (to set the power level)
- · **P** PowerTronic
- ·  Dual ring cooking zone ON/OFF
- ||** Pause cooking ON/OFF and restore function
- |→|⁺** Operating time
Function as plus button in operating time/timer mode
- |**  Timer
Function as minus button in operating time/timer mode
-  Wipe protection ON/OFF

Displays

- 1 Power level of the cooking zone
- 2 Operating time activated
- 3 Dual ring cooking zone activated
- 4 Cooking zone indicator light for the operating time
- 5 Operating time/timer
- 6 Pause activated/restoration of saved settings possible
- 7 Wipe protection activated

4.3 Cookware

Suitable cookware

Cookware should have a stable bottom. When heated, the base of the cookware must lie flat on the surface of the cooking zone.

Cookware made of metal is more suitable than that made of glass or ceramic as with metal the heat is distributed evenly quicker.

Cookware bases made of aluminium or aluminium alloys can leave stubborn marks on the glass ceramic surface that are very difficult to remove.

Energy-efficient cooking

For maximum energy efficiency and even heat distribution note the following:

- The base of the cookware must be clean, dry and smooth.
- Centre the cookware in the middle of the cooking zone.
- Use a well-fitting lid.
- Match the diameter of the cookware to the quantity of food to be cooked.

5 Operating the appliance

5.1 Switching the appliance on and off

All the appliances are operated in the same way.

- ▶ To switch the appliance on: Depress the  button for 1 second.
 - If no other entry is made, the appliance switches off again after about 10 seconds for safety reasons.
- ▶ To switch the appliance off: Press the  button.

5.2 Selecting a cooking zone

- ▶ Touch the slider **0 · · · P** of the required cooking zone or swipe it to set the power level.

5.3 Overview of power levels

Power level	Cooking method	Practical use
1	Melting, careful heating	Butter, chocolate, gelatine, sauces
2		
3	Swelling	Rice
4	Simmering, reducing, stewing	Vegetables, potatoes, sauces, fruit, fish
5		
6	Simmering, braising	Pasta, soups, braised meats
7	Gentle frying	Rösti, omelettes, breaded fried food, sausages
8	Frying, deep frying	Meat, potato chips
9	Searing	Steaks
P	Fast heating	Boiling water

5.4 Switching a cooking zone off

- ▶ Touch power level «**0**» on the slider.
 - If no other entry is made and the other cooking zones are switched off, the appliance switches off after 10 seconds.

5.5 Residual heat indicator

After a cooking zone is switched off, **H** remains illuminated as long as there is a risk of burns.

5.6 PowerTronic

The cooking zone Ø 230 mm is equipped with the PowerTronic power booster. When PowerTronic is switched on, this cooking zone operates with an extra-high level of power. You can use PowerTronic to heat up large quantities of water quickly, for example.

Switching on PowerTronic

- ▶ Touch **P** on the slider of the corresponding cooking zone.
 - **P** is illuminated in the display.


Switching off PowerTronic

Touch the required power level on the slider of the corresponding cooking zone.

5.7 Switching the dual ring zone on and off

Only applicable for GK35TEPS ...

When the dual ring zone is switched on, only the inner cooking zone **A** is switched on initially. The outer heating ring **B** can be switched on if necessary.

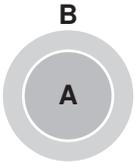

Switching the outer heating ring on

- ▶ Touch the slider of the dual ring zone or swipe it to set the power level.
- ▶ Touch **⊙** on the slider.
 - The **⊙** symbol is illuminated next to the corresponding power level.

Switching the outer heating ring off

- ▶ Touch **⊙** on the slider.
 - The outer heating ring **B** is switched off and the inner cooking zone **A** remains in operation.
 - The **⊙** symbol next to the corresponding power level goes out.

5.8 Automatic boost



**Do not leave the hob unattended when using the automatic boost.
Risk of boiling over, burning on and igniting!**

All the cooking zones are equipped with a selectable automatic boost. With this function, a cooking zone heats at power level **9** for a certain length of time (see table). Then it automatically switches back to the power level set.



The automatic boost function must be activated anew each time a cooking zone is switched on.

Power level	1	2	3	4	5	6	7	8
Boost in mins.:secs.	1:00	3:00	4:45	6:30	8:30	2:30	3:30	4:30

Switching the automatic boost on

- ▶ Hold the desired power level on the slider **0 · · · P** depressed for 3 seconds.
 - **R** and the power level illuminate alternately in the display when the automatic boost is activated.
 - When the automatic boost is over, the heat output is reduced again to the power level selected.

Switching the automatic boost off before time

- ▶ Use the slider **0 · · · P** to set a lower power level.

5.9 Operating time



Do not leave the hob unattended during use. Risk of boiling over, burning on and igniting!

With the operating time function, a Cooking zone switches off automatically after a set time 1 min.–1 h 59 min..

Setting the operating time

- ▶ Select the required cooking zone.
- ▶ Touch the **I→I** button.
 - **00** flashes in the display.
- ▶ Touch the slider of the required cooking zone.
 - The **I→I** symbol illuminates.
- ▶ Use the **I→I**⁺ button to increase the operating time or use the **↶** button to reduce the operating time.
 - The indicator light for the cooking zone illuminates.
 - The first time the **I→I**⁺ button is touched, **!** illuminates in the display.
 - The first time the **↶** button is touched, **30** illuminates in the display.



To quickly change the operating time, press and hold the **↶** or **I→I**⁺ button.

Changing the operating time

- ▶ Touch the **I→I** button.
 - **00** flashes in the display.
- ▶ Touch the slider of the required cooking zone.
 - The remaining operating time for the cooking zone selected is displayed.
 - The indicator light for the cooking zone illuminates.
- ▶ Use the **↶** or **I→I**⁺ button to change the operating time.

Switching the operating time function off before time

- ▶ Press the  button.
- ▶ Touch the slider of the required cooking zone.
- ▶ Press the  and  buttons at the same time.
 -  flashes in the display.
 - The cooking zone continues to run.

End of the operating time

When the operating time is up

- the relevant cooking zone switches off
 - an acoustic signal is emitted
 -  and the power level flash.
- ▶ Press the  and  button to switch off the acoustic signal and the display.

Several operating times

If operating times are set for several cooking zones,

- the shortest operating time illuminates in the display
- the corresponding cooking zone indicator light illuminates
- the  symbol illuminates with the set operating time for each cooking zone.

To display another operating time:

- ▶ Press the  button.
- ▶ Touch the slider of the required cooking zone.
 - The operating time is displayed and can be changed.

5.10 Timer

The timer functions like an egg timer (1 min.–9 h 59 min.).

Setting the timer

- ▶ Switch the appliance on.
- ▶ Touch the  button.
 - The  symbol illuminates.
 -  flashes in the display.
- ▶ Use the  button to increase the duration of the timer or use the  button to reduce the duration of the timer.
 - The first time the  button is touched,  illuminates in the display.
 - The first time the  button is touched,  illuminates in the display.



To quickly change the duration of the timer, press and hold the  or  button.

Changing the timer

If no cooking zone is in use, first switch the appliance on.

- ▶ Press the  button.
 - The time left on the timer flashes.
- ▶ Use the  or  button to change the duration of the timer.

Switching the timer off before time

If no cooking zone is in use, first switch the appliance on.

- ▶ Press the  button.
- ▶ Press the  and  buttons at the same time.
 -  flashes in the display.

5.11 Childproof lock

The childproof lock is to prevent the appliance from being accidentally switched on.

Switching the childproof lock on

- ▶ Switch the appliance on.
Ensure all cooking zones are switched off.
- ▶ Touch the  and  buttons at the same time.
 - An acoustic signal is emitted.
- ▶ Touch the  button again.
 - An acoustic signal is emitted.
 - The childproof lock is now switched on.
 -  illuminates in all the power level displays for 10 seconds.

Operating the appliance with the childproof lock activated

- ▶ Switch the appliance on.
- ▶ Touch the  and  buttons at the same time.
 - An acoustic signal is emitted.
 - The childproof lock is overridden. The appliance can now be used as normal.

The childproof lock is automatically activated again after switching off the hob.

Switching the childproof lock off

- ▶ Switch the appliance on.
Ensure all cooking zones are switched off.
- ▶ Touch the  and  buttons at the same time.
 - An acoustic signal is emitted.
- ▶ Touch the  button again.
 - A double acoustic signal is emitted.
 - The childproof lock is now switched off.
 -  flashes in all the power level displays for 10 seconds.

5.12 Restore function

If the appliance has been inadvertently switched off with the  button, the settings can be restored within 6 seconds.

- ▶ Switch the appliance on.
 - The indicator light for the  button flashes.
- ▶ Touch the  button.

5.13 Pause cooking

With this function, the power level of all cooking zones that are switched on can be temporarily reduced to  for up to 10 minutes.

After pause cooking, the appliance can continue to be operated using the previous settings.

- ▶ Touch the  button.
 - The indicator light for the  button illuminates.
 - The power level of the cooking zone switched on changes to .
 - The operating time is interrupted.
 - The timer continues to run.
 - All buttons except ,  and  are inactive.



If the pause cooking function is not turned off within 10 minutes, the appliance switches off completely.

- ▶ Touch the  button again to resume cooking.
 - The cooking zones resume operation using the previous settings.

5.14 Wipe protection

This function prevents the power level from being changed accidentally, for instance when wiping the control panel with a cloth.

- ▶ Touch the  button.
 - The indicator light for the  button illuminates.
- ▶ Wipe protection is switched off by touching the  button again or automatically after 30 seconds.



Press the  button to switch the appliance off at any time.


6 User settings

The following user settings can be set and stored individually:

User setting		Setting value		Factory setting
P0	Loudness of acoustic signal	0	Quiet	2
		1	Medium	
		2	Loud	
P1	Acoustic signal at end of operating time / timer	0	No acoustic signal	2
		1	Automatically off after 10 seconds	
		2	Automatically off after 1 minute	
P3	Automatic boost	0	Automatic boost off	1
		1	Automatic boost on	
P4	Default time operating time / timer	0	Default time 0 minutes	3
		1–9	Adjustable in steps from 10–90 minutes	
P5	Acoustic signal when buttons are pressed	0	Acoustic signal off	1
		1	Acoustic signal on	
P6	Restoring factory settings	0	Restoring factory settings: Hold the button depressed for 2 seconds.	0

6.1 Changing user settings

- ▶ With the hob switched off, simultaneously hold the  and  buttons depressed for 3 seconds.
 - An acoustic signal is emitted.
- ▶ Press both left sliders at the same time.
 - An acoustic signal is emitted.
 - The user setting, e.g. **P0**, appears in display **3**.
 - The current user setting value is shown in display **2**.

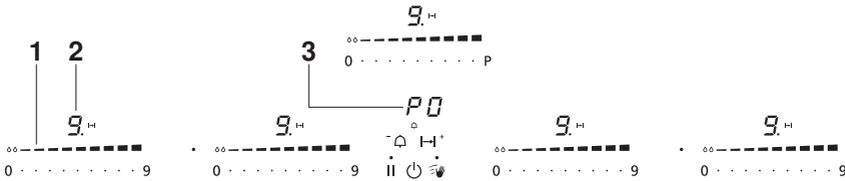

- ▶ Use the  button to select the next highest and the  button the next lowest user setting.
- ▶ Touch or swipe slider **1** to select a higher or lower setting value.
- ▶ To save entries: Hold the  button depressed for 2 seconds.
 - An acoustic signal is emitted.
 - The «User settings» mode is ended.

6.2 Cancelling user settings

- ▶ Press the  button.
 - Any changes made to the default values are not saved.
 - The «User settings» mode is ended.

7 Care and maintenance



**Clean the appliance only when it has completely cooled down.
Burns hazard!**

Always clean the hob after use. This prevents food residue from burning on. Dried-on or burned-on food residue is harder to clean off.

Use of improper cleaning techniques can result in damage to the markings or surface.



Avoid cleaning the surface of the glass ceramic hob with abrasive cleaning agents, scouring pads, wire wool, etc. as it can damage them. Refer to the homepage for tips on suitable cleaning materials.

- ▶ Use only a soft cloth or sponge with water and a suitable detergent for cleaning everyday soiling. Always follow the detergent manufacturer's instructions for use. Using a detergent with a protective additive is recommended.
- ▶ Remove stubborn soiling, e.g. boiled-over milk, while still warm using a glass ceramic hob scraper. Always follow the scraper manufacturer's instructions for use.
- ▶ Foods with a high sugar content, e.g. marmalade, that boil over should be removed while still hot using a glass ceramic hob scraper. The surface of the glass ceramic hob could otherwise become damaged.
- ▶ Remove melted plastic while still warm using a glass ceramic hob scraper. The surface of the glass ceramic hob could otherwise become damaged.
- ▶ Remove limescale stains when cool with a small amount of limescale remover, e.g. vinegar or lemon juice. Then wipe clean with a damp cloth.

8 Trouble-shooting

What to do if ...

... the appliance is not working and all the displays are dark?

Possible cause	Solution
<ul style="list-style-type: none"> ▪ The fuse or circuit breaker for electrical installations in the home is defective. 	<ul style="list-style-type: none"> ▶ Change the fuse. ▶ Reset the circuit breaker.
<ul style="list-style-type: none"> ▪ The fuse or circuit breaker keeps blowing. 	<ul style="list-style-type: none"> ▶ Call Customer Services.
<ul style="list-style-type: none"> ▪ An interruption in the power supply. 	<ul style="list-style-type: none"> ▶ Check the power supply.

... - illuminates in the displays?

Possible cause	Solution
<ul style="list-style-type: none"> ▪ The childproof lock is activated. 	<ul style="list-style-type: none"> ▶ For operating the appliance with the childproof lock activated, see «Operating the appliance» section. ▶ Switch the childproof lock off.

... A continuous acoustic signal is emitted,  flashes in a display and the appliance switches off?

Possible cause	Solution
<ul style="list-style-type: none"> ▪ A button or a slider was touched for longer than 10 seconds. 	<ul style="list-style-type: none"> ▶ Remove object or food that has boiled over. ▶ The appliance can be used again as normal.
<ul style="list-style-type: none"> ▪ Object (e.g. pan, dish) on the control panel. 	
<ul style="list-style-type: none"> ▪ Food boiled over onto the control panel. 	

... *H* and *U* flash alternately in the display?

Possible cause	Solution
<ul style="list-style-type: none"> The automatic safety shut-off was triggered. 	<ul style="list-style-type: none"> Switch the cooking zone back on again if required.



If a cooking zone has been running for longer without any settings being changed, the appliance switches the cooking zone off automatically, after how much time depends on the power level set.

Power level	L	1	2	3	4
Safety shut-off after hrs.:mins.	2:00	8:30	6:30	5:30	4:30
Power level	5	6	7	8	9
Safety shut-off after hrs.:mins.	3:30	3:00	2:30	2:00	1:30

... *H* flashes in the display?

Possible cause	Solution
<ul style="list-style-type: none"> Excess temperature protection was triggered. 	<ul style="list-style-type: none"> Allow the cooking zone to cool down. Check cookware.

... *U* flashes in the display?

Possible cause	Solution
<ul style="list-style-type: none"> An interruption in the power supply. 	<ul style="list-style-type: none"> Press any button to quit the error message. The appliance can be used again as normal.

... *Er* or *E* and a number illuminate in the display?

Possible cause	Solution
<ul style="list-style-type: none"> Internal error occurred. 	<ul style="list-style-type: none"> Note down the error number. Note down the serial number (FN) of the appliance. See the identification plate for this. Call Customer Services.

9 Technical data

9.1 Product fiche

In accordance with EU Regulation No. 66/2014

Model number GK		31032		
Type designation GK		GK35TEPS/C/F		
Number of cooking zones		3		
Heating technology		Radiant cooking zone		
Diameter of round cooking zones	cm	21	15	24
Energy consumption per cooking zone	Wh/kg	177.2	191.8	179.1
Energy consumption for hob EC	Wh/kg	180.8		

Model number GK		31042				
Type designation GK		GK55TES/C/F				
Number of cooking zones		5				
Heating technology		Radiant cooking zone				
Diameter of round cooking zones	cm	18	18	24	21	15
Energy consumption per cooking zone	Wh/kg	186	187.6	179.2	181	186.6
Energy consumption for hob EC	Wh/kg	184.1				

10 Index

A	
Appliance	
Switching off.....	32
Switching on.....	32
Switching on and off.....	14
Appliance overview	11
Appliance-specific safety	
precautions	6
Automatic boost.....	16
Switching off before time	16
Switching on.....	16
C	
Care and maintenance	24
Childproof lock.....	20
Operating the appliance with the	
childproof lock activated.....	20
Switching off.....	20
Switching on.....	20
Connection plate.....	10
Cooking zone	14, 32
Cookware.....	13
Energy-efficient cooking.....	13
Suitable cookware.....	13
D	
Disconnection.....	9
Disposal.....	9
Dual ring zone	
Switching on and off.....	15
I	
Instructions for use.....	7
M	
Model number	2
N	
Notes.....	30
O	
Operating and display elements	
Buttons	12
Displays.....	13
Operating time.....	17
Changing	17
Finished.....	18
Setting	17
Several operating times	18
Switching off before time	18
Overview of power levels	14
P	
Packaging	9
Pause cooking.....	21
PowerTronic.....	15
Switching off.....	15
Switching on.....	15
Product family.....	2
Product fiche.....	27
Q	
Queries	31
Quick instructions	32
R	
Residual heat indicator	14
Restore function	21
S	
Safety	9
Safety precautions	
General.....	5
Safety shut-off.....	26
Serial number (FN).....	10
Service & Support.....	31
Service agreement.....	31
Switching the dual ring zone on and off	
Switching the outer heating ring	
off	15
Switching the outer heating ring	
on	15
Symbols.....	4

T

Technical data	27
Timer	19
Changing	19
Ending before time.....	19
Setting	19
Trouble-shooting	25
Type.....	2

U

User settings.....	22
Changing	23
Switching off before time	23
Using for the first time.....	10

V

Validity.....	2
---------------	---

W

Where is the identification plate?.....	10
Wipe protection	21

Notes

11 Service & Support



The «Troubleshooting» section provides valuable tips for dealing with minor operating faults. This saves you the time, effort and potential cost of having to call out a service technician.

Information on the V-ZUG warranty can be found at www.vzug.com →Service →Warranty information. Please read this information carefully.

Please register your V-ZUG appliance immediately:

- online via www.vzug.com →Service →Warranty registration, or
- using the enclosed registration card.

This will allow you to take advantage of the best possible support in the event of a fault in the appliance during the guarantee period. You will require the serial number (FN) and appliance designation to complete the registration process. This information can be found on the identification plate for your appliance.

My appliance information:

FN: _____ **Appliance:** _____

Always have this appliance information to hand when you contact V-ZUG. Thank you.

The identification plate and connection plate are located on the underside of the hob.

Your repair order

Call the free service number 0800 850 850 to contact your nearest V-ZUG service centre. You can arrange an onsite visit by us by phone if you wish.

General queries, accessories and service agreement

V-ZUG will be happy to help you with any general administrative or technical queries, to accept your orders for accessories and spare parts and to inform you about our progressive service agreements. You can contact us by calling Tel. + 41 58 767 67 67 or by going to our website at www.vzug.com.

Quick instructions

Please first read the safety precautions in the operating instructions!

To switch appliance on

- ▶ Hold the  button depressed for 1 second.

To set a cooking zone

- ▶ Touch the slider for the required cooking zone or swipe it to set the power level.

Or:

- ▶ Touch **• • P** to heat a large quantity of water quickly.

To switch cooking zone off

- ▶ Touch **0 • • P** on the slider.

To switching appliance off

- ▶ Touch the  button.



J31032013-R05

