


Range hood

DW-SL6 / DW-SL9 / DI-SL9

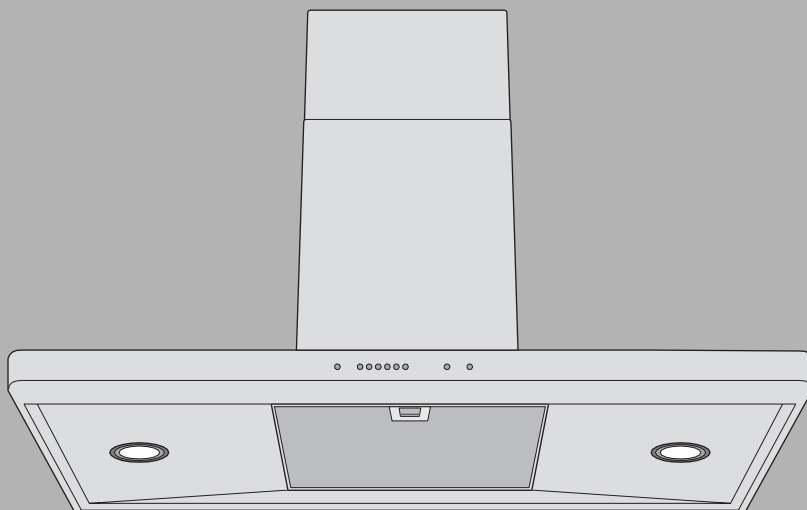

Operating instructions

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarize yourself with the appliance and get the best use out of it.

Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliance is reserved.

Symbols used



Denotes important safety precautions. Failure to observe said precautions can result in injury or damage to the appliance or fittings!

- ▶ Indicates step-by-step instructions.
 - Describes how the appliance reacts to the steps taken.
- Indicates a list.



Denotes useful tips for the user.

Validity

The model number corresponds to the first three digits on the identification plate. These operating instructions apply to the models:

Type	Model no.	Size system
DW-SL6	374	60
DW-SL9	379	90
DI-SL9	391	90

Variations depending on the model are noted in the text.

Contents

Safety precautions	4
Before using for the first time	4
Correct use	5
Children in the home	5
Note on use	6
Appliance description	8
Extraction model	8
Recirculation model	8
Fitted with	9
Construction	10
Operating and display elements	11
Use	12
Care and maintenance	14
Cleaning the housing	14
Cleaning the grease filter	15
Changing the halogen light	17
Changing the standard activated charcoal filter	18
Cleaning and replacing the long-life activated charcoal filter	19
Trouble-shooting	21
What to do if	21
Accessories and spare parts	22
Technical data	23
Disposal	24
Index	25
Repair service	27
Quick instructions	28

Safety precautions



The appliance corresponds to recognised technology standards and the relevant safety regulations. Proper use of the appliance is however essential to avoid damage and accidents. Please therefore follow the precautions given in these operating instructions.

In accordance with the requirements of IEC 60335-1:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or unless they have been given instruction concerning the use of the appliance by a person responsible for their safety.

Before using for the first time

- The appliance must be installed and connected up to the electricity supply according to the separate installation instructions. The necessary work should be carried out by a qualified fitter or electrician.
- Dispose of the packaging material in accordance with local regulations.

Correct use

- The appliance is designed for use in the home for extracting cooking fumes and smells from above the cooking surface.
- Any repairs, modifications or manipulations to the appliance, especially any electrically live parts, should only be carried out by the manufacturer, its Customer Services or similarly qualified persons. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance. If the appliance is not working properly or in case of a repair order, follow the instructions given in the 'Repair service' section. Please contact our Customer Services if necessary.
- Use original spare parts only.
- Retain these operating instructions for future reference. If you sell or pass the appliance on to a third party, please ensure these operating instructions, together with the installation instructions, accompany the appliance. In this way, the new owner can inform themselves about how to use the appliance correctly and read the pertinent safety precautions.

Children in the home

- Packaging material e.g. plastic and polystyrene can be dangerous for children. Danger of suffocation! Please keep packaging material away from children.
- The appliance is designed for use by adults who are familiar with these operating instructions. Children are often unable to recognise the danger of electrical appliances. Ensure proper supervision and do not allow children to play with the appliance – there is a danger that children can hurt themselves.

Note on use

- If the appliance is visibly damaged, do not use it. Contact our Customer Services.
- If the appliance is not operating properly, disconnect it from the electricity supply immediately.
- Caution: Accessible parts may become hot when used with cooking appliances.
- Do not flambé food underneath the hood as the grease filters if laden with grease could catch fire.
- If frying on the cooking surface, do not leave the frying appliance unattended. The cooking oil in the frying appliance could overheat and catch fire. Constantly monitor the temperature of the cooking oil, keeping it below the temperature at which it can catch fire. Change the cooking oil regularly – dirty oil catches fire more easily than clean oil.
- Clean the filters regularly. Failure to do so can increase the fire hazard due to the build-up of grease in the grease filter.
- Do not operate the individual cooking zones of the cooking surface without a pan on them or with an empty pan on them so as to avoid damaging the appliance or the kitchen fittings through a build-up of heat. Avoid open fires with oil, gas, wood and coal fired cookers.
- Ensure there is adequate ventilation when the extraction fan is on so as to avoid creating a disturbing underpressure in the kitchen and to achieve optimal air extraction.
- Avoid a cross-current of air, which could blow the cooking vapours over the cooking area.

- If another appliance – fuelled by gas or other fuels – is being used at the same time, ensure that there is a sufficient supply of fresh air. This does not apply to air recirculation units.
- With the simultaneous operation of firing (e.g. wood, gas, oil or coal-fired heating systems), safe operation is only possible providing a room negative pressure of 4 Pa (0.04 mbar) is not exceeded at the location of the appliance. Risk of toxic fumes! An adequate flow of fresh air must be guaranteed, e.g. via non-closable openings in doors and windows and combined with ventilation wall bricks for incoming and exhaust air or by other technical means.
- When carrying out maintenance work on the appliance, including replacing the light bulb, cut off the electricity supply to the appliance (remove the screw fuse from the holder or switch the circuit breaker off, or disconnect from the mains supply).
- When cleaning the appliance make sure no water gets inside the appliance. Use a moderately damp cloth. Do not spray the inside or outside of the appliance with water. Do not use a steam cleaner. If water gets inside the appliance, it can cause damage.

Appliance description

The appliance is designed to extract cooking fumes and smells from the cooking area. This particular model can be used to extract or to recirculate air.

Extraction model

The integrated fan extracts cooking fumes and smells from above the cooking surface. The air is cleaned through the grease filter and then fed through the exhaust air conduit to the outside.



When the appliance is in use, ensure there is a sufficient supply of fresh air to replace the air that is being extracted.

Recirculation model

The cooking fumes and smells above the cooking area after being filtered through the metal grease filter are passed through an activated charcoal filter. The filtered air is then circulated back into the room through the side openings.



If activated charcoal filters are not supplied with the appliance, these should be ordered and installed before using the appliance. Furthermore, the saturation indicator for the activated charcoal filters must also be activated.


Fitted with

- 1 extraction fan
- Illumination
- 1 metal grease filter
- 1 activated charcoal filter (not included in scope of delivery)

The extraction fan has 4 power levels.


- 1 = low, 2 = medium, 3 = high and intensive level.
- Power levels 1–3 can be used for longer periods of operation.
- The intensive level is for shorter bursts of intensive extraction of the cooking fumes and smells, e.g. when searing meat. The intensive level runs for a maximum of 5 minutes at a time.

Construction

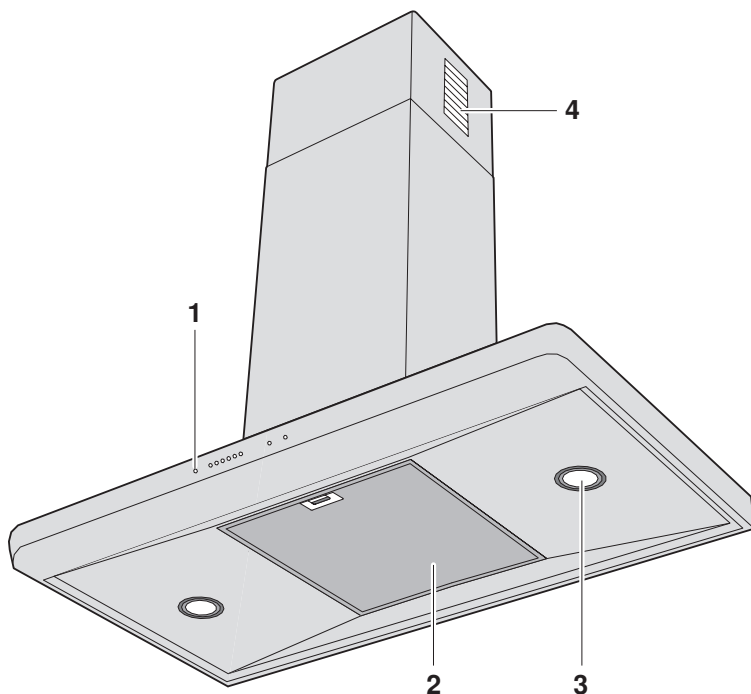

- 1** Operating elements
- 2** Metal grease filter
- 3** Illumination
- 4** Air recirculation with recirculation model

Operating and display elements

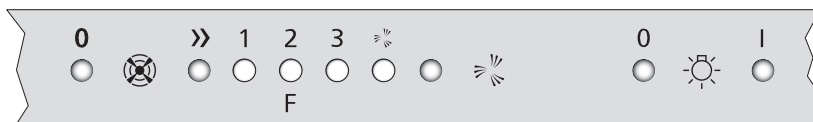

Keys

Operation

0 Switching off / resetting saturation indicator

» Switching on / power level

Intensive level

Intensive level

Illumination

0 Off

I On

Indicator lights

1 Extraction level 1

2 / F Extraction level 2 / saturation indicator for metal grease filter and long-life activated charcoal filter

3 Extraction level 3 / saturation indicator for standard activated charcoal filter

 Intensive level



Depending on the model and features, the specification of the appliance may differ from the standard specification described herein.

Use

Switching the appliance on / Selecting the power level

- ▶ Pressing the » button switches the appliance on at power level 1.
- ▶ To select power levels 2 or 3, repeatedly press the » button.
 - The indicator light shows which power level is currently being used.



We recommend switching the appliance on at power level 1 some 5 minutes before cooking. After you have finished cooking, allow the appliance to run for another 15 minutes. Use a low power level for normal cooking fumes and a higher power level for very strong cooking fumes and smells.

Intensive level

- ▶ Press the ⌘ button to switch the intensive level on for 5 minutes.
 - After this time has elapsed, the appliance switches back to the previously selected extraction level. If no extraction level was selected, the appliance switches off.
 - The indicator light ⌘ shows that the intensive level is activated.
- ▶ Press the » or ⌘ button to stop the intensive level before the 5 minutes is up.

Switching off the appliance

- ▶ Press the 0 button to switch off the extraction functions.



After you have finished cooking, allow the appliance to run for another 15 minutes so that the cooking smells can be extracted.

Illumination

- Use the **0** and **I** button to switch the illumination off or on.



The illumination can be used on its own.

Saturation indicator for metal grease filter and long-life activated charcoal filter

The indicator light **2 / F** flashes after 40 operating hours. The saturation level has been reached and the grease filter must be cleaned.

Saturation indicator for standard activated charcoal filter

The indicator light **3** flashes after 160 operating hours. The saturation level has been reached and the standard activated charcoal filter must be replaced.



The saturation indicator is deactivated at the factory. If the appliance is being used as a recirculation model, the saturation indicator must first be activated.

To activate the saturation indicator

- Depress the **>>** and **⌘** buttons at the same time for 3 seconds.
 - The indicator light **2 / F** flashes.
 - After 3 seconds the indicator light **3** flashes.
 - The saturation indicator is activated.

To deactivate the saturation indicator

- Depress the **>>** and **⌘** buttons at the same time again.
 - After 3 seconds the indicator light **3** flashes.
 - The saturation indicator is deactivated.

Care and maintenance

Cleaning the housing



Take care that no water gets into the housing! If water gets into the housing, it can cause damage.



Do not use abrasive cleaners, scouring pads, steel wool etc. to clean the appliance as they can damage the surface.

Cleaning the outside / inside

- Clean the outside using a slightly damp cloth – and detergent if necessary – and wipe dry.

Grease and condensate water can build up around the grease filter on the inside.

- Clean using a slightly damp cloth – and detergent if necessary – and wipe dry.

Cleaning the grease filter

The grease filter must be cleaned at least once a month with normal use or whenever the indicator light **2 / F** flashes. If properly cared for, the grease filter should provide unlimited years of service.

- ▶ Clean the grease filter in the dishwasher.
- ▶ Select an «intensive» – or «heavy» – wash programme with a warm pre-wash.




Cleaning may cause the grease filter to become discoloured. However, this will not affect the functioning of the filter in any way.

If you do not have a dishwasher:

- ▶ Clean the grease filter in the sink with hot water and detergent.
- ▶ Then soak the grease filter in hot water in the sink for about 2 hours and finally clean with a washing-up brush.

Removing the grease filter

- ▶ Push the grip **1** toward the back on the grease filter.
- ▶ Pull the grease filter down and out of the fixture. Take care not to damage the grease filter.

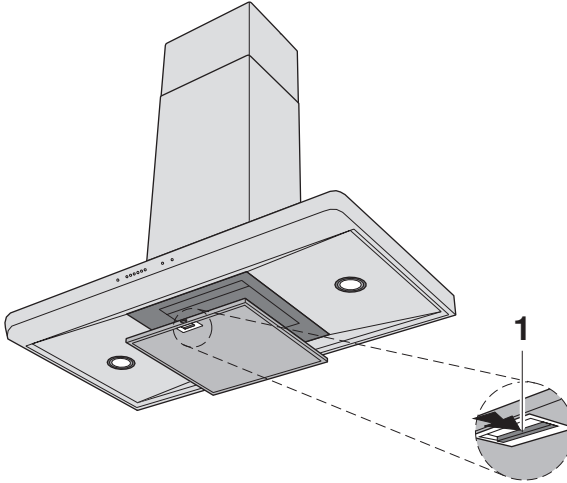

Installing the grease filter

- ▶ Insert the grease filter.
- ▶ Hold the **0** button depressed for at least 3 seconds until an acoustic signal sounds.
 - The indicator light **2 / F** goes out.

Changing the halogen light



Remove screw fuse or switch off circuit breaker.

Halogen lights get hot during operation! Allow to cool down first.


- ▶ Using a small screw driver, carefully remove the ring.

- ▶ Replace the defective halogen light with a bulb of the same type (max. 20 watts).



Avoid touching the new halogen light with bare hands. Use a soft, dry and grease-free cloth.

- ▶ Clean the ring and the glass.
- ▶ Fit the ring and the glass back into the openings.
- ▶ Put screw fuse back in or switch circuit breaker on again.

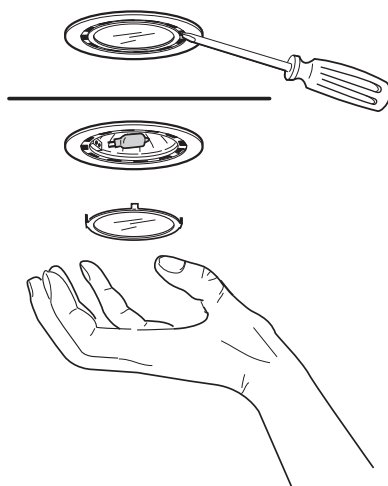

Changing the standard activated charcoal filter



Remove the appliance's fuse or switch the circuit breaker off.



Standard activated charcoal filters are only used in the recirculation model.

Standard activated charcoal filters become less effective with use. With normal use, they have to be changed at least every 4 months or whenever the indicator light **3** flashes. They cannot be washed or regenerated.



The dirty standard activated charcoal filter can be disposed of with the household waste.

- ▶ Remove and clean the metal grease filter.
- ▶ Turn the two locking knobs **A** by 90° and remove the standard activated charcoal filter by pulling it down.
- ▶ Insert the new standard activated charcoal filter until it latches at the back and secure it in the front with the locking knobs.
- ▶ Replace the metal grease filter.
- ▶ Replace the fuse or switch the circuit breaker back on again.
- ▶ Depress the **0** button for at least 3 seconds.
 - An acoustic signal sounds.
 - The indicator light **3** goes out.

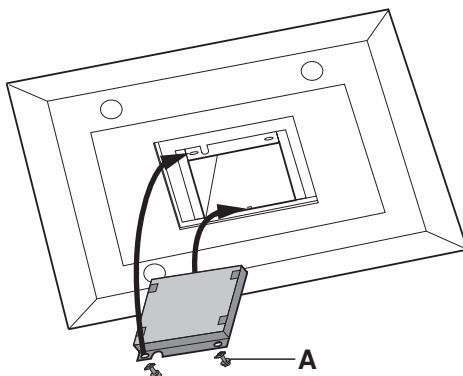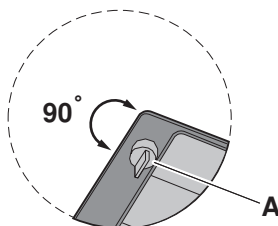

Cleaning and replacing the long-life activated charcoal filter



Remove the appliance's fuse or switch the circuit breaker off.

Long-life activated charcoal filters are only used in the recirculation model.


In contrast to the standard activated charcoal filter, the long-life activated charcoal filter can be cleaned and reactivated. With normal use of the appliance, the long-life activated charcoal filter should be cleaned each month or whenever the indicator light **2 / F** flashes. It can be cleaned in the dishwasher at 65 °C (select an «intensiv» or «heavy» wash programme). It should be cleaned separately so that no food remnants can harden on the filter. If no other options are available, the filter can also be soaked for an hour at 60 °C in a sink with a standard detergent. Afterward, rinse well. To reactivate the activated charcoal, the filter must be dried without its frame in an oven.

- Select top or bottom heating element or 100 °C hot air and allow the filter to dry 60 minutes on the wire shelf.



After about 3 years, the long-life activated charcoal filter must be replaced since its ability to absorb odours is reduced. The dirty long-life activated charcoal filter can be disposed of with the household waste.

- ▶ Remove and clean the metal grease filter.
- ▶ Turn the two locking knobs by 90° and remove the long-life activated charcoal filter by pulling it down.
- ▶ Take out the filter **1**, clean it, reactivate it and insert it back in the frame **2**. Be careful not to damage the filter. If necessary, exchange the used long-life activated charcoal filter for a new one.
- ▶ Reinsert the long-life activated charcoal filter until it latches at the back and secure it in front with the locking knobs.
- ▶ Replace the metal grease filter.
- ▶ Screw in the fuse or switch the circuit breaker on.
- ▶ Depress the **0** button for at least 3 seconds.
 - An acoustic signal sounds.
 - The indicator light **2** / F goes out.

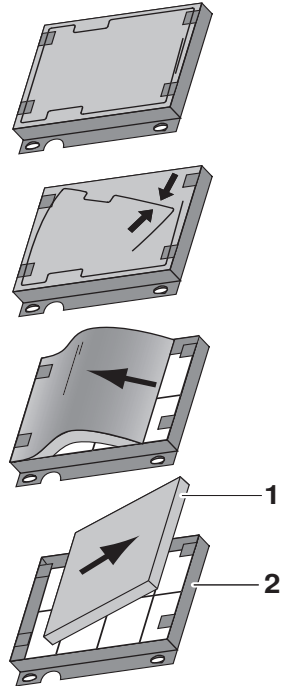

Trouble-shooting

What to do if ...

... the illumination is not working

Possible cause	Solution
■ Fuse or circuit breaker for electrical installations in the home is faulty.	▶ Change the fuse. ▶ Reset the circuit breaker.
■ Interruption in the power supply.	▶ Check the power supply.
■ The halogen light is faulty.	▶ Change the halogen light.


... the appliance is not extracting the cooking fumes and smells satisfactorily

Possible cause	Solutions
■ The grease filters are dirty.	▶ Clean the grease filters.
■ The activated charcoal filter (in recirculation models) is spent.	▶ Change the standard activated charcoal filter. ▶ Clean or change the long-life activated charcoal filter.


Accessories and spare parts

Please give model number and exact description when ordering parts.

 
Halogen light



Metal grease filter

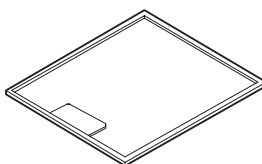

Standard activated charcoal filter

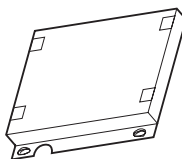

Long-life activated charcoal filter



The halogen light is also available from specialist retailers.

Technical data

Electrical connection

- ▶ See identification plate
 - ▶ Remove metal grease filter.
 - The identification plate is located on the inside of the appliance.

Disposal

Packaging

- All packaging materials (cardboard, plastic film (PE) and polystyrene (EPS)) are marked and should, if possible, be collected for recycling and disposed of in an environmentally friendly way.

Disconnection

- Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician!

Safety

- Disable the appliance to prevent accidents caused by improper use, especially through children playing.
- Pull the plug out of the mains socket or have the appliance disconnected from the mains by a qualified electrician. Then cut off the mains cable.

Disposal

- The old appliance should not be discarded as worthless rubbish. If disposed of correctly, the raw materials can be recovered for recycling.
- The  symbol on the identification plate warns that the appliance may not be disposed of in normal household waste.
- The appliance must be disposed of in accordance with local regulations on waste disposal. For more information on the handling, disposal and recycling of the product, please contact the local authorities, the local recycling facilities for household waste or the retailer from whom you purchased the appliance.

Index

A

Accessories.....	22
Activated charcoal filter	8
Long-life	19
Air recirculation with recirculation model	10
Appliance	
Switching off	12
Switching on	12
Appliance description	8

C

Care	14
Children in the home	5
Cleaning	14
Construction	10

D

Disconnection	24
Display elements	11
Disposal	24

E

Electrical connection	23
Extraction model	8

F

Faults	21
Features	9

G

Grease filter	
Cleaning	15
Installation	16
Metal grease filter	10
Removal	16
Saturation indicator	11, 13

H

Halogen light	17
---------------------	----

I

Identification plate	23
Illumination	10, 13
Intensive level	12

L

Long-life activated charcoal filter	19
Cleaning and replacing	19

M

Maintenance	14
Metal grease filter	10
Model no.	2

O

Operating elements	10, 11
--------------------------	--------

P

Packaging	24
-----------------	----

Q

Quick instructions..... 28

R

Recirculation model 8

Repair service 27

S

Safety 24

Safety precautions

 Before using for the first time . 4

 Children in the home..... 5

 Correct use..... 5

 Note on use..... 6

Saturation indicator 11

 Activating 13

 Deactivating..... 13

 Long-life activated charcoal

 filter 13

 Metal grease filter 13

 Standard activated charcoal

 filter 13

 Selecting the power level 12

 Spare parts..... 22

 Standard activated charcoal filter

 Changing..... 18

 Switching on..... 12

 Symbols 2

T

Technical data 23

Type 2

U

Use..... 12

Using for the first time..... 4

Repair service



The 'Trouble-shooting' section will help you to carry out small repairs yourself, saving you the time and trouble of calling out a service engineer and the cost that goes along with it.

Whether you contact us about a malfunction or an order, please always state the serial number (FN) and the model type of your appliance. Enter these details below and also on the service sticker which comes with the appliance. Stick it in a conspicuous place or in your telephone or address book.

FN


Appliance

You will also find the same details on the certificate of guarantee, the original sales invoice and the identification plate of the appliance.

- Remove metal grease filter.
 - The identification plate is located on the inside of the appliance.

Quick instructions

Please first read the safety precautions in these operating instructions!

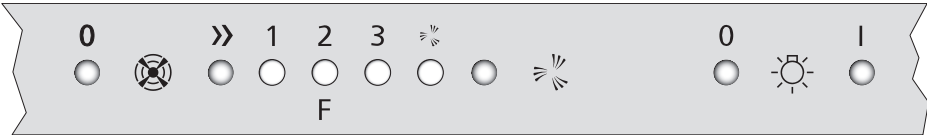

Operation

- 0** Switch off / Reset saturation indicator
- »** Switch on / Power level

Intensive level

Intensive level

Illumination

- 0** Off
- I** On

