

Operating instructions

Combi-Steam SE

Combi-steam cooker

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarize yourself with the appliance and get the best use out of it.

Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliances is reserved.

Validity

The model number corresponds to the first alphanumeric on the identification plate. These operating instructions apply to:

| Model designation | Model number | Type | Size system |
|--------------------------|---------------------|-------------|--------------------|
| Comhair-Steam SE 60 | 23010 | CSSEZ60c | 60-600 |
| Comhair-Steam SE 60 | 23010 | CSSEZ60g | 60-600 |

Variations depending on the model are noted in the text.

Colour operating instructions can be downloaded from the internet from www.vzug.com.

Table of contents

| | | | | | |
|----------|-------------------------------------------------------|-----------|-----------|-----------------------------------------|-----------|
| 1 | Safety precautions | 5 | 5.9 | End of operation | 22 |
| 1.1 | Symbols used..... | 5 | 5.10 | Switching the appliance off..... | 22 |
| 1.2 | General safety precautions..... | 5 | 5.11 | Emptying the water tank..... | 23 |
| 1.3 | Appliance-specific safety precautions | 5 | 6 | GourmetGuide | 23 |
| 1.4 | Instructions for use..... | 6 | 6.1 | Recipe book | 23 |
| 2 | Using for the first time | 9 | 6.2 | Own recipes..... | 25 |
| 3 | Appliance description | 10 | 6.3 | Professional baking..... | 27 |
| 3.1 | Construction | 10 | 6.4 | Wellness * | 28 |
| 3.2 | Operating and display elements..... | 10 | 6.5 | Hygiene * | 28 |
| 3.3 | Cooking space..... | 11 | 6.6 | Keep warm * | 29 |
| 3.4 | Accessories | 11 | 7 | EasyCook | 29 |
| 3.5 | Plate warmer..... | 12 | 7.1 | Overview of food groups..... | 29 |
| 4 | Operating modes | 13 | 7.2 | Selecting and starting foods..... | 29 |
| 4.1 | Overview of operating modes | 13 | 8 | Favourites | 30 |
| 4.2 | Steam..... | 13 | 8.1 | Creating favourites | 30 |
| 4.3 | Top/Bottom heat..... | 13 | 8.2 | Selecting and starting favourites | 30 |
| 4.4 | Hot air | 14 | 8.3 | Changing favourites | 30 |
| 4.5 | Hot air with steaming | 14 | 8.4 | Deleting favourites..... | 31 |
| 4.6 | Regeneration | 15 | 9 | Tips and tricks | 31 |
| 4.7 | PizzaPlus | 15 | 9.1 | Unsatisfactory cooking result... .. | 31 |
| 4.8 | Grill | 15 | 9.2 | General tips | 32 |
| 4.9 | Grill-forced convection..... | 16 | 9.3 | Saving energy..... | 32 |
| 4.10 | Top/Bottom heat humid | 16 | 10 | User settings | 32 |
| 4.11 | Hot air humid..... | 16 | 10.1 | Overview of user settings..... | 32 |
| 4.12 | Bottom heat | 17 | 10.2 | Adjusting user settings | 32 |
| 4.13 | Fast heating | 17 | 10.3 | Language | 33 |
| 5 | Using the appliance | 17 | 10.4 | Display | 33 |
| 5.1 | Filling the water tank | 18 | 10.5 | Date..... | 33 |
| 5.2 | Selecting and starting the operating mode | 18 | 10.6 | Clock | 33 |
| 5.3 | Checking and changing the settings | 19 | 10.7 | Notifications | 34 |
| 5.4 | Setting a duration | 19 | 10.8 | Descaling the appliance..... | 34 |
| 5.5 | Setting a delayed start / end time..... | 20 | 10.9 | Water hardness..... | 34 |
| 5.6 | Cancelling/ending the operating mode before time..... | 20 | 10.10 | Loudness..... | 34 |
| 5.7 | Changing the operating mode | 20 | 10.11 | Assistance functions | 34 |
| 5.8 | Timer | 21 | 10.12 | Temperature | 35 |
| | | | 10.13 | Childproof lock..... | 35 |

| | | |
|-----------|-----------------------------------------------|-----------|
| 10.14 | Appliance information..... | 35 |
| 10.15 | Demo mode..... | 35 |
| 10.16 | Checking the connection * | 35 |
| 10.17 | Factory settings..... | 36 |
| 11 | Care and maintenance | 36 |
| 11.1 | Cleaning the exterior..... | 36 |
| 11.2 | Cleaning the cooking space..... | 36 |
| 11.3 | Cleaning the appliance door..... | 36 |
| 11.4 | Cleaning the door seal | 37 |
| 11.5 | Replacing the door seal..... | 37 |
| 11.6 | Replacing the halogen light bulb | 37 |
| 11.7 | Cleaning the accessories and shelf guides ... | 37 |
| 11.8 | Descaling | 38 |
| 12 | Trouble-shooting | 40 |
| 12.1 | What to do if | 40 |
| 12.2 | After a power failure..... | 43 |
| 13 | Accessories and spare parts | 44 |
| 13.1 | Accessories | 44 |
| 13.2 | Special accessories | 45 |
| 13.3 | Spare parts | 45 |
| 14 | Technical data | 45 |
| 14.1 | Note for testing institutes | 45 |
| 14.2 | Temperature measurement | 46 |
| 14.3 | Product fiche | 46 |
| 14.4 | EcoStandby..... | 46 |
| 14.5 | Reference to «Open Source» licence..... | 46 |
| 15 | Disposal | 47 |
| 16 | Index | 48 |
| 17 | Service & Support | 51 |

1 Safety precautions

1.1 Symbols used



Denotes important safety precautions.

Failure to observe said precautions can result in injury or in damage to the appliance or fittings!



Information and precautions that should be observed.



Information on disposal



Information about the Operating Instructions

- ▶ Indicates step-by-step instructions.
 - Describes how the appliance reacts to the steps taken.
- Indicates a list.

1.2 General safety precautions



- Read the operating instructions before using the appliance for the first time!



- This appliance can be used by children aged 8 and above and by persons with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, provided they are supervised or have been instructed on the safe use of the appliance and have understood the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be undertaken by children without supervision.

- If an appliance is not equipped with a mains cable and a plug or other means for disconnecting from the mains with a contact opening on each pole complying with the conditions of overvoltage category III for full isolation, an isolating device must be incorporated into the permanently installed electrical installation in accordance with the installation regulations.
- If the mains cable of this appliance is damaged, it must be replaced by the manufacturer or its Customer Services or a similarly qualified person in order to avoid hazard.

1.3 Appliance-specific safety precautions



- **READ THE IMPORTANT SAFETY PRECAUTIONS CAREFULLY AND RETAIN FOR FUTURE USE.**
- **WARNING:** The appliance and its accessible parts get hot during use. Be careful not

to touch the heating elements. Children under 8 years of age must be kept away from the appliance unless they are constantly supervised.

- **WARNING:** Accessible parts can get hot during use. Keep young children away from the appliance.
- This appliance is intended for use in the home and similar settings such as: in staff kitchens in shops, offices and other commercial establishments; in agricultural establishments; by guests in hotels, motels and other accommodation establishments; in bed and breakfast establishments.
- A heatable appliance drawer and its contents get hot.
- Under no circumstances use a steam cleaner to clean the appliance.
- **WARNING:** Before replacing the light bulb, ensure the appliance is switched off and disconnected from the mains power supply to avoid possible electric shock.
- To avoid overheating, the appliance must not be installed behind a decor door.
- This appliance is not intended for use in vehicles or on board ships or aircraft or in

rooms where there are special conditions such as, for instance, a corrosive or explosive atmosphere (dust, steam or gas) or condensing moisture.

- **WARNING:** Never heat food or liquids in sealed containers such as cans or bottles as they are liable to explode due to overpressure.
- See the «Accessories» section for the proper use of insertable parts.

1.4 Instructions for use

Before using for the first time

- The appliance must be installed and connected to the electricity supply in accordance with the separate installation instructions. Have a qualified fitter/electrician carry out the necessary work.

Correct use

- The appliance is designed for use in the home for preparing food. Under no circumstances flambé or cook food using a lot of fat in the cooking space! No liability is assumed for any damage caused by improper use or incorrect handling.
- Never use the appliance to dry animals, textiles or paper, etc.
- Do not use the appliance as a room heater.
- The appliance should only be installed and operated at an ambient temperature of 5 °C to 35 °C. If frost develops, residual water left in the pumps could freeze and cause damage.

- Any repairs, modifications or manipulations to the appliance, especially any electrically live parts, may only be carried out by the manufacturer, its Customer Services or a similarly qualified person. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance. If the appliance is not working properly or in case of a repair order, follow the instructions given in the «Service & Support» section. Please contact our Customer Services if necessary.
- Use original spare parts only.
- Retain these operating instructions for future reference.
- The appliance corresponds to recognized technology standards and the relevant safety regulations. Proper use of the appliance is essential to avoid damage and accidents. Please therefore follow the precautions given in these operating instructions.

Note on use

- Use the childproof locking facility.
- If the appliance is visibly damaged, do not use it. Contact our Customer Services.
- If the appliance is not operating properly, disconnect it from the power supply immediately.
- Ensure there are no foreign bodies or pets in the cooking space before closing the appliance door.
- Objects that could pose a danger if the appliance were accidentally switched on should not be stored in the cooking space or the heatable appliance drawer. Do not store food or any temperature-sensitive or inflammable materials, e.g. cleaning agents, oven sprays, etc., in the cooking space or the heatable appliance drawer.
- For appliances with grill: Leave the appliance door closed when grilling. The heat could otherwise damage the operating and display elements or the fitted units above.

Caution: Risk of burns!

- The appliance gets very hot when in use. The appliance door also gets hot.
- Steam and/or hot air may escape from the cooking space when the appliance door is opened.
- The appliance will remain hot for some time after it is switched off and will only cool down slowly to room temperature. Allow sufficient time for the appliance to cool down before, for instance, cleaning it.
- Overheated fat and oil can easily catch fire. Heating oil in the cooking space to sear meat is dangerous and should not be done. Never attempt to extinguish burning oil or fat with water. Danger of explosion! Smother the flames with a fire blanket. Keep doors and windows closed.
- Do not pour spirits (brandy, whisky, schnapps, etc.) over hot food. Danger of explosion!
- Do not leave the appliance unattended when drying herbs, bread, mushrooms, etc. If the foodstuff dries out too much, it can pose a fire hazard.
- If you notice smoke possibly coming from the appliance itself or from inside the cooking space, keep the appliance door closed. Disconnect the appliance from the power supply.
- Accessories get hot in the cooking space. Use protective gloves or oven cloths.

Caution: Risk of injury!

- Be careful not to put fingers in the door hinges as there is otherwise a risk of injury if the appliance door is moved. Particular care should be taken when children are around.
- For cookers: A hob guard can be fitted to protect small children. Hob guards are available from specialist retailers.

Caution: Risk to life!

- Danger of suffocation! Keep packaging material, e.g. plastic film and polystyrene, away from children. Packaging material can be dangerous for children.

How to avoid damaging the appliance

- Close the appliance door carefully.
- For appliances with visible bottom heating element: Do not place any objects directly on the bottom heating element.
- Do not use protective aluminium inserts with appliances with no visible bottom heating element.
- Do not use objects that can rust in the cooking space.
- Using knives or cutting wheels on the baking tray will visibly damage the surface.
- To prevent corrosion, leave the appliance door open in the at-rest position until the cooking space has cooled down.
- When cleaning the appliance, make sure no water gets inside it. Use a moderately damp cloth. Do not spray the outside or the inside of the appliance with water. If water gets inside the appliance, it will cause damage.

2 Using for the first time

Before operating the newly installed appliance for the first time, the following steps should be taken:

- ▶ Remove packaging and transport materials as well as any protective blue film from out of the cooking space.
- ▶ Clean the cooking space and the accessories.
- ▶ Press the power button.
 - The appliance switches on.

Version 1 *

- * Depending on the software version
 - Various user settings necessary for operation, such as language, time and temperature unit, appear in the display one after the other.
- ▶ Make the settings and confirm.
- ▶ Fill the water tank with fresh, cold drinking water and slot into position in the water tank compartment.




Language and time must be set so that the appliance can be operated.

Version 2 *

- * Depending on the software version
- ▶ Set the time (see page 33).
- ▶ If necessary, adjust the user settings to the water hardness (see page 34).
- ▶ Fill the water tank with fresh, cold drinking water and slot into position in the water tank compartment.

Completing the initial set-up

- ▶ Heat the empty cooking space (without wire shelves, baking trays, etc.) using the  operating mode at 180 °C for about 30 minutes.




As there is likely to be some smoke and odour given off, we recommend ventilating the room well during this phase.



All temperatures in these operating instructions are in degrees Celsius. Apply the corresponding conversions via the user setting «Degrees Fahrenheit» (see page 35).


3 Appliance description

3.1 Construction

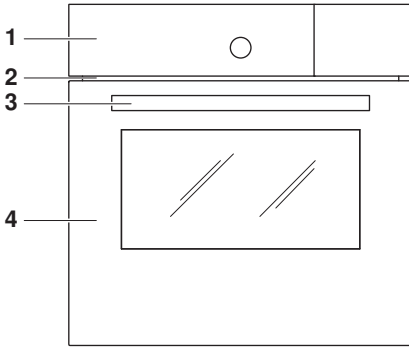


- 1 Operating and display elements
- 2 Ventilation opening
- 3 Door handle
- 4 Appliance door

3.2 Operating and display elements

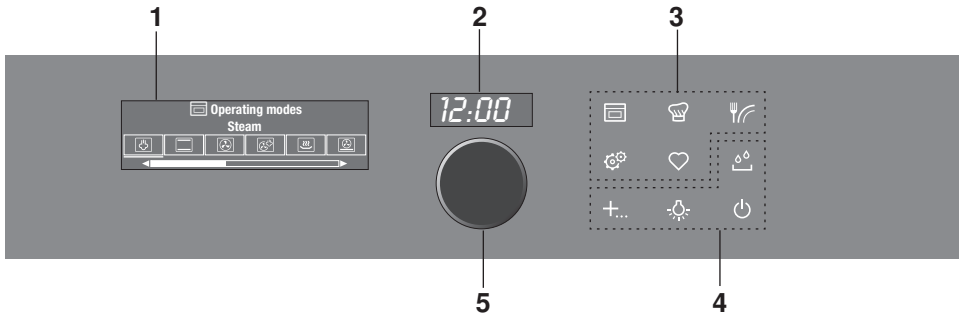

- 1 Display
- 2 Digital display (duration/timer/time)
- 3 Menu buttons
- 4 Action buttons
- 5 Adjusting knob / switching on appliance

Overview of touch buttons

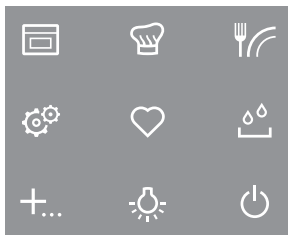


- Operating modes
- GourmetGuide
- EasyCook
- User settings
- Favourites
- Water tank
- Extra functions
- Cooking space illumination
- Switch off

3.3 Cooking space



Using protective inserts or aluminium foil can damage the appliance.

Do not place any protective insert or aluminium foil on the floor of the cooking space.

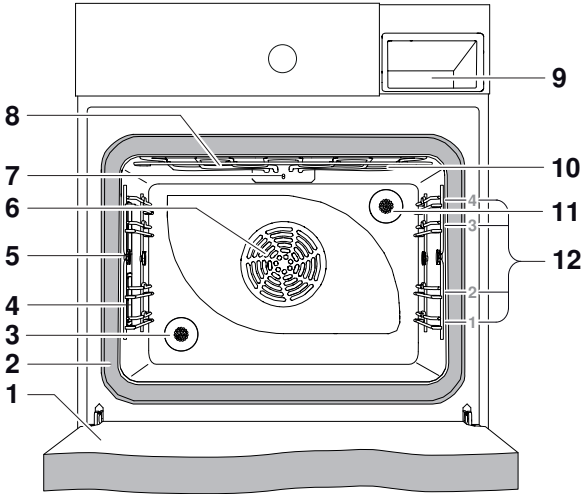

- | | | | |
|---|----------------------------|----|---------------------------|
| 1 | Appliance door | 7 | Temperature sensor |
| 2 | Door seal | 8 | Cooking space ventilation |
| 3 | Climate sensor | 9 | Water tank compartment |
| 4 | Cooking space illumination | 10 | Top heat |
| 5 | Knurled nut | 11 | Steam inlet |
| 6 | Hot air blower | 12 | Levels (labelled) |



The bottom heating element is beneath the cooking space floor.

3.4 Accessories



Incorrect handling can cause damage!






Do not use knives or cutting wheels on the accessories.

 
Observe the correct use of the grill and oven furniture!

Dual enamel baking tray



- Baking tin e.g. for flans, bread and biscuits
- Use together with the wire shelf as a drip tray.
- If not fully covered by the baking, its shape can become distorted during baking. This is normal. As it cools down, it will go back to its original form.

- Not suitable for use with the ,  and  operating modes.
- ▶ Instead use the stainless steel tray.
- Not suitable for use with the  and  operating modes if the temperature is set to under 150 °C. With frequent use, the appearance of the surface can change. However, this does not affect the functionality.




- ▶ Ensure that the «sloped» side **1** of the baking tray is to the back of the cooking space.




- ▶ Only use the normal way round – not upside down.

 Perforated cooking tray




- For cooking fresh or frozen vegetables, meat and fish.
- For standing ramekins, preserving jars, etc. on.
- For extracting juice from berries, fruit, etc.

 Wire shelf



 - For standing roasting and baking tins on
- For standing meat, frozen pizza, etc. on
- ▶ Ensure that the bar **1** is to the back of the cooking space. This enables the food to be removed safely from the cooking space.



- Outside the cooking space – inverted – serves as a cooling rack.


Special accessories



Place any accessories not included in the scope of delivery on the wire shelf.

- ▶ Special accessories can be found at: www.vzug.com

3.5 Plate warmer

- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Put the wire shelf at level 1 and place the tableware on it.
- ▶ Press the **+**... touch button.
- ▶ Select .
- ▶ Set the required duration.



Select a duration of at least 1 hour.

- ▶ Set the end time if necessary.
- ▶ Switch on the «Plate warmer» by selecting ▶.
 - The «Plate warmer» switches off automatically when the set duration is over.

4 Operating modes

4.1 Overview of operating modes

All the operating modes and fast heating are described below.




Follow the advice given in «Tips and tricks» (see page 31) and in «EasyCook».

4.2 Steam



| | |
|-------------------|-----------|
| Temperature range | 30–100 °C |
| Recommended value | 100 °C |
| Level | 1 to 4 |

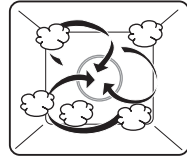

The cooking space is heated simultaneously by steam and hot air. The food is heated up or cooked by steaming.

Uses

- Cooking vegetables, rice, cereal products, pulses and egg dishes
- Poaching meat, poultry and fish
- Extracting juice from fruit and berries
- Making yoghurt
- Preserving




Possible to cook on several levels simultaneously.

- ▶ Place the stainless steel tray underneath the perforated cooking tray.

4.3 Top/Bottom heat



| | |
|-------------------|-----------|
| Temperature range | 30–230 °C |
| Recommended value | 200 °C |
| Level | 2 |

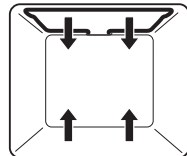

The cooking space is heated by the top and bottom heating elements.

Uses

- Classic operating mode for cooking and baking on one level
- Cakes, biscuits, bread and roasts




Use a dark enamelled tray or a black tray or tin for crispy results.

4.4 Hot air



| | |
|-------------------|------------|
| Temperature range | 30–230 °C |
| Recommended value | 180 °C |
| Level | 2 or 1 + 3 |

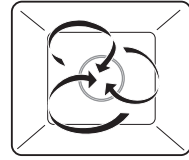


A heating element behind the back wall of the cooking space heats up the air inside the cooking space, which is circulated evenly.

Uses

- Particularly suitable for baking savouries and biscuits on several levels at the same time
- Cakes, bread and roasts



Select a lower temperature (reduce by approximately 20 °C) than for  as the heat transfer is more efficient.

4.5 Hot air with steaming



| | |
|-------------------|------------|
| Temperature range | 80–230 °C |
| Recommended value | 180 °C |
| Level | 2 or 1 + 3 |



A heating element behind the back wall of the cooking space heats up the air inside the cooking space, which is circulated evenly. With condensing steam, the energy is transferred more efficiently to the food than when cooking with hot air, which accelerates the cooking process.

Steam over 100° C is not visible.





Uses

- Puff pastries, yeast pastries, bread, plaited bread
- Baked dishes and gratins
- Meat
- Frozen and convenience foods



Particularly suitable for low-fat cooking of frozen foods such as oven chips and spring rolls.


The supply of steam can be switched off and on again during operation.

- ▶ Start the operating mode.
- ▶ To switch off the supply of steam, select  «Switch steaming off» in the settings of the operating mode.
 - The  symbol goes out.
- ▶ To switch the supply of steam on again, select  «Switch steaming on».
 - The  symbol illuminates.

4.6 Regeneration



| | |
|-------------------|-----------|
| Temperature range | 80–200 °C |
| Recommended value | 120 °C |
| Level | 1 to 4 |

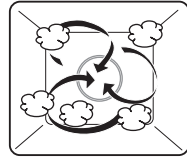

The cooking space is heated by steam and hot air. The food is reheated gently without drying it out.

Uses

- Reheating precooked foods and convenience foods




Possible to regenerate on several levels simultaneously.

4.7 PizzaPlus



| | |
|-------------------|-----------|
| Temperature range | 30–230 °C |
| Recommended value | 200 °C |
| Level | 2 |

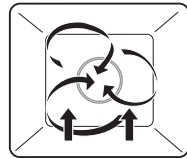

The cooking space is heated by hot air and bottom heat. The base of the food is baked particularly intensively.

Uses

- Pizza
- Flans and quiches




Use a dark enamelled tray or a black tray or tin without baking paper for very crispy results.

4.8 Grill



| | |
|-------------------|----------|
| Temperature range | 4 levels |
| Recommended value | Level 3 |
| Level | 3 or 4 |

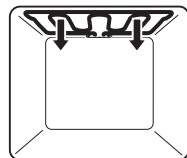

The cooking space is heated by the grill element.

Uses

- Flat food for grilling, e.g. steaks, chops, chicken parts, fish and sausages
- Gratinating
- Toast
- Place the food to be grilled directly on the wire shelf.
- Line the baking tray with aluminium foil and then place it underneath the wire shelf.

4 Operating modes




For best results, preheat the cooking space for 3 minutes before introducing the food.

4.9 Grill-forced convection



| | |
|-------------------|-----------|
| Temperature range | 30–250 °C |
| Recommended value | 200 °C |
| Level | 2 or 3 |

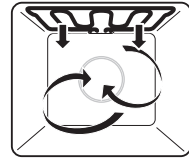

The cooking space is heated by the grill element. The hot air fan distributes the air evenly in the cooking space.


Uses

- Suitable for a whole chicken
- Large, bulky food for grilling
- ▶ Put food for grilling in a porcelain or glass dish or directly on the wire shelf.
- ▶ Line the baking tray with aluminium foil and then place it underneath the wire shelf.

4.10 Top/Bottom heat humid



| | |
|-------------------|-----------|
| Temperature range | 30–230 °C |
| Recommended value | 200 °C |
| Level | 2 |

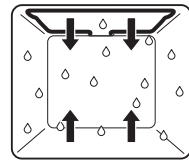

The cooking space is heated by the top and bottom heating elements. The steam produced is largely retained in the cooking space. The food retains its moisture.


Uses

- Bread, plaited bread, roasts and gratins on one level
- Low temperature cooking

4.11 Hot air humid



| | |
|-------------------|------------|
| Temperature range | 30–230 °C |
| Recommended value | 180 °C |
| Level | 2 or 1 + 3 |

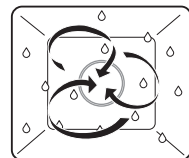


A heating element behind the back wall of the cooking space heats up the air inside the cooking space, which is circulated evenly. The steam produced is largely retained in the cooking space. The food retains its moisture.

Uses

- For savouries and biscuits on two levels at the same time
- For yeast pastries and bread on two levels at the same time
- Gratins and baked dishes




Select a lower temperature (reduce by approximately 20 °C) than for  as the heat transfer is more efficient.

4.12 Bottom heat



| | |
|-------------------|----------|
| Temperature range | 6 levels |
| Recommended value | Level 3 |
| Level | 2 (or 1) |

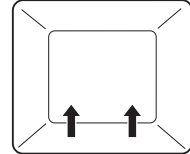

The cooking space is heated by the bottom heating element.




Uses





- Baking flan bases
- Making preserves



Use a dark enamelled tray or a black tray or tin for crispy results.

4.13 Fast heating

For fast heating , the cooking space is heated using hot air and bottom heat, which shortens the preheating time. Fast heating can be used with the following operating modes:  and .

- ▶ Select the desired operating mode and adjust the settings.
- ▶ To start the operating mode, select .
- ▶ Select  «Switch fast heating on» in the settings for the operating mode.
 - Above , the  symbol illuminates.

As soon as an acoustic signal is emitted:


- put the food into the cooking space.






 



5 Using the appliance

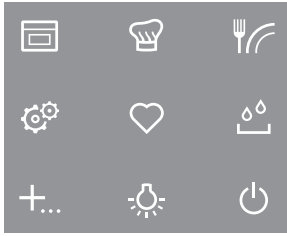The different main menus and functions are selected by pressing the corresponding touch button. Selected touch buttons and functions are illuminated in white; other selectable functions are illuminated in orange.

Settings and functions that cannot be selected or changed are greyed out in the various menus.

 The following touch buttons with the following main menus and functions are available:



-  Operating modes
-  GourmetGuide
-  EasyCook
-  User settings
-  Favourites
-  Water tank
-  Extra functions
-  Cooking space illumination
-  Switch off


Adjusting knob functions

- Press
- Switching on the appliance
 - Selecting/opening a submenu, setting, etc.
 - Confirming/closing a message
 - Activating/deactivating a user setting
- Turn
- Navigating within the submenus
 - Changing/setting a value, user setting

5.1 Filling the water tank



Do not use demineralized (filtered) or distilled water.

- ▶ If the appliance is switched off: first press the adjusting knob.
- ▶ Press the  touch button.
 - The water tank is ejected, if activated.
- ▶ Remove the water tank to fill it.
- ▶ Fill the water tank with fresh, cold drinking water and seal it with the cover.
- ▶ Slot the filled water tank into position in the water tank compartment.

Refilling the water tank

The contents of the water tank normally suffice for one cooking session.

If «Please refill water» appears in the display:

- The water tank is ejected, if activated.
- Any operating mode or application that is running is stopped as there is insufficient water.

- ▶ Fill the water tank with water, then put it back.
 - The application is resumed.

If «Please fill with water» appears in the display:

- The water tank is not ejected.
- Any running operating mode or application will remain active.


- ▶ To close the message, select .

If, however, the water tank needs to be refilled:

- ▶ Fill the water tank with a maximum of 0.5 l of water as otherwise water could spill over at the end of operation.

5.2 Selecting and starting the operating mode

- ▶ If the appliance is switched off: first press the adjusting knob.


- ▶ If the appliance is in another menu: press the  touch button.
 - The selection of operating modes appears in the display.
- ▶ Select the operating mode.
 - The operating mode settings appear in the display; a recommended value appears above the temperature.
- ▶ Set the values for duration, end time and temperature or temperature level as required and confirm.

Press and go

Once all the necessary settings for the operating mode have been made, a bar appears in the display and counts down 20 seconds. If no further settings are made during this time, operation starts automatically. If a setting is changed, Press and go starts again.




The duration of Press and go can be adjusted (see page 35) or it can be deactivated in the user settings.

- ▶ To start operation immediately, i.e. without Press and go, select .
 - If set, the countdown to the time remaining appears in the display and in the digital display.







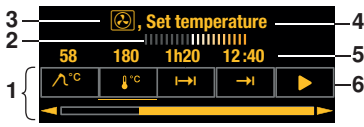


The operating mode selected cannot be changed once it has started.

Display overview



The diagram shows a digital display with the following elements labeled:

 - 1: A horizontal bar at the bottom of the display, likely representing the 'Press and go' countdown.
- 2: The top section of the display showing 'Set temperature' and a progress bar.
- 3: The left side of the display showing the current temperature '58' and a symbol for the selected operating mode.
- 4: The right side of the display showing the end time '12:40' and a right-pointing arrow.
- 5: The middle section of the display showing the set temperature '180' and the duration '1h20'.
- 6: The bottom section of the display showing symbols for temperature adjustment (up/down arrows) and a right-pointing arrow.

| | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>3 ————  Set temperature ———— 4</p> <p>2 ————  ———— 5</p> <p>1 {  °C  °C  —   } ———— 6</p> | <p>1 Operating mode settings</p> <p>2 Press and go</p> <p>3 Operating mode with symbol</p> <p>4 Current position of the adjusting knob / selected setting</p> <p>5 Set values / recommended values</p> <p>6 Symbols for settings</p> |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

5.3 Checking and changing the settings


- ▶ Select the symbol for the desired setting.
- ▶ To change the value, turn the adjusting knob to the right or left.
- ▶ Press the adjusting knob to confirm the setting.
 - The operating mode settings are displayed.
 - The changed value can be seen above the corresponding symbol.



The end time can only be changed during the first 60 seconds of operation.

5.4 Setting a duration

The operating mode selected ends automatically when the operating time is up.

- ▶ Select the desired operating mode.
- ▶ Select  in the operating mode settings.
- ▶ Set the desired duration – max. 9 hours and 59 minutes – and confirm.
 - The duration is displayed in the operating mode settings as well as the end time which is calculated based on this value.
 - End of operation / duration finished (see page 22)

5.5 Setting a delayed start / end time

The delayed start is activated when for the operating mode selected both the duration and the end time are set.

The appliance switches automatically on and off again at the desired times.




Perishables should not be kept unrefrigerated.


Before setting the delayed start

- ▶ Place the food in the cooking space.
- ▶ Select the desired operating mode.
- ▶ Set the temperature.
- ▶ Set the duration.



 


Setting a delayed start

- ▶ Select **→I** in the operating mode settings.
 - The current end time calculated using the duration is displayed.
- ▶ Set the desired end and confirm.
 - The time remaining to the start of operation is displayed.
 - After 3 minutes, the display goes out and the  touch button is illuminated in white. The display can be called up again at any time by pressing the adjusting knob.
 - The appliance remains switched off until 3 minutes before the automatic start of operation.
- ▶ Check and change the settings (see page 19).

Example

- ▶ Select the  operating mode and 180°C.
- ▶ At 8:00, set a duration of 1 hour and 15 minutes.
- ▶ Set the end time to 11:30.
 - The appliance will automatically switch on at 10:15 and off again at 11:30.

5.6 Cancelling/ending the operating mode before time



- ▶ In the operating mode settings, select **■** or press the  touch button.
 - An acoustic signal is emitted.
 - The selected operating mode is cancelled.
 - The following appears in the display: « Residual heat» and, for example: « Hot air cancelled».
- ▶ If you wish to start a new operating mode, press the .
- ▶ If you wish to switch off the appliance, press the .

5.7 Changing the operating mode

If no operating mode is running:

- ▶ Select **↺** in the settings of the current operating mode.
 - The operating modes menu is displayed.


If an operating mode is already running:

- ▶ Select **■** or press the .
- The set operating mode is cancelled.
- ▶ Press the  touch button and select a new operating mode.

5.8 Timer

The timer functions like an egg timer. It can be used at any time and independently of all other functions.

Setting and starting the timer

- ▶ Press the **+**... touch button.
- ▶ Select .
 - A suggested value of «10min» appears in the display.
- ▶ Turn the adjusting knob and set the desired duration.
 - The duration and the end time for the timer appear in the display.


The timer can be set for:

- up to 10 minutes in 10-second intervals, e.g. = 9 minutes and 50 seconds;
- over 10 minutes in 1-minute intervals, e.g. = 1 hour and 12 minutes;
- over 10 hours in 1-hour intervals, e.g. = 18 hours.

The maximum timer duration is 99 hours.


- ▶ Press the adjusting knob to confirm.
 - The timer starts.
 - If there is no operating mode running with a set duration, the remaining time on the timer will be displayed in the digital display.
 - The **+**... touch button is illuminated in white.
 - If the appliance was in another menu before the timer was set, e.g. operating modes: the menu or the submenu selected within it, e.g. a running operating mode, appears.
 - If the appliance was not in another menu: the display goes black.

Checking and changing


- ▶ Press the **+**... touch button.
- ▶ Select .
 - The countdown to the time remaining appears in the display.
- ▶ Shorten or extend the time by turning the adjusting knob.
- ▶ Confirm this shortening or extending of the time.

When the timer finishes

When the set duration is up:

- An acoustic signal is emitted.
- «Timer finished» appears in the display.
- ▶ To close the message, select .

 
Switching the timer off before time

- ▶ Press the **+**... touch button.
- ▶ Select .
 - The countdown to the time remaining appears in the display.
- ▶ Set the timer to 0 by turning the adjusting knob and confirm.

Or, if the timer is the only active function:




- ▶ Press the  touch button.

Or, to switch off the appliance:

- ▶ Press the  touch button 2x.


5.9 End of operation

When the set duration is up:

- The selected operating mode ends automatically.
- An acoustic signal is emitted.
- Three options are displayed:
- Select  to choose a new operating mode
- Select  to extend the operation
- Select  to switch the appliance off.
 - The appliance switches off automatically after 3 minutes without interaction.



You can adjust the appliance end time individually (see page 33).

- As long as the temperature is above 80 °C,  «Residual heat» appears in the display.



Food can be kept warm with residual heat for some time.

As soon as the temperature falls below 80 °C, all the displays go out.
The cooling fan can continue to run.

For all operating modes that use steam, steam reduction can take place at the end of the cooking process. The steam is gradually released from the cooking space into the atmosphere – this takes about 1 minute. This means that there is no sudden rush of steam when the appliance door is opened; it can, however, be opened at any time.

Removing food from cooking space






Risk of scalding!

Hot steam or hot air may escape from the cooking space when the appliance door is opened.



The accessories get hot. Use protective gloves or oven cloths.


- ▶ Take the food out of the cooking space when done.
- ▶ Any condensate or food particles in the cooking space must be completely removed after each cooking session with steam.
- ▶ Wipe away traces of water or soiling with a soft cloth to prevent corrosion and unpleasant odours.
- ▶ Leave the appliance door open in the at-rest position until the cooking space has cooled down and dried out.

5.10 Switching the appliance off

- ▶ Press the  touch button.
 - An acoustic signal is emitted.
 -  «Residual heat» appears in the display.
 - The following message appears in the display after all operating modes with steam: «Draining appliance. Please do not remove the water tank.»
- ▶ Press the  touch button again.
 - All touch buttons go out.
 - All functions are ended and switched off.

Or at the end of operation:

- ▶ Select the  option in the display.
 - An acoustic signal is emitted.
 - The following appears in the display:  «Residual heat».

- ▶ Press the  touch button.
 - All touch buttons go out.
 - All functions are ended and switched off.



The appliance is switched off if none of the touch buttons are illuminated any more and the display is dark.

The cooling fan can continue to run.

5.11 Emptying the water tank




Risk of scalding!

The water in the tank may be hot. If «Please do not remove the water tank» appears in the display, the temperature of the residual water is too high. Do not remove the water tank!

For safety reasons, the residual water is not pumped off until the temperature has fallen below a certain level.

When the appliance is switched off, the residual water is pumped back into the water tank.


The following appears in the display: «Water is being pumped off». When the water has been pumped back:

- ▶ Press the  touch button.
 - The water tank is ejected, if activated.
- ▶ Remove, empty and dry the water tank.
- ▶ Put the water tank back.



Any operating mode can be started again.

6 GourmetGuide

The  GourmetGuide encompasses several programmes which make preparing meals as easy as possible for you. The following programmes can be called up:



Recipes



Keep warm *



Professional baking



* Depending on the software version

6.1 Recipe book

A recipe book contains recipes which are tailored to suit the particular appliance. These are already programmed into the appliance and run automatically once started.




The «Recipe book» function allows you to cook by following a recipe. To use this function, you must first order the recipe book (subject to charge) before you are able to activate it in the appliance.

The following recipe books are available for your appliance:

-  Bi Baking treats
-  Si Magical steaming

Unlocking a recipe book





When you buy a recipe book, you receive a password which is used to unlock the recipe book in the appliance. After it has been unlocked, the recipes are displayed in the appliance.

- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Press the  touch button.
- ▶ Select .
- ▶ Select the recipe book that you wish to unlock.
 - The following appears in the display: «Do you want to unlock the recipe book?».
- ▶ Select «Yes».
- ▶ Enter the password using the on-screen keypad and confirm by selecting .
- The recipe book is now unlocked.

Starting a recipe




For recipes that do not require preheating, place the food in the cold cooking space.

- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Fill the water tank with fresh, cold drinking water and slot into position in the water tank compartment.
- ▶ Press the  touch button.
- ▶ Select .
- ▶ Select the desired recipe book or  «Own recipes».
- ▶ To select a recipe, choose .
- ▶ Select a recipe.
 - The recipe settings are displayed.
- ▶ If you wish, set the end time or delayed start.




When cooking recipes from recipe books, a delayed start is only possible if the cooking space does not need to be preheated and the food does not need to be stirred or turned partway through, for example.

- ▶ To start the recipe, select .
- The recipe starts.
- The display shows the current recipe step, the time remaining in this step and the entire duration of the recipe.
- The digital display shows the remaining time for the current recipe step.


In the course of the recipe

In the course of the recipe, it may be necessary to open the appliance door, e.g. to turn over the food or to spread a topping over it. In such an instance, operation is paused and the display shows instructions on what to do next.

To continue the recipe, proceed as follows:

- ▶ Open the appliance door.
- ▶ Carry out the action, e.g. turn over food.
- ▶ Close appliance door and select  in the display.
 - The recipe will continue to run.

Cancelling the recipe




- ▶ In the recipe settings, select .
- The following appears in the display: «Should the current recipe be cancelled?»

- ▶ To abort the recipe, select «Yes».
 - The recipe is cancelled.

6.2 Own recipes

Up to 24 of your own favourite recipes can be created and saved. A recipe can consist of several steps with any operating modes (including Professional baking), pauses and hold times, which run automatically once started. You can also change and save existing recipes.

Creating your own recipe



- ▶ If the appliance is switched off: first press the adjusting knob.
- ▶ Press the  touch button.
- ▶ Select .
- ▶ Select .
- ▶ To create a new recipe, select **+**.
 - The selection of operating modes including professional baking appears in the display.
- ▶ Select the desired operating mode.
- ▶ Set the duration, temperature or temperature level for step 1.




If you are only making temperature settings, this step takes as long as is necessary for the cooking space to reach the required temperature.

- ▶ To confirm the settings, select **✓**.
- ▶ To add a new step, select **+**.
- ▶ Set an operating mode, pause or hold time for step 2.



For the intermediate step  «Hold», the heating continues to run and the cooking space temperature remains constant. For the intermediate step  «Pause», the cooking space is not heated any more and the temperature drops.

After a hold or pause step, a preheating stage can be set.

- ▶ To save the settings, select **✓**.
 - The overview of the set steps is displayed.
- ▶ Set additional steps in the same way. A recipe can consist of up to 9 steps.
- ▶ To save the recipe, select .
 - The overview of the available storage spaces is displayed.
- ▶ Select the desired (empty) storage space and confirm.
- ▶ Enter the recipe name using the on-screen keypad and confirm by pressing **✓**.
 - The recipe is now saved.
 - The following appears in the display: «Do you want to run the recipe?» If you do not wish to run the recipe, you will return to the recipes main menu.


Step duration

The duration of a step depends on whether values have been set for the duration, temperature or temperature level. If multiple values have been set, e.g. the duration and the temperature, only one of these takes priority for the step duration.


The table below shows the priorities in descending order:

| | Setting |
|---|---------------------------------|
| 1 | Duration |
| 2 | Temperature / temperature level |

Cancelling recipe entry/change

- ▶ Select  in the overview of the set steps.
 - The following appears in the display: «Do you really want to cancel the recipe entry?»
- ▶ To cancel the recipe entry, select «Yes».
 - The menu for your own recipes or, if a recipe from a recipe book was changed, the menu for the recipe book is displayed.



Ending a step before time

This is only possible for  «Own recipes». If, for example when a recipe is running, you realize that the food or the cooking space is ready for the next step in the recipe even though the current step is still in progress, you can end the step before time.


- ▶ Select the symbol for duration, temperature or temperature level in the operating mode settings. Pay attention to the priorities for the step duration as described under «Step duration».
- ▶ Set the displayed value to 0 or reduce it until it is less than the currently measured value.
- ▶ Press the adjusting knob to confirm.
 - The step is ended.
 - If it was the final step, the recipe ends too.
 - If it was not the final step, the next step starts.

Changing recipes



Any recipe – from a recipe book as well as your own recipes – can be copied and changed.

- ▶ Select the desired recipe book or .
- ▶ Select .
- ▶ Choose a recipe.
 - An overview of the steps in the recipe is displayed.


Changing a step

- ▶ Select the step to be changed.
- ▶ Make the settings and confirm with .



Adding a step

- ▶ Select .
- ▶ Make the settings and confirm with .

Deleting a step


- ▶ Select 
 - An overview of the steps in the recipe is displayed.
- ▶ Select the step.
 - The following appears in the display: «Do you want to delete this step?»
- ▶ To delete the step, select «Yes».
 - The step is deleted.

Saving a changed recipe


- ▶ Select .
- ▶ Select storage space, enter the recipe name and confirm by pressing 
 - The changed recipe is now saved.

 
 


A storage space that is already being used can be overwritten.


Recipes that have been amended from recipe books are not saved in the recipe book, but under  «Own recipes». The original recipe remains in the corresponding recipe book.


Deleting your own recipe





Any recipe in  «Own recipes» can be deleted.

 - ▶ Select  «Own recipes».
- ▶ Select .
- ▶ Select the recipe to be deleted.
 - The following appears in the display: «Do you want to delete this recipe?»
- ▶ To delete the recipe, select «Yes».
 - The recipe is deleted.

6.3 Professional baking

With  professional baking, the cold cooking space is heated by a steam phase (about 10 minutes) and a hot air phase, which follows automatically. This makes yeast and puff pastries light and airy while also forming a nice, shiny crust. «Proofing» allows you to proof a large batch of dough or pre-prepared portions at optimal temperature and humidity levels.


 Professional baking has the following range of uses:

-  Bread
-  Plaited bread
-  Puff pastry
-  Proofing


 



The appliance door must not be opened during the steam phase, as this would allow cold air to stream in, extending the steam phase and oversteaming the bread. The bread would come out flatter as a result.

Tips

- Allow bread, bread buns and other yeast pastries to proof for about 15 minutes after forming into shape. Place on a stainless steel tray, which has been lined with baking paper, put it into the cold cooking space and bake.
- The adjustable temperature corresponds to that of the hot air phase. The temperature during the steam phase is preset.
- For a nice, crispy crust: the smaller the item to be baked, the higher the temperature. The optimum temperature for bread buns is generally higher than for a single loaf of bread.
- When using  «Plaited bread», we recommend brushing the shaped dough with egg wash.

Selecting and starting professional baking

- ▶ Put in the food.
- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Press the  touch button.
- ▶ Select .
- ▶ Select the desired application.
 - The operating mode settings are displayed.


- ▶ Set the temperature, duration and, if necessary, an end time or delayed start and confirm.
- ▶ To start  professional baking, select ▶.



The filled water tank must be in position in the water tank compartment.

6.4 Wellness *

* Depending on the software version

With  «Wellness», the following items can be prepared for personal well-being:

- Hot towels
- Hot wraps
- Hot massage stones
- Cherry stone or grape seed cushions



Caution hot!

Feel the temperature of the heated objects with your hand first before placing them on any other parts of the body.

Hot towels

Before starting the application:

- ▶ Wet and wring out the towels.
- ▶ Open the towels and place in the perforated cooking tray or:
- ▶ Roll up the towels to the desired size and place in the perforated cooking tray.

Hot wraps

Before starting the application:

- ▶ Spread the prepared towels out across the perforated cooking tray.

Hot massage stones

Before starting the application:

- ▶ Put the clean, smooth massage stones in a suitable container and place it directly on the floor of the cooking space.

 
Cherry stone or grape seed cushions

Before starting the application:

- ▶ Put the cherry stone or grape seed cushions in a suitable container and place it directly on the floor of the cooking space.

6.5 Hygiene *

* Depending on the software version

 «Hygiene» can be used for sterilizing containers. The following applications are available:

- «Sterilize baby bottles» replaces the need to boil baby bottles in hot water.
- «Prepare jam jars» replaces the need to prepare empty jam jars by rinsing them with hot water.
- «Preserve jam» helps to preserve the jam for longer.

Feeding bottles

Before starting the application:

- ▶ Clean the bottles.
- ▶ Unscrew the feeding bottles and place all parts into the perforated cooking tray.

After the application has finished:

- ▶ Stand the bottles upside down on a clean kitchen towel and leave to dry completely.

6.6 Keep warm *

* Depending on the software version


Cooked foods can be kept warm using the  «Keep warm» setting.



If the cooking space is already hot, open the appliance door and allow the cooking space to cool down for 3 to 4 minutes before starting the «Keep warm» function. This ensures that the food does not overcook.

The longer the food is kept warm, the greater the changes may be to the consistency of the food.

7 EasyCook

 EasyCook helps you to prepare any food simply and conveniently. After choosing the food group and food, the appliance suggests the suitable operating modes or Gourmet-Guide applications, including the settings and accessories.
















 




The brochure of the same name, which you received with the operating instructions, contains the same settings information in paper form.

The values given for temperature or temperature levels and duration serve only as guide. They may vary depending on the type and size of the food as well as on individual preference.

7.1 Overview of food groups

Foods are categorized into different groups; an item of food can appear in more than one group.




The following food groups can be selected:

| | |
|-----------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
|  Vegetables |  Fish and seafood |
|  Fruit |  Flans and pizza |
|  Herbs |  Bakery products |
|  Mushrooms |  Baked dishes and gratins |
|  Pulses |  Accompaniments |
|  Grains |  Desserts |
|  Potatoes |  Dairy products |
|  Meat |  Eggs |
|  Poultry |  Chestnuts |

7.2 Selecting and starting foods



A delayed start is only possible for applications where preheating is not required and is only suitable for food that does not need to be refrigerated or to rise.

- ▶ If the appliance is switched off: first press the adjusting knob.
- ▶ Press the  touch button.
 - The overview of food groups is displayed.
- ▶ Select the food group.
- ▶ Choose the desired type of food.
- ▶ If necessary: select the shape (whole, pieces, etc.).
- ▶ If necessary: select the preparation method (cooking, baking, etc.).
- The display contains information about:
 - Temperature
 - Duration
 - Preheating necessary / not necessary
 - Accessories needed
 - Level
 - Possible tips
- ▶ Select .
- ▶ The operating mode summary is displayed.
- ▶ To start operation, select .




You can change the set values to a limited extent.



8 Favourites

Up to 24 operating modes, GourmetGuide and EasyCook applications together with the settings made can be saved as favourites.

8.1 Creating favourites


- ▶ Select an operating mode, GourmetGuide or EasyCook application.
- ▶ Make the settings.
- ▶ Press the  touch button.
 - The favourites menu opens.
- ▶ Select a storage space and confirm.
- ▶ Enter the name of the favourite using the on-screen keypad and confirm.
 - The favourite is saved.

8.2 Selecting and starting favourites



- ▶ Press the  touch button.
- ▶ Choose the desired favourite and select «Yes».
- ▶ To start the favourite, select .

 - The favourite starts.

8.3 Changing favourites

- ▶ Select the desired favourites.
- ▶ Adjust the settings as required.
- ▶ Press the  touch button.
- ▶ Select the storage space or favourite that is to be overwritten.
- ▶ Enter the favourite name or overwrite as appropriate.
 - The changed favourite is saved.

8.4 Deleting favourites





- ▶ If the appliance has another menu open, press the  touch button.
- ▶ Select .
- ▶ Select the favourite to be deleted.
 - The following appears in the display: «Do you want to delete this favourite?».
- ▶ To delete the favourite, select «Yes».
 - The favourite is deleted.

9 Tips and tricks

9.1 Unsatisfactory cooking result...

... when baking and roasting

| Result | Solution |
|---------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> ▪ The baking or roast looks good on the outside but is still doughy or raw on the inside. | <ul style="list-style-type: none"> ▶ Next time, set a lower temperature and lengthen the operating time. |
| <ul style="list-style-type: none"> ▪ The cake collapses. | <ul style="list-style-type: none"> ▶ Check that the settings used correspond to those recommended in «EasyCook». ▶ Next time, set a lower temperature and lengthen the operating time. ▶ Stir the cake mixture well. When finished, bake immediately. ▶ For whisked sponges, beat the egg yolks / egg whites to a foam a little longer and then carefully fold into the mixture. When finished, bake immediately. ▶ Follow the instructions on how much baking powder to add. |
 
| Result | Solution |
|---------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> ▪ The baking has browned unevenly. | <ul style="list-style-type: none"> ▶ Next time, set a lower temperature and adjust the operating time. ▶ If using , ,  and , check that the levels used correspond to those recommended in «EasyCook». ▶ Do not push baking tins or bulky foodstuff right to the back of the cooking space. |
| <ul style="list-style-type: none"> ▪ The baked goods have come out lighter on one baking tray than on the other. | <ul style="list-style-type: none"> ▶ Check that the settings used correspond to those recommended in «EasyCook». |


 




Some uneven browning is normal. More even browning is generally achieved at lower temperatures.

9.2 General tips

- Several foods can be cooked simultaneously to save energy, e.g. rice or pulses together with vegetables with similar cooking times.
- With the appropriate amount of liquid, grains, e.g. rice or millet, and pulses, e.g. lentils, cook directly in suitable tableware.
- Put the tableware directly on the perforated cooking tray or wire shelf.

9.3 Saving energy

The  and  operating modes consume less energy than the  and  operating modes.

- ▶ Avoid opening the appliance door frequently.
- ▶ Only switch the illumination on when needed.
- ▶ For gratins, use the residual heat: for cooking times over 30 minutes, switch the appliance off 5–10 minutes before the end of the operating time.
- ▶ Minimize preheating.
- ▶ Only preheat the cooking space if the cooking or baking results depend on it.




Power consumption can be reduced to a minimum by selecting «Hide time» in the user settings. Despite EcoStandby, all safety functions remain active.

10 User settings

10.1 Overview of user settings


 
| | | | |
|---------------------------------------------------------------------------------|------------------|-----------------------------------------------------------------------------------|-----------------------|
|  | Language |  | Loudness |
|  | Display |  | Assistance functions |
|  | Date |  | Temperature |
|  | Clock |  | Childproof lock |
|  | Notifications |  | Appliance information |
|  | Descal appliance |  | Demo mode |
|  | Water hardness |  | Factory settings |

10.2 Adjusting user settings

- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Press the  touch button.

- The user settings main menu appears in the display:



- ▶ Select the desired user setting or submenu.
- ▶ Adjust the desired user setting and press the adjusting knob to confirm.
 - Either the user settings main menu or the relevant submenu appears in the display.
- ▶ To exit a submenu and return to the user settings main menu, select .
- ▶ To exit the user settings, press a different touch button or the  touch button.



All user settings are retained in the event of a power failure.

10.3 Language

The language in the display can be changed. Different languages are available for selection.

10.4 Display

Contrast

With this function, the readability of the display can be adjusted based on how the appliance is installed.

Brightness

The brightness of the display can be changed.

Start screen *

* Depending on the software version

With this user setting, you can determine the menu that is displayed when you start the appliance. The following menus can be selected:

- Operating modes (factory setting)
- GourmetGuide
- EasyCook
- Favourites

Appliance switch-off time

If no operating mode is running but the appliance is switched on, it is automatically switched off after a certain period of time without any user interaction. Example: After the end of an operating mode.




The appliance switch-off time can be set between 3 and 30 minutes; the factory setting is 15 minutes.

10.5 Date

The date can be called up and changed.

10.6 Clock

The following time functions are available:

-  Time
- **12/24** Time format
-  Time display
-  Mains synchronization

Time format

The time can be displayed in the European 24-hour time format or the US 12-hour format (a.m./p.m.).

Time display

With the «Show time» setting (factory setting), the time is dimmed between 00:00 and 06:00 (24-hour format) or 12:00 a.m. and 06:00 a.m. (12-hour format).

If «Hide time» is selected, the displays are not illuminated when the appliance is off.



To reduce power consumption to a minimum, select «Hide time» in the user settings. Despite EcoStandby, all safety functions remain active.

Mains synchronization

Mains synchronization synchronizes the appliance clock with the mains frequency. Irregular mains frequency can cause the clock to not run correctly. A pulse generator inside the appliance is used when mains synchronization is switched off.

10.7 Notifications

Acoustic signals and instruction messages can be switched off or disabled. Essential acoustic signals (such as the timer, end of operation and switch appliance off) cannot be switched off or disabled.

10.8 Descaling the appliance

This function can be used to descale the appliance or read the remaining operating time until the next descaling process.

See Descaling (see page 38).

10.9 Water hardness

The appliance features a system that automatically indicates when it is time to descale. The system can be optimized for households with soft water (also through using a water softening appliance) and medium water hardness by changing the user settings to the relevant range of water hardness.

There are three settings for water hardness:

| Type | Water hardness [°fH] | Water hardness [°dH] | Water hardness [°eH] |
|----------|----------------------|----------------------|----------------------|
| ▪ Hard | 36 to 50 | 21 to 28 | 26 to 35 |
| ▪ Medium | 16 to 35 | 9 to 20 | 12 to 25 |
| ▪ Soft | 1 to 15 | 1 to 8 | 1 to 11 |

10.10 Loudness

The acoustic signal can be set at one of two levels of loudness or can be completely switched off.



An acoustic signal is emitted in the event of a malfunction even if the setting is set to «off».

A short acoustic signal is emitted when the appliance is switched off even if the setting is set to «off» (safety function).

10.11 Assistance functions

Illumination

The «Automatic» setting switches on the cooking space illumination:

- 3 minutes before a cooking process ends, e.g. in the case of an automatic programme or an operating mode with a set duration,
- if the operation is ended before time, i.e. cancelled (using ■ or the ⏻ touch button),
- when the appliance door is opened.



Press the ⏻ touch button to switch the illumination on or off at any time.

If the illumination is not switched off, it will go off automatically within 5 minutes to save energy.


Fast heating


With the «Automatic» setting, fast heating is switched on automatically wherever possible.


Water tank

With the «Automatic» setting, the water tank is automatically ejected when it is empty.

Press and go

 «Press and go» refers to the period of time after which an operating mode/programme starts automatically as long as all necessary settings are available or have been made. Adjusting the settings restarts the countdown.

 «Press and go» can be switched on or off.

When  «Press and go» is activated, values between 10 seconds and 1 minute are possible; the factory setting is 20 seconds.

10.12 Temperature

Temperature unit

The temperature can be displayed in «°C» or «°F».

- °C: Degrees Celsius
- °F: Degrees Fahrenheit

10.13 Childproof lock

The childproof lock is to prevent children accidentally switching on the appliance.

When the childproof lock is activated, the appliance can only be operated after first entering a code. The code is displayed in reverse order when unlocking.



The childproof lock activates 3 minutes after the appliance is switched off.

10.14 Appliance information

Under  «Appliance information», you will find:

- The article number and serial number (SN) of your appliance
- The software versions of your appliance as well as the acoustic signals and background images currently being used (depending on model)
- The operating data:
 - number of descaling processes already performed
 - date and time of the last descaling process
 - steam operating time to date

10.15 Demo mode

In demo mode, almost all the appliance functions are available but it is not possible to cook with the appliance. This ensures operating safety during product demonstrations and consultations.

It is only possible to switch demo mode on and off with a safety code.

10.16 Checking the connection *

* Depending on the software version

This function is used by testing institutes to check whether the appliance has the connected load required.

10.17 Factory settings

If one or more user settings have been changed, these can be reset to the factory settings.

11 Care and maintenance



Risk of burns from hot surfaces!

You should allow the appliance and the accessories to cool before cleaning. Do not reach into the water tank compartment if the following appears in the display: «Please do not remove the water tank».

Improper use can result in damage to the appliance!

Do not use any abrasive or caustic cleaning agents, metal scrapers that are sharp or scratch, steel wool, abrasive scouring pads, etc. These products will damage the surfaces. Glass surfaces that are scratched can crack.

Never use a steam cleaner to clean the appliance.

11.1 Cleaning the exterior


- ▶ Remove any soiling or excess cleaning solution immediately.
- ▶ Clean the surfaces with a soft cloth dampened with water and a little washing-up liquid – for metallic surfaces rub in the direction of the original polish lines.
- ▶ Wipe dry with a soft cloth.

11.2 Cleaning the cooking space



Improper use can result in damage to the appliance!

Do not bend the temperature sensor or heating elements.

- ▶ Any condensate or food particles must be completely removed after each cooking session with steam.
- ▶ Place the stainless steel tray under the perforated cooking tray or wire shelf when cooking to catch food particles and condensate.
- ▶ Remove any soiling from the cooking space while still hand warm. Use a soft cloth dampened with water and a little washing-up liquid. Wipe dry with a soft cloth.
- ▶ To remove dried-on soiling more easily, switch the appliance on for about 30 minutes beforehand, setting it to the  operating mode and a temperature of 80 °C. This will soften the soiling.
- ▶ For stubborn soiling, e.g. chicken, clean the cooking space when cold with a grease-dissolving spray cleaner or cream cleaner in accordance with the manufacturers' instructions.

11.3 Cleaning the appliance door

- ▶ Clean the appliance door with a soft cloth dampened with water and a little washing-up liquid.
- ▶ Dry with a soft cloth.

Removing the appliance door




Risk of injury from moving parts!


Be careful not to put fingers in the door hinges. The appliance door is heavy.

When removing and reassembling the appliance door, hold it firmly at the sides with both hands.

- ▶ Open the appliance door as far as it will go.
- ▶ Fold the clips **2** on both door hinges **1** forward.

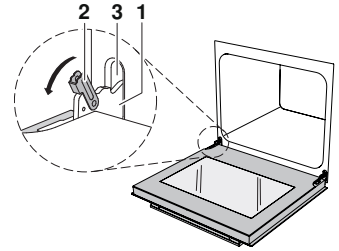

- ▶ Close the appliance door as far as its at-rest position (about 30°).
- ▶ Lift the appliance door out at an angle.

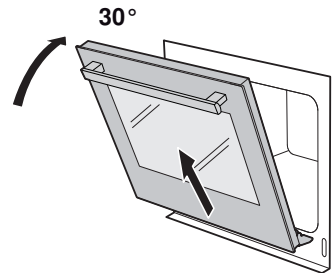

Reassembling the appliance door

- ▶ From the front, push both hinges **1** into the opening **3**.
- ▶ Open the appliance door as far as it will go and close back the clips **2**.

11.4 Cleaning the door seal

- ▶ Clean the door seal with a soft cloth dampened with water, but do not use any cleaning agent.
- ▶ Wipe dry with a soft cloth.

11.5 Replacing the door seal

For safety reasons, the door seal must be replaced by our Customer Services.

11.6 Replacing the halogen light bulb

For safety reasons, the halogen light bulb must be replaced by our Customer Services.

11.7 Cleaning the accessories and shelf guides




Incorrect handling can cause damage!

Do not clean the water tank in the dishwasher.

- The stainless steel tray, the perforated cooking tray, the wire shelf and the shelf guides can be cleaned in the dishwasher.
- Watermarks in the water tank can be removed using a standard descaler (do not use washing-up liquid!).
- ▶ If the water tank valve drips, descale it.

Removing the shelf guides

- ▶ Unscrew the knurled nuts **1** in the front of the shelf guides in an anti-clockwise direction.
- ▶ Pull the shelf guides **2** to the side of the screws and remove from the front.

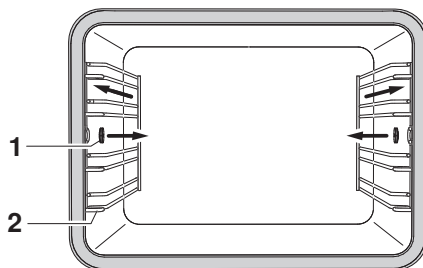

Reassembling the shelf guides


- ▶ Insert the shelf guides into the openings in the back wall of the cooking space and position on the screws. Place the knurled nuts on the screws and tighten securely in a clockwise direction.

11.8 Descaling

How it functions

Whenever steam is produced, depending on the hardness of the local water supply (i.e. the limescale content of the water), limescale is deposited in the boiler.

The appliance automatically detects and indicates when descaling is necessary.

– After pressing the  touch button and finishing a cooking process, the following appears in the display:

Would you like to descale the appliance now?

You must accompany the process.



We recommend descaling the appliance whenever the warning appears in the display. Continued to descale the appliance will likely impair its functions or cause damage to the appliance. Descaling takes about 45 minutes.

Descaling interval

The time interval between descaling depends on the hardness of the water and frequency of use. If steaming 4× 30 minutes per week, the appliance must be descaled – depending on water hardness – roughly as follows:

| Water hardness | Descal after about |
|----------------|--------------------|
| Hard | 5 months |
| Medium | 8 months |
| Soft | 12 months |

Read remaining operating time

The remaining steam operating time until the next descaling process can be read in the user settings under «Descaling».

Descaler

durgol swiss steamer



Using the wrong descaler can damage the appliance!

Only use «durgol swiss steamer» to descale your appliance. The descaler contains highly effective acid. Immediately rinse away any splashes with water. Follow the manufacturer's instructions.



See «Accessories and spare parts» for where to obtain this descaler.



«durgol swiss steamer» was developed especially for this appliance.

Standard descaling solutions are not suitable as they may contain foam-creating additives or not be effective enough.

Using a different descaler could cause

- overfoaming inside the appliance
- insufficient descaling of the boiler
- damage to the appliance in the worst case.

Starting the descaling process




The appliance must have cooled down before descaling.

Remove accessories, cookware or other objects from the cooking space. Do not leave the appliance unattended: during the descaling process, the descaler must be filled and the water tank must be emptied. The appliance door must be kept closed during descaling.

When the following message appears in the display «Would you like to descale the appliance now? You must accompany the process.»:

- ▶ Select «Yes».
- ▶ The following appears in the display: «The appliance is being prepared for descaling.»



If an acoustic signal is emitted and « Residual heat too high» appears in the display, the appliance has not cooled down sufficiently and the descaling process cannot be started.

- ▶ Allow the appliance to cool down.
- ▶ As soon as the corresponding message appears in the display: fill the water tank with 0.5 l undiluted descaler, insert the tank and select ▶.
 - The descaling process starts.
 - The following appears in the display: «Descaling appliance.»



For safety reasons, once started the descaling process cannot be cancelled.

Replacing the rinsing solution

- ▶ As soon as the corresponding message appears in the display, remove the water tank, pour the rinsing solution away and fill it with 1 l warm water.
- ▶ Put the water tank back.
 - The rinsing phase starts automatically.
 - The following appears in the display: «Rinsing appliance.».
- ▶ Repeat the process as often as is necessary.







As the water is heated up during final rinsing, the appliance door may steam up.

Ending the descaling process

- ▶ As soon as the corresponding message appears in the display, remove, empty and dry the water tank.
- ▶ Wipe up any water in the bottom of the cooking space with a soft cloth.
- ▶ To confirm the message, select ✓.
 - The following appears in the display: «Appliance has been successfully descaled».
- ▶ To confirm the message, select ✓.
 - The appliance is ready for operation again.



For the , ,  or  operating modes, after descaling, the water that is pumped back into the water tank may not be clear. This will not affect the cooking or baking characteristics nor the quality of the food being cooked or baked.

12 Trouble-shooting

12.1 What to do if ...

This section lists faults that can be solved simply by following the instructions given. If another fault is displayed or the fault cannot be remedied, please call Customer Services.



Before calling Customer Services, please note down the error message in full.
Fxx/Exxx see operating instructions
SNxxxxx xxxxxx.

... the appliance is not working

| Possible cause | Solution |
|----------------------------------------------------|----------------------------------------------------------------------------------------------|
| ▪ A household fuse or circuit breaker has tripped. | ▶ Change the fuse. ▶ Reset the circuit breaker. |
| ▪ The fuse or circuit breaker keeps blowing. | ▶ Call Customer Services. |
| ▪ An interruption in the mains power supply. | ▶ Check the power supply. |
| ▪ Demo mode is switched on. | It is only possible to switch off demo mode with a safety code. ▶ Call Customer Services. |
| ▪ The appliance is faulty. | ▶ Call Customer Services. |

... just the illumination is not working

| Possible cause | Solution |
|-----------------------------------|---------------------------|
| ▪ The halogen light is defective. | ▶ Call Customer Services. |

... the cooking time seems unusually long

| Possible cause | Solution |
|-----------------------------------------------------|-------------------------------------|
| ▪ The appliance only has a single-phase connection. | ▶ Establish a two-phase connection. |

... when grilling, thick smoke is given off

| Possible cause | Solution |
|-------------------------------------------------|----------------------------------------------------------------|
| ▪ The food is too near to the heating elements. | ▶ Check that the level selected corresponds to the «EasyCook». |
| ▪ Grill setting is too high. | ▶ Reduce the grill setting. |

... no visible steam is produced when steaming

| Possible cause | Solution |
|--------------------------------------------------------|-----------------------------------------------------------|
| ▪ The temperature of the cooking space is over 100 °C. | No solution required: Steam is invisible above 100 °C. |

... the control panel steams up

| Possible cause | Solution |
|---------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ▪ Steam escaping when using operating modes with steam. | It is normal for the control panel to steam up temporarily. ▶ When closing the appliance door, make sure that it forms a seal all the way round. ▶ If it keeps steaming up, call Customer Services. |

... the appliance makes noises during operation

| Possible cause | Solution |
|------------------------------------------------------------------------------------|-----------------------|
| ▪ The appliance may emit noise when operating (e.g. switching and pumping noises). | Such noise is normal. |


... the clock is not running correctly

| Possible cause | Solution |
|-------------------------------------------------------------------------------------|-----------------------------------------|
| ▪ Irregular mains frequency | ▶ Switch off the mains synchronization. |
| ▪ Internal pulse generator is imprecise when mains synchronization is switched off. | ▶ Call Customer Services. |

... the following appears in the display

FX/EXX see operating instructions


SN XXX XXXXXX

| Possible cause | Solution |
|------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> ▪ Various situations can lead to an error message. | <ul style="list-style-type: none"> ▶ Cancel the error message by pressing the  touch button. ▶ Disconnect from the power supply for about 1 minute. ▶ Reconnect the power supply. ▶ If the error appears again, note down the error message in full along with the serial number (SN; see identification plate). ▶ Disconnect from the power supply. ▶ Call Customer Services. |

... the following appears in the display

UX/EXX see operating instructions

SN XXX XXXXXX

| Possible cause | Solution |
|------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> ▪ An interruption in the power supply. | <ul style="list-style-type: none"> ▶ Cancel the error message by pressing the  button. ▶ Disconnect from the power supply for about 1 minute. ▶ Reconnect the power supply. ▶ If the error appears again, note down the error message in full along with the serial number (SN; see identification plate). ▶ Disconnect from the power supply. ▶ Call Customer Services. |

... the following appears in the display Residual heat

Do not remove the water tank.

| Possible cause | Solution |
|--------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> ▪ Water temperature in the boiler is too high. | <ul style="list-style-type: none"> ▶ Wait for it to cool down (this can take up to 30 minutes). <p>For safety reasons, water is only pumped off when it falls below a certain temperature.</p> <p>The appliance may be used without further ado.</p> |

... the following appears in the display

Descaling failed.

Appliance was not descaled.

| Possible cause | Solution |
|----------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> ▪ Used unsuitable descaler. | <ul style="list-style-type: none"> ▶ Descalate again using the recommended descaler. |
| <ul style="list-style-type: none"> ▪ Descaling was not carried out correctly. | <ul style="list-style-type: none"> ▶ If the message does not disappear after repeating the descaling process several times, note down the error message in full and the serial number (SN; see identification plate). ▶ Call Customer Services. |

... the following appears in the display

Please fill with water

The water tank is ejected, if activated, but is still full of water.

| Possible cause | Solution |
|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> ▪ Boiler filling error | <ul style="list-style-type: none"> ▶ Push the water tank back and wait for water to be pumped off. ▶ If the error appears again, note down the error message in full along with the serial number (SN; see identification plate). ▶ Call Customer Services. |

12.2 After a power failure



The user settings remain unchanged.

Brief power failure during operation

- The current operation of the appliance is cancelled.
- The following appears in the display when the appliance is switched on: «Power failure. Operation cancelled».
- ▶ To cancel the message, select ✓.
 - The operating modes menu appears in the display.

Brief power failure during descaling

- The descaling process is interrupted.
- The following appears in the display when the appliance is switched on: « Power failure. Continuing descaling.»
- ▶ To confirm the message, select ✓.
 - The descaling process continues.

Prolonged power failure

Variant 1 *

* Depending on the software version

The appliance goes through its initial set-up process after a prolonged power failure. However, only the language and time need to be reset to enable the appliance to be operated again. It is not necessary to make any other settings.

- If a descaling process was running, the descaling process continues.

Variant 2 *

* Depending on the software version

The appliance goes through its initial set-up process after a prolonged power failure. However, only the time needs to be reset to enable the appliance to be operated again. It is not necessary to make any other settings.

- The following appears in the display when the appliance is switched on: «Power failure. Set time.»
- ▶ To confirm the message, select ✓.
 - The «Clock» menu in the user settings appears in the display.
- ▶ Select ⌚, set the time and confirm.
 - The «Clock» menu appears again in the display.
- ▶ Select ↩.
 - The following appears in the display: «Do you want to continue with the initial start-up?»
- ▶ To change other user settings, select «Yes».
 - The relevant user settings menu appears in the display.
- ▶ If no other user settings are to be changed, select «No».
 - The appliance is ready for operation again.
 - If a descaling process was running, the descaling process continues.

 
13 Accessories and spare parts

The accessories listed below, as well as spare parts, can be ordered in addition to the scope of delivery of the appliance. Ordering is subject to charge, except in the event of warranty claims. Please give product family of the appliance and exact designation of the accessory or spare part when ordering parts.

13.1 Accessories



Stainless steel tray



Perforated cooking tray




Wire shelf



Dual enamel baking tray



EasyCook brochure

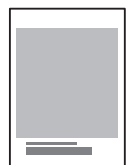


Recipe book

13.2 Special accessories

For information see: www.vzug.com

 
13.3 Spare parts




Shelf guides left/right



 Knurled nut



Lid for water tank

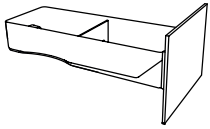

Water tank



durgol swiss steamer descaler



The descaler is also available from specialist retailers.


14 Technical data

External dimensions

- ▶ See installation instructions

Electrical connection

- ▶ See identification plate 1

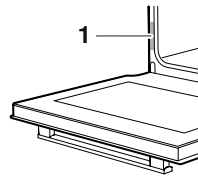

14.1 Note for testing institutes

The energy efficiency class according to EN 50304 / EN 60350 is determined using the and operating modes.

Placing thermocouples between the appliance door and the seal can cause lack of leak-tightness and thus measuring errors.

The usable volume within the meaning of EN 50304 / EN 60350 is obtained with the shelf guides disassembled.

The rated power is determined in accordance with the requirements of IEC 60335 using the «User settings / Check connection» function.

General note

Maximum load capacity: 3 kg

14.2 Temperature measurement

The temperature inside the cooking space is measured when the cooking space is empty according to an internationally accepted standard. Own measurements can be imprecise and are not suitable for checking the accuracy of the temperature.

14.3 Product fiche

In accordance with EU Regulation No.: 66/2014





| | | |
|--------------------------------------------------------------------|-----------|--------------|
| Brand | – | V-ZUG Ltd |
| Type of appliance | – | Steam cooker |
| Model designation | – | CSSE |
| Mass of appliance | kg | 44 |
| Number of cavities | – | 1 |
| Heat source per cavity | – | Electric |
| Volume per cavity | l | 55 |
| Energy consumption in conventional mode ¹⁾ | kWh/cycle | 0.7 |
| Energy consumption in hot air/forced convection mode ²⁾ | kWh/cycle | 0.67 |
| Energy-efficiency index per cavity ³⁾ | – | 85.8 |
| Measurement and calculation methods used | – | IEC 60350 |

1) Required to heat a standardized load in cavity

2) Required to heat a standardized load in cavity

3) Measurement methods: See EU Regulation No. 66/2014, Annex II, Chapter 1

Saving energy while cooking

The  and  operating modes consume less energy than the  and  operating modes.

- ▶ Avoid opening the appliance door frequently.
- ▶ For gratins, use the residual heat: for cooking times over 30 minutes, switch the appliance off 5–10 minutes before the end of the operating time.
- ▶ Minimize preheating.
- ▶ Only preheat the cooking space if the cooking or baking results depend on it.

14.4 EcoStandby

To prevent unnecessary energy consumption, the appliance is equipped with the automatic energy-saving «EcoStandby» function.



To reduce power consumption to a minimum, select «Hide time» in the user settings. Despite EcoStandby, all safety functions remain active.

14.5 Reference to «Open Source» licence

Your appliance contains Newlib open-source software. This is subject to the licensing conditions specified in Section 4.1 (4.1.1-4.1.8; 4.1.9; 4.1.10; 4.1.14-4.1.16) of the enclosed open-source software licence text document.

15 Disposal

15.1 Packaging



Never allow children to play with packaging material due to the danger of injury or suffocation. Store the packaging material in a safe location or dispose of it in an environmentally-friendly way.


15.2 Safety

Render the appliance unusable to prevent accidents caused by improper use (e.g. through children playing):

- ▶ Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician. Then cut the mains cable off flush with the appliance.

15.3 Disposal



-  The «crossed out wheeled bin» symbol requires the separate collection of waste electrical and electronic equipment (WEEE). Such equipment can contain hazardous, environmentally harmful materials.
- These appliances are to be handed over to a designated collection point for the recycling of electrical and electronic equipment and must not be disposed of with unsorted household waste. And in this way, you will be helping to protect resources and the environment.
- For more information, please contact the local authorities.

16 Index

| | |
|---------------------------------------------|--------|
| A | |
| Accessories | 11, 44 |
| Cleaning | 37 |
| Acoustic signals | 34 |
| Activating/deactivating steam supply | 14 |
| Appliance disposal | 47 |
| Appliance door | |
| Cleaning | 36 |
| Removing | 37 |
| Appliance information | 35 |
| Appliance switch-off time | 33 |
| B | |
| Baking tray | 11 |
| Before using for the first time | 6 |
| Boiler filling error | 43 |
| Bottom heat | 11, 17 |
| Brightness | 33 |
| C | |
| Cancelling | |
| Changing recipe | 26 |
| Creating own recipe | 26 |
| Operating mode | 20 |
| Recipes | 24 |
| Care | 36 |
| Check connection | 35 |
| Cleaning | 36 |
| Accessories | 37 |
| Cooking space | 36 |
| Door seal | 37 |
| Shelf guides | 37 |
| Water tank | 37 |
| Cleaning the exterior | 36 |
| Clock | 33 |
| Construction | 10 |
| Contrast | 33 |
| Cooking space | |
| Cleaning | 36 |
| Temperature measurement | 46 |
| Cooking tray | 12 |
| D | |
| Delayed start | 20 |
| Deleting | |
| Favourites | 31 |
| Own recipe | 27 |
| Demo mode | 35 |
| Descaler | 39 |
| Descaling | 38 |
| Duration until next descaling process | 35 |
| Failed | 43 |
| Rinsing phase | 40 |
| Starting | 39 |
| Disposal | 47 |
| Door seal | |
| Cleaning | 37 |
| Replacing | 37 |
| Duration | 19 |
| Recipe step | 25 |
| E | |
| EasyCook | 29, 44 |
| Food groups | 29 |
| EcoStandby | 46 |
| Electrical connection | 45 |
| End | 20 |
| Extending operation | 22 |
| External dimensions | 45 |
| F | |
| F and E messages | 42 |
| Factory settings | 36 |
| Fast heating | 17, 35 |
| Automatic switch-on | 35 |
| Favourites | 30 |
| Changing | 30 |
| Creating | 30 |
| Deleting | 31 |
| Starting | 30 |
| G | |
| Grill | 15 |
| Grill-forced convection | 16 |
| H | |
| Halogen light bulb | 37 |
| Hold | 25 |
| Hot air | 14 |
| Hot air humid | 16 |
| Hot air with bottom heat | 15 |
| Hot air with steaming | 14 |
| Hygiene | 28 |
| I | |
| Identification plate | 45 |
| Illumination | 34, 41 |
| Initial set-up | 6, 9 |
| Instruction message | 34 |
| Instructions for use | 6 |
| K | |
| Keep warm | 29 |

| | | | |
|--------------------------------------|--------|--------------------------------|--------|
| L | | General..... | 5 |
| Language..... | 33 | Safety warnings | |
| Levels..... | 11 | Appliance-specific | 5 |
| Load capacity | 45 | Saving energy..... | 32, 46 |
| Long cooking time..... | 41 | Service & Support..... | 51 |
| Loudness..... | 34 | Setting the time | 32 |
| M | | Shelf guides | 38 |
| Mains synchronization | 34 | Cleaning | 37 |
| Maintenance | 36 | SN | 35 |
| Model designation | 2 | Software versions..... | 35 |
| Model number | 2, 35 | Spare parts | 44, 45 |
| O | | Special accessories | 12, 45 |
| Operating and display elements..... | 10 | Start screen..... | 33 |
| Operating mode | | Steam | 13 |
| Cancelling | 20 | Switching off before time..... | 20 |
| Changing..... | 20 | Symbols..... | 5 |
| Selecting..... | 18 | T | |
| Operating mode settings..... | 19 | Technical data | 45 |
| Changing..... | 19 | Technical questions..... | 51 |
| Checking | 19 | Temperature sensor | 11 |
| Operation..... | 17 | Temperature unit..... | 35 |
| Own recipes..... | 25 | Testing institutes | 45 |
| Creating | 25 | Time display..... | 33 |
| Deleting | 27 | Time format..... | 33 |
| P | | Timer | 21 |
| Pause | 25 | Tips and tricks..... | 31 |
| Plate warmer | 12 | Top/bottom heat | 13 |
| Power failure | 43 | Top/bottom heat humid..... | 16 |
| Preheating..... | 32, 46 | Touch buttons..... | 10 |
| Press and go | 19, 35 | Type..... | 2 |
| Professional baking..... | 27 | U | |
| Q | | U and E messages | 42 |
| Quick instructions | 52 | Uneven browning..... | 31 |
| R | | User settings..... | 32 |
| Recipe book | 23, 44 | Adjusting..... | 32 |
| Unlocking | 24 | Overview..... | 32 |
| Recipes..... | 23 | Using for the first time..... | 9 |
| Action required..... | 24 | V | |
| Changing..... | 26 | Validity..... | 2 |
| Copying | 26 | W | |
| Creating own | 25 | Warranty extensions | 51 |
| Ending a step before time | 26 | Water hardness | 34 |
| Step duration | 25 | Water tank | 35 |
| Regeneration | 15 | Automatic ejection..... | 35 |
| S | | Cleaning | 37 |
| Safety precautions | | Emptying..... | 23 |
| Before using for the first time..... | 6 | Filling..... | 18 |
| Correct use | 6 | Wellness | 28 |
| | | Wire shelf..... | 12 |

17 Service & Support



The «Trouble-shooting» section gives you valuable tips on how to deal with minor malfunctions yourself, saving you the time and trouble of calling out a service technician and any cost that goes along with it.

Information on the V-ZUG warranty can be found at www.vzug.com →Service →Warranty information. Please read this information carefully.

Please register your appliance straightaway online at www.vzug.com →Service →Warranty registration. This will allow you to take advantage of the best possible support in the event of a fault in the appliance during the guarantee period. You will require the serial number (SN) and appliance designation to register your appliance. You will find them on the identification plate of your appliance.

My appliance information:

SN: _____ **Appliance:** _____

Please have this appliance information to hand when contacting V-ZUG. Thank you.

- ▶ Open the appliance door.
 - The identification plate is located on the left-side panel.

Your repair order


At www.vzug.com →Service→Service number you will find the telephone number of your nearest V-ZUG service centre.

Technical questions, accessories, warranty extensions

V-ZUG is happy to help you with any general administrative or technical queries, to take your orders for accessories and spare parts and to inform you about our progressive service agreements.

Quick instructions

Here you will find an overview of key operating information.

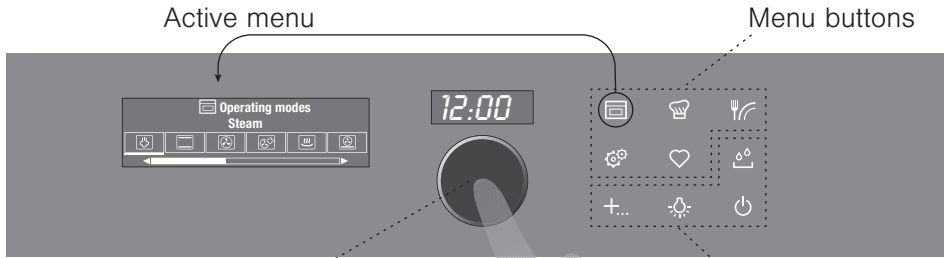



Adjusting knob as a central operating element

- ▶ Press to switch on the appliance or to select/confirm
- ▶ Turn to set the temperature and time or to navigate within the menu

Menu and action buttons

The menu buttons contain a selection of preparation options and user settings. These can be selected by pressing the relevant button. The active menu is shown in the display. You can use the adjusting knob to operate and navigate within the menu; additional submenus can also be called up.

The function buttons provide direct access to independent functions such as illumination  or switching off the appliance .



J23009352-R08

