




Dishwasher

Design integrated Adora SL

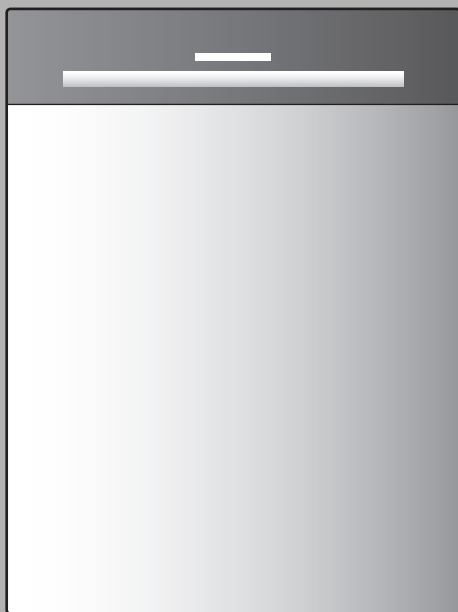

Operating instructions


Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarize yourself with the appliance and get the best use out of it.

Please follow the safety precautions.


Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliance is reserved.

Symbols used

 **Denotes important safety precautions. Failure to observe said precautions can result in injury or damage to the appliance or fittings!**

- Indicates step-by-step instructions.
- Describes how the appliance reacts to the steps taken.
- Indicates a list.

 Denotes useful tips for the user.

Validity

The model number corresponds to the first 3 digits on the identification plate. These operating instructions apply to the models:

Model	Type	Model no.	Size system
Adora 60 SL	GS 60SLdi	238	EURO 60
Adora 60 SL	GS 60SL-Gdi	259	EURO 60

Variations depending on the model are noted in the text.

Contents

1	Safety precautions	5
1.1	Before using for the first time	5
1.2	Correct use	6
1.3	Children in the home	7
1.4	Note on use	7
2	Your appliance	10
2.1	Appliance description	10
2.2	Appliance construction	11
2.3	Operating and display elements	12
3	Programme overview	14
3.1	Additional functions	16
3.2	Fondue/Raclette programme	17
4	User settings	19
4.1	Language	21
4.2	Resetting the language	21
4.3	Contrast	22
4.4	Acoustic signal	23
4.5	«All in 1» detergent	24
4.6	Childproof lock	25
4.7	Rinse agent dosage	26
4.8	Water hardness	27
4.9	Hot water connection	29
4.10	Temperature unit	30
4.11	Restoring factory settings	31
5	Operation	32
5.1	Preparing the appliance	32
5.2	Loading the baskets	33
5.3	Loading tips for the upper basket	34
5.4	Loading tips for the lower basket	39
5.5	Adding the detergent	43
5.6	Selecting a programme	45
5.7	Selecting the economy programme	45
5.8	Selecting additional functions	46
5.9	Saving additional functions	47
5.10	Delayed start	48
5.11	Interrupting a programme	49
5.12	Aborting a programme	49
5.13	End of programme	50
5.14	Operation with childproof lock activated	51

6	Care and maintenance	52
6.1	Cleaning the interior	52
6.2	Cleaning the exterior	52
6.3	Cleaning the filter system	53
6.4	Cleaning the spray arms	54
6.5	Filling with regeneration salt	55
6.6	Filling with rinse agent	56
6.7	Cleaning the water inlet filter	57
7	Trouble-shooting	58
7.1	What to do if	58
7.2	Power failure	65
8	Dishwashing tips	66
9	Accessories and spare parts	67
10	Technical data	69
10.1	Note for testing institutes	70
10.2	Noise measurement	72
11	Disposal	73
12	Notes	74
13	Index	76
14	Repair service	79

1 Safety precautions



The appliance corresponds to recognised technology standards and the relevant safety regulations. Proper use of the appliance is however essential to avoid damage and accidents. Please therefore follow the precautions given in these operating instructions.

In accordance with the requirements of IEC 60335-1:


- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or unless they have been given instruction concerning the use of the appliance by a person responsible for their safety.

1.1 Before using for the first time

- The appliance must be installed and connected up to the electricity supply in accordance with the separate installation instructions. Have the necessary work carried out by a qualified fitter/electrician.
- Dispose of the packaging material in accordance with local regulations.
- Fill the salt reservoir with approximately 1.5 l water and 1 kg regeneration salt.
- Mix the salt solution well using a wooden spoon.



For hygiene reasons, regeneration salt is also recommended for use with low water hardness and **all in 1** detergents.

- Run a wash programme without any dishes (‘’ programme with detergent) in order to remove traces of grease left behind from the manufacturing process.



The appliance was tested with water before being shipped. There may therefore still be traces of water left in the appliance.

1.2 Correct use

- The appliance is only suitable for washing household dishes and cutlery with water and standard dishwasher detergent. The appliance is for use in the home and for the intended purpose only. No liability is assumed for any damage caused by improper or incorrect use.
- Any repairs, modifications or manipulations to the appliance, especially any electrically live parts, may only be carried out by the manufacturer, its Customer Services or similarly qualified persons. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance. If the appliance is not working properly or in case of a repair order, follow the instructions given in the REPAIR SERVICE section. If necessary, please contact our Customer Services.
- Use original spare parts only.
- Retain these operating instructions for future reference. If you sell or pass the appliance on to a third party, please ensure these operating instructions accompany the appliance, together with the instructions on installation. In this way, the new owner can inform themselves about how to use the appliance correctly and read the pertinent safety precautions.

1.3 Children in the home

- Packaging material (e.g. plastic, polystyrene) can be dangerous for children. Danger of suffocation! Keep packaging material away from children.
- The appliance is designed for use by adults who are familiar with these operating instructions. Children are often unable to recognize the danger of electrical appliances. Ensure proper supervision and do not allow children to play with the appliance – there is a danger that children could get locked inside.
- The water in the appliance is not to be used as drinking water. Detergent residue in the appliance could cause eye or skin irritation! You should keep children away from the open appliance.
- Detergents can irritate the eyes, mouth and throat and even cause choking! You should keep detergent, regeneration salt and rinse agent out of the reach of children.
- Use the childproof lock facility.


1.4 Note on use



When the power is off, the built-in overflow protection system is disabled.

- If the appliance is visibly damaged, do not use it. Contact our Customer Services.
- If the appliance is not operating properly, turn off the water tap and disconnect the appliance from the electricity supply immediately.
- If the mains cable of the appliance is damaged, it must be replaced by Customer Services in order to avoid hazard.
- Ensure that the mains cables of other electrical appliances do not get caught in the door of the appliance. The electrical cable insulation could become damaged.

1 Safety precautions

- Do not sit or lean on the appliance door. After loading or unloading the appliance, do not leave the appliance door open as it can pose a risk – danger of tripping and bruising!
- Due to risk of injury, place knives and cutlery with sharp edges or points into the cutlery basket in such a way that they do not stick out (points facing downwards). Knives and cutlery may also be placed horizontally in the upper basket.
- Do not lean on the upper basket – risk of accident!
- Keep animals away from the appliance.
- To protect your dishes and cutlery, read the **DISHWASHING TIPS** section.
- Only use detergent, rinse agent and regeneration salt explicitly recommended for use with your appliance by the manufacturer in the operating instructions. Follow the manufacturer's instructions carefully.
- Do not use the appliance without any or too little detergent – risk of causing damage to the appliance.
- Do not use washing-up liquid as it can cause excessive foaming, causing your appliance to malfunction.
- Store detergent and regeneration salt in a cool, dry place. Lumpy detergent can cause problems. Follow the safety warnings issued by the detergent and rinse agent manufacturers carefully.
- After filling the salt reservoir, run the  programme without dishes.
- Never fill the rinse agent reservoir or the regeneration salt reservoir with detergent. If this were to happen, however, do not operate the appliance under any circumstances, as this could cause expensive damage to it. Call our Customer Services.
- Do not wash objects that are soiled with inflammable or corrosive solvent, paint, wax, chemicals (acids or bases) or iron chippings or that can shed fibres in the appliance.
- Do not use solvents (e.g. turpentine, benzene) instead of, or in addition to, water in the appliance – fire or explosion hazard!


- Before closing the appliance door and starting a programme ensure that there are no foreign objects or pets in the appliance. Foreign objects, such as nails and paper clips, can damage parts of the appliance as well as the dishes.
- Never operate the appliance without the filter system in place.
- Only use soft materials for cleaning beneath the filter system. Never use metal objects for cleaning.
- Avoid opening the appliance door unnecessarily during operation. The dishes and the water may be hot – scalding hazard! The steam that escapes can damage wood combination fascias. Spectacles can steam up, impairing your vision.
- Do not leave the premises for a longer period of time when the appliance is in operation.
- During longer absences, always turn off the water tap before cutting the power going to the appliance by pulling out the plug or switching off the fuse. Never pull the plug out of the mains socket by the cable. The mains socket and the water connection are generally located in the cabinet adjacent to the appliance (under the kitchen sink, behind the waste bin).
- Do not spray the outside of the appliance with water. Do not use a steam cleaner.
- From time to time, check the drain hose for tears, kinks, twists, bends, etc.
- Ventilation openings on the base of the appliance must be kept clear and not become blocked (e.g. through carpet).

2 Your appliance


2.1 Appliance description

- Capacity: 13 international place settings
- 9 programmes
 - «Automatic»
 - «Daily Quick»
 - «Sprint»
 - «Glass»
 - «Intensive»
 - «Fondue/Raclette»
 - «Hygiene»
 - «Pre-rinsing»
 - «Economy programme»
- Additional functions
 - «Energy saving»
 - «SteamFinish»
 - «Partial load»
 - «Delayed start»
- Language selection
- «All in 1» detergent
- Childproof lock
- Acoustic signal
- Plain text display on glass panel
- Hot water connection
- Automatic water softener with limescale sensor
- Water hardness control
- Automatic rinse agent dosage
- Soil sensor

2.2 Appliance construction

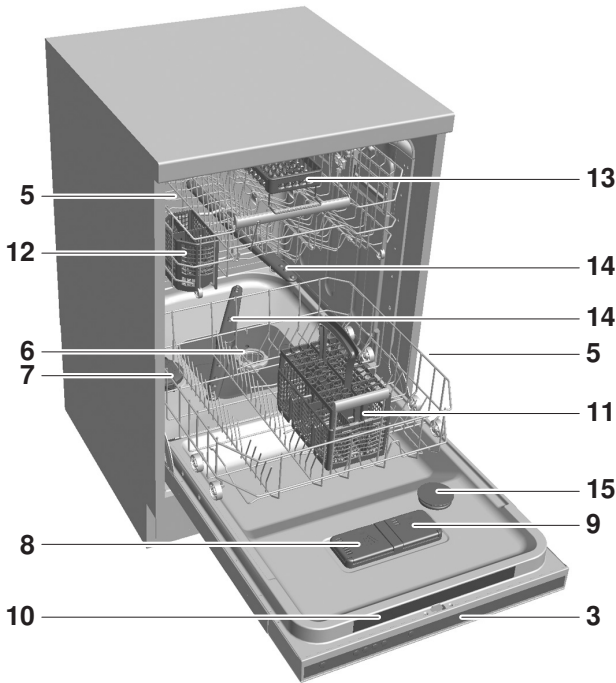

- 1 Appliance door
- 2 Door handle
- 3 Operating and display elements
- 4 Plain text display on glass panel
- 5 Baskets
- 6 Filter system
- 7 Salt reservoir
- 8 Detergent dispenser
- 9 Rinse agent reservoir
- 10 Quick operating instructions
- 11 Cutlery basket
- 12 «Small» cutlery basket
- 13 Vario cutlery basket insert
- 14 Spray arms
- 15 Ventilation opening

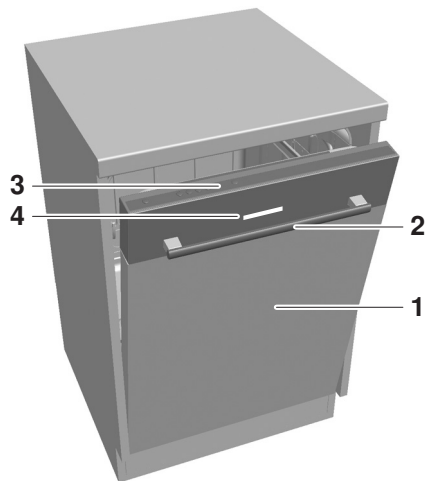

2.3 Operating and display elements



Programme buttons

- Programme selection
- Economy programme
- End of programme

Additional functions (buttons)

- Energy saving
- SteamFinish
- Partial load
- Delayed start

Programme symbols


- | | |
|-------------|-----------------|
| Automatic | Intensive |
| Daily Quick | Fondue/Raclette |
| Sprint | Hygiene |
| Glass | Pre-rinsing |

Additional functions/indicators (symbols)

- | | |
|---------------|------------------------------|
| Energy saving | «All in 1» detergent |
| SteamFinish | Rinse agent refill indicator |
| Partial load | Salt refill indicator |

Display (plain text display)

(also on glass panel)

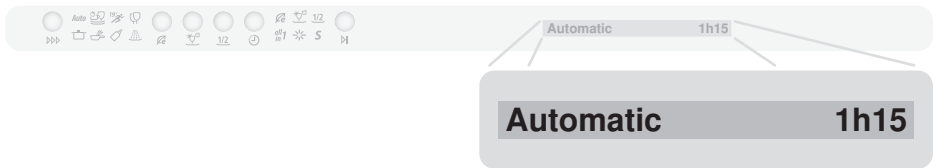









Various information appears in the display during the programme selection and the programme sequence.

- Programme name with duration/temperature
- Programme progress and time remaining
- Additional functions
- Delayed start
- Childproof lock
- Hints and trouble-shooting

Acoustic signal

An acoustic signal is emitted at the end of the programme and in the event of a malfunction.





3 Programme overview

Programme	Symbol	Use
Automatic	<i>Auto</i>	Optimum cleaning results with minimal water and energy consumption. For normal soiling. Not suitable for burned-on or dried-on soiling.
Daily Quick		Quick programme for normal soiling. Cleans with higher spray pressure.
Sprint		Quick programme for light soiling, e.g. aperitif dishware and tea and coffee cups and saucers. With the «All in 1» setting, the programme is extended by 10 minutes. Not suitable for slowly dissolving tabs.
Glass		Gentle programme for glasses.
Intensive		For heavy soiling. Particularly suitable for starchy soiling (mashed potato, rice...).
Fondue/ Raclette		For heavy soiling. Particularly suitable for burned-on soiling (fondue and raclette pans, gratin dishes...). Only use dishwasher-safe fondue pans. Add detergent to the pre-rinsing compartment to improve the cleaning results.
Hygiene		For sanitizing the appliance and the water outlet. Where hygiene requirements are high (baby bottles, cutting boards...), items can be cleaned at a higher temperature. Clean the filter system before starting the programme.
Pre-rinsing		To prevent soiling drying on if intending to start a wash programme later.
Economy programme		Economical programme for normal soiling (declaration programme).

Programme sequence/consumption data							
Pre-rinsing [°C]	Cleaning [°C]	Inter- mediate rinsing	Rinsing with rinse agent [°C]	Drying	Duration *	Water [l]	Energy [kWh]
If required	50–60	If required	65	Yes	0h45 – 1h35	7 – 18	0.80 – 1.20
If required	60	Yes	60	Yes	0h45	14	1.10
No	55	No	60	Yes	0h19	7	0.80
No	45	Yes	60	Yes	0h45	11	0.80
If required	65	Yes	65	Yes	1h35	16 – 21	1.20 – 1.30
Soaking	65	Yes	65	Yes	2h15	14 – 18	1.40 – 1.50
60	70	Yes	70	Yes	1h40	13	1.65
Yes	No	No	No	No	0h06	4	0.05
No	50	Yes	60	Yes	2h15	10	0.82 – 0.83

* For single-phase 230 V, 10 A connections, the duration of the programme is extended by up to 15 minutes.

3.1 Additional functions

Function	Symbol	Use
Energy saving		Reduces the wash temperature during cleaning by 5 °C, providing energy savings of about 10 % and gentle washing for glassware.
SteamFinish		An active steam phase runs while rinsing with rinse agent. The steam hits the dishes, resulting in sparkling, dry dishes. The programme duration is extended by about 15 minutes.
Partial load		With partial load, the programme is adapted to the smaller load. The amount of water is reduced significantly. This saves between 1 and 6 l of water.
Delayed start		The delayed start allows you to wash during off-peak hours (e.g. at off-peak electricity rates). A delayed start of between 30 minutes and 24 hours can be set. The delayed start duration last entered is shown as a suggestion.



With the additional «Partial load» function, the programme duration is shortened by up to 30 minutes.

3.2 Fondue/Raclette programme

Uses

- Removes cheese which tends to stubbornly stick to fondue and raclette pans and dishes.
- Removes food burned on to gratin dishes.
- Can be used to clean all other dishes.


Tips for best results

Fondue pans made of enamelled metal or stoneware can be cleaned in the appliance.



Fondue pans made of earthenware (red-brown colour) should not be washed in the appliance as these absorb water.


- Place the fondue pan facing downwards so that residual water can drain away.

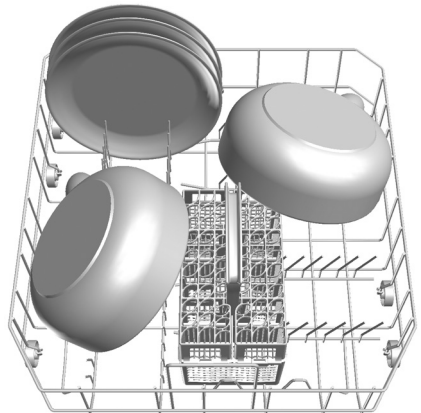

Fondue pans with a large opening in the handle are suitable for washing in the appliance.

3 Programme overview

- Load raclette dishes in the upper basket as shown in the diagram.

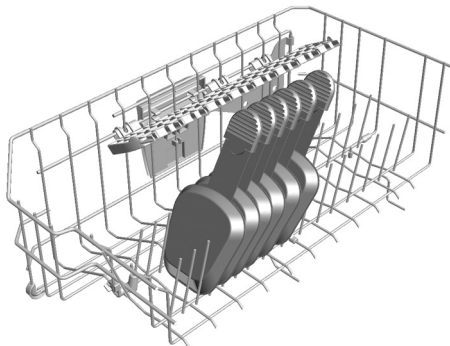

In addition to the detergent, add about 1 tablespoon of detergent to the pre-rinsing compartment. You will improve the cleaning results in the case of heavily burned-on food residue.

Use an aluminium heat distribution plate between the burner and the fondue pan to protect the fondue pan and prevent heavily burned-on soiling. Charred food residue cannot be completely removed through washing in the appliance.

4 **User settings**

User settings can only be changed when no programme is running. The procedure is generally the same for all settings.

Changing user settings

- Hold the **▶|** button depressed for 5 seconds.
- Press the **▶|** button repeatedly until the required setting appears in the display, e.g.:
- To change, press the **▶▶▶** button.
 - The symbol for the programme selection button flashes.
 - The setting is accepted.

User settings	
----------------------	--

Childproof lock	OFF
------------------------	------------

Childproof lock	ON
------------------------	-----------

Exiting user settings

- Press the **▶|** button repeatedly until in the display appears:

Configuration saved




If no button is pressed within about 15 seconds, the user settings are saved and the display goes out.

4 User settings

The following diagram gives an overview of the possible user settings.

Hold the  button depressed for 5 seconds

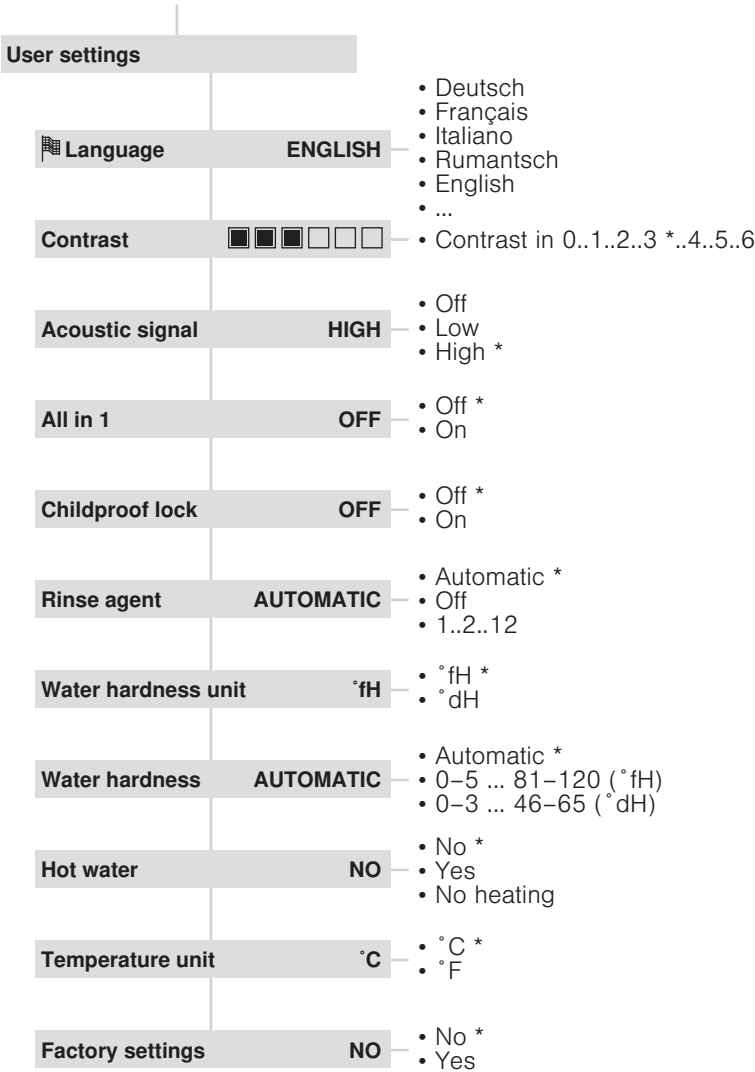





* Factory setting


4.1 Language


The language in the display can be changed.

Changing the language

- Hold the  button depressed for 5 seconds.
- Press the  button repeatedly until the current language appears in the display, e.g.:
- Press the  button repeatedly until the required language appears in the display, e.g.:
 - The setting is accepted.
- Press the  button repeatedly until in the display appears:





User settings

 Sprache DEUTSCH

 Language ENGLISH

Configuration saved

4.2 Resetting the language

- With the appliance switched off, hold the  and  buttons depressed for 10 seconds.
 - User settings are started and the language setting appears in the display in a predefined language.
- Press the  button repeatedly until the required language appears in the display.
- Press the  button repeatedly until in the display appears:

Configuration saved

4.3 Contrast

With this function, the contrast of the display can be changed.

Changing the contrast

- Hold the **▶|** button depressed for 5 seconds.
- Press the **▶|** button repeatedly until the current setting appears in the display, e.g.:
 - Increase contrast: **▶▶▶** button
 - Decrease contrast: **↶** button
 - The setting is accepted.
- Press the **▶|** button repeatedly until in the display appears:

User settings

Contrast



Configuration saved

4.4 Acoustic signal

An acoustic signal is emitted at the end of a programme and if the appliance malfunctions. It can be set at one of three levels («Off», «Low», «High»).



In the event of a malfunction, an acoustic signal is emitted even if it is set to off.

If a delayed start has been set, no acoustic signal is emitted at the end of the programme.

Changing the loudness

- Hold the **▶|** button depressed for 5 seconds.
- Press the **▶|** button repeatedly until the current setting appears in the display, e.g.:
- Press the **▶▶▶** button repeatedly until the required setting appears in the display, e.g.:
 - The setting is accepted.
- Press the **▶|** button repeatedly until in the display appears:

User settings

Acoustic signal

HIGH




Acoustic signal

LOW






Configuration saved

4.5 «All in 1» detergent

The «All in 1» setting adapts the programme for use with detergent with integrated salt and rinse agent function in an optimal way.

-  products can only be used up to a certain water hardness. If the **S** or  refill indicators illuminate, still refill with regeneration salt or rinse agent.
- The duration of very short programmes is extended because  detergent takes longer to dissolve.

Setting for «All in 1» detergent

- Hold the  button depressed for 5 seconds.
- Press the  button repeatedly until the current setting appears in the display, e.g.:
- To change, press the  button.
 - The setting is accepted.
 -  illuminates.
- Press the  button repeatedly until in the display appears:

User settings

All in 1 OFF

All in 1 ON

Configuration saved

4.6 Childproof lock

The childproof lock prevents a programme from being started accidentally. If the childproof lock is on, a programme can only be started by pressing two buttons simultaneously.

Setting the childproof lock

- Hold the **▶|** button depressed for 5 seconds.
- Press the **▶|** button repeatedly until the current setting appears in the display, e.g.:
- To change, press the **▶▶▶** button.
 - The setting is accepted.
- Press the **▶|** button repeatedly until in the display appears:

User settings

Childproof lock **OFF**

Childproof lock **ON**

Configuration saved

4.7 Rinse agent dosage

The rinse agent dosage is automatically adjusted to the load level and the water hardness. If the drying result is unsatisfactory, then the dosage can be switched off manually («Off» setting) or set to one of 12 levels.

- If the dishes are still wet or there are water spots, set the dosage to level 6 or higher.
- If the dishes are streaky, set the dosage to level 3.

Setting the rinse agent dosage

- Hold the **▶|** button depressed for 5 seconds.
- Press the **▶|** button repeatedly until the current setting appears in the display, e.g.:
- Press the **▶▶▶** button repeatedly until the required setting appears in the display, e.g.:
 - The setting is accepted.
- Press the **▶|** button repeatedly until in the display appears:

User settings

Rinse agent AUTOMATIC

Rinse agent 6

Configuration saved

4.8 Water hardness

The built-in water softener removes limescale from the water, enabling problem-free cleaning. Automatic regeneration occurs at regular intervals, thus guaranteeing its effectiveness. Your appliance is equipped with an automatic limescale sensor. Configuring the level of water hardness is therefore not necessary. The appliance automatically starts the regeneration process at the right time. After regeneration, the next programme starts by rinsing out the water softener by pumping water through it and draining simultaneously.

For hygiene reasons, regeneration salt is also recommended for use with low water hardness and *all in 1* detergents.



For information on the level of water hardness in your area, visit www.wasserqualitaet.ch or contact your local water authority.

Setting the water hardness unit

The unit of water hardness can be set to the French measure of water hardness (°fH) or the German measure of water hardness (°dH).

- Hold the **▶|** button depressed for 5 seconds.
- Press the **▶|** button repeatedly until the current setting appears in the display, e.g.:
- To change, press the **▶▶▶** button.
 - The setting is accepted.
- Press the **▶|** button repeatedly until in the display appears:

User settings

Water hardness unit °fH

Water hardness unit °dH

Configuration saved

Setting the water hardness

The water hardness setting can be changed to suit local conditions.

- Hold the **▶|** button depressed for 5 seconds.
- Press the **▶|** button repeatedly until the current setting appears in the display, e.g.:
- Press the **▶▶▶** button repeatedly until the required setting appears in the display, e.g.:
 - The setting is accepted.
- Press the **▶|** button repeatedly until in the display appears:

User settings

Water hardness AUTOMATIC

Water hardness 21–25 °fH

Configuration saved



The water softener is deactivated at level 0–5 °fH or 0–3 °dH.

Levels of water hardness

Possible settings in °fH (French measure of water hardness)

Automatic	0	6	11	16	21	26	31	36	41	51	61	71	81
	–	–	–	–	–	–	–	–	–	–	–	–	–
	5	10	15	20	25	30	35	40	50	60	70	80	120

Possible settings in °dH (German measure of water hardness)

Automatic	0	4	7	10	13	15	17	20	23	28	33	39	46
	–	–	–	–	–	–	–	–	–	–	–	–	–
	3	6	9	12	14	16	19	22	27	32	38	45	65

4.9 Hot water connection

The available hot water is used optimally. If the water intake is still too cold, a short pre-rinse is carried out. The cleaning phase with hot water follows. When the additional energy saving function is selected, the water is heated up further electrically only to a minimum temperature, reducing energy consumption further.

Setting the hot water connection

- Hold the ►| button depressed for 5 seconds.
- Press the ►| button repeatedly until the current setting appears in the display, e.g.:
- To change, press the ►►► button.
 - The setting is accepted.
- Press the ►| button repeatedly until in the display appears:

User settings

Hot water

NO

Hot water

YES

Configuration saved

«NO HEATING» setting

The water is not heated up further by the integrated heating element. For this reason, this setting should only be selected if a water inlet temperature of 60 °C is ensured. Satisfactory cleaning and drying results are not guaranteed at a lower temperature.

4.10 Temperature unit

The unit of temperature can be set to degrees Celsius [°C] or degrees Fahrenheit [°F]

Changing the unit of temperature

- Hold the **▶|** button depressed for 5 seconds.
- Press the **▶|** button repeatedly until the current setting appears in the display, e.g.:
- To change, press the **▶▶▶** button.
 - The setting is accepted.
- Press the **▶|** button repeatedly until in the display appears:

User settings

Temperature unit °C

Temperature unit °F

Configuration saved

4.11 Restoring factory settings

The factory settings can be restored.

- Hold the **▶|** button depressed for 5 seconds.
- Press the **▶|** button repeatedly until the required setting appears in the display, e.g.:
- To change, press the **▶▶▶** button.
 - The setting is accepted.
- Press the **▶|** button repeatedly until in the display appears:

User settings

Factory settings

NO

Factory settings

YES

Configuration saved

5 Operation

5.1 Preparing the appliance

Open the appliance door

- Pull the door handle forwards.
 - Any programme that is running will be automatically interrupted.




Before using for the first time

- Switch the power on.
- Turn the water tap on.
- Fill the salt reservoir with approximately 1.5 l water and 1 kg regeneration salt.
- Mix the salt solution well using a wooden spoon.



For hygiene reasons, regeneration salt is also recommended for use with low water hardness and **all in 1** detergents.

- Wipe away any excess salt around the edge of the salt reservoir.
- Fill the rinse agent reservoir with rinse agent.
- Run the  programme without dishes to protect the appliance from corrosion from any excess salt.



On initial use, the **S** refill indicator can remain illuminated for several wash cycles.

S will go out when the salt concentration in the reservoir is evenly distributed (after approximately 10 wash cycles).

5.2 Loading the baskets




Not all table- and kitchenware are dishwasher safe. Please follow the advice in DISHWASHING TIPS.

- Remove any coarse or hard pieces of food or foreign objects left on the dishes.
- Make sure no toothpicks get into the appliance. Toothpicks can cause the filter system to become clogged up.
- Dishes, pots and pans with heavily burned-on food debris stuck to them should be soaked in water first.
- After loading the dishes, check that the spray arms can turn freely.

In the following, you will find some loading tips to help you get the best results from your appliance.

5.3 Loading tips for the upper basket



- Pull the upper basket out as far as it will go and load. Load smaller items such as saucers, glasses, cups and dishes.
 - If using foldable racks **1**, stagger the items so that the water can reach the dirty surfaces better.
 - Load salad servers, spatulas, etc. in the vario cutlery basket insert.
 - Rest glasses on the adjustable glass holder **2**.

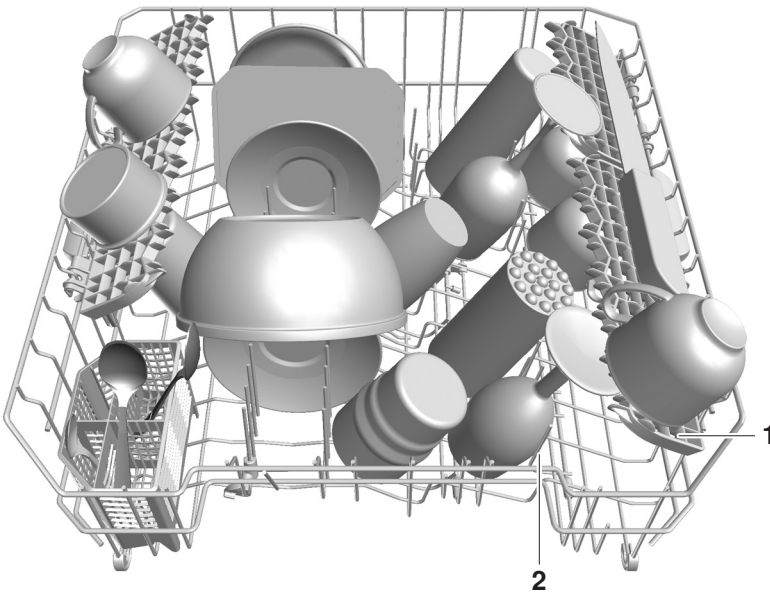

Glass holders

The glass holders **1** are particularly suitable for tall glasses. They can be folded down or up.

- Push the glass holders gently down or, alternatively, pull them up until they engage.

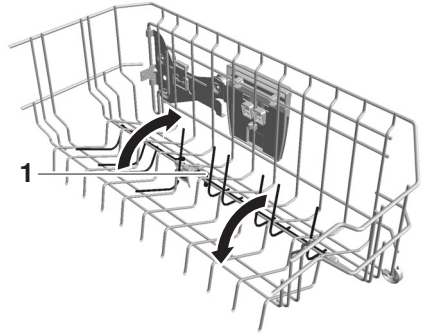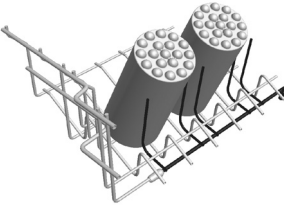


Racks

The racks **1** can be used as glass holders.



Remove the racks to accommodate tall glasses.

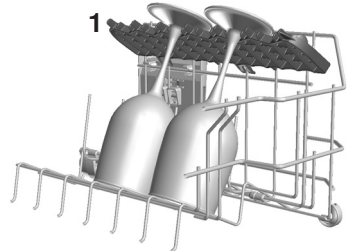


Dismantling/adjusting the height of the racks

The height of the racks is adjustable.

1. Push the rack **1** up by the hooks **2**.
2. Push the rack inwards and then out.

- Hook the rack in the higher position **3**, if required.

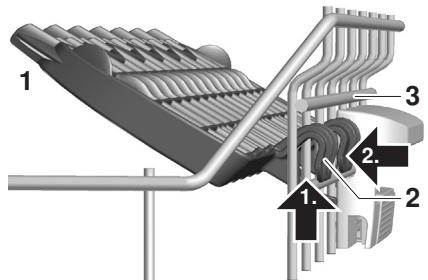


Easy prongs

The easy prongs **1** can be placed over the prongs anywhere in the basket.


By using the easy prongs, drinking glasses, baby bottles, sports bottles, vases and carafes can be placed anywhere in the basket.

Use 2 easy prongs for wider vessels.

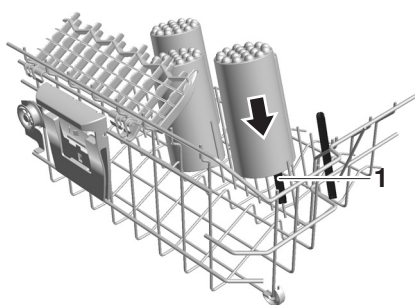


Foldable racks

Swing the rack **1** to the right to create an additional loading area for cups and glasses.

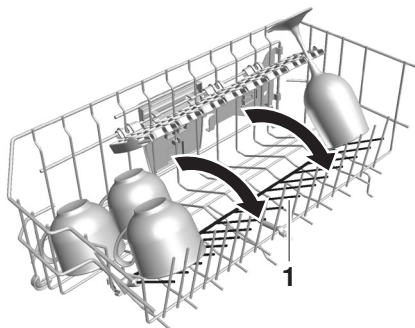


Vario cutlery basket insert

- Place ladles **1**, knives (points) **2** and frying spatulas **3** in the compartments, pointing to the back. Stand wooden spoons **4** on their side.

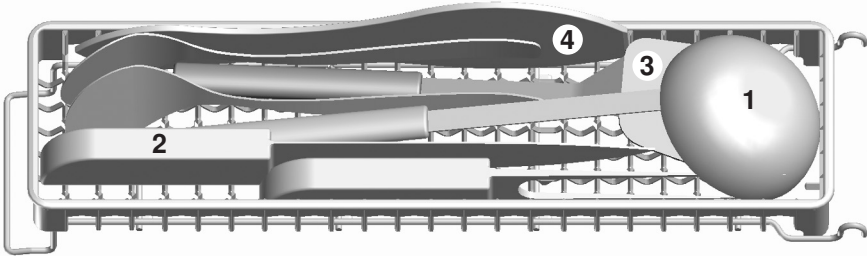

- Place the vario cutlery basket insert on the sliding guide at the back and on the basket grip.

To load the upper basket, the vario cutlery basket can be moved sideways or lifted up.

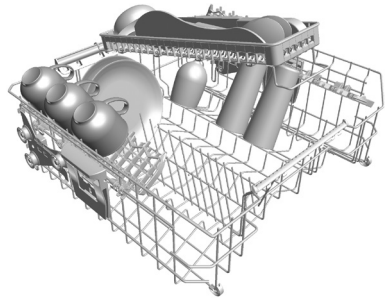


- The vario cutlery basket insert holds a maximum of 14 pieces of cutlery.



Avoid placing any larger items (pans, bowls etc.) beneath the vario cutlery basket insert so as not to obstruct the lower spray jet.


Adjustable upper basket

The height of the upper basket can be adjusted to 3 levels by a total of approximately 4 cm. It can be inclined in various ways.

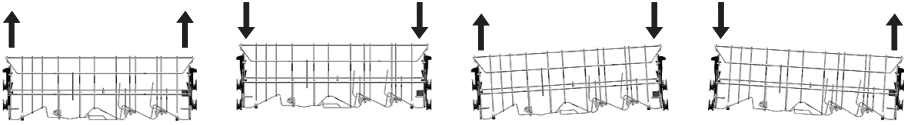


Raising the upper basket

- Hold the upper basket at the sides by the grips **1** and raise it into the position required.

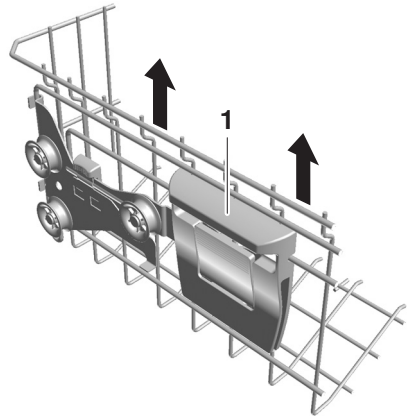


Lowering the upper basket

- Hold the upper basket at the sides by the grips **1**.
- Raise the upper basket slightly and press the button **2** at the same time.
 - The locking device is released.
- Lower the upper basket into the position required, release the button and engage the basket.

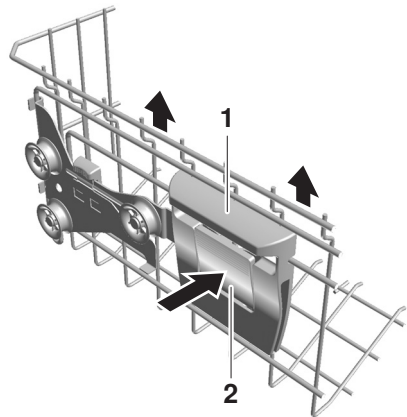

5.4 Loading tips for the lower basket

- Pull the lower basket out as far as it will go and load.
 - Load larger items such as plates, bowls, platters, pots and pans.
 - Load wide dishes (soup plates, lids, etc.) at the back on the right.

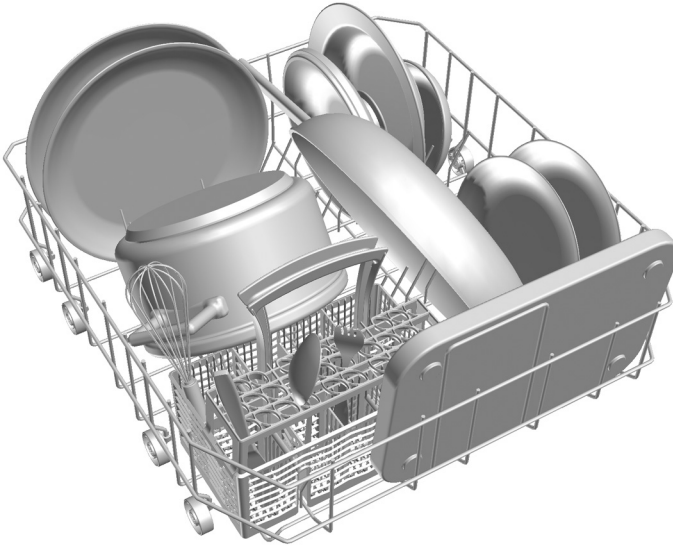


Put plastic bowls in the upper basket. If loaded into the lower basket, they could be lifted by the pressure of the water and could come into contact with the revolving spray arm.


Foldable racks

The racks **1** can be folded down to create a larger area for loading e.g. large platters, pans, dishes or a number of cups and glasses.

Cooking trays can be placed between the prongs. Easy prongs give optimal stability.

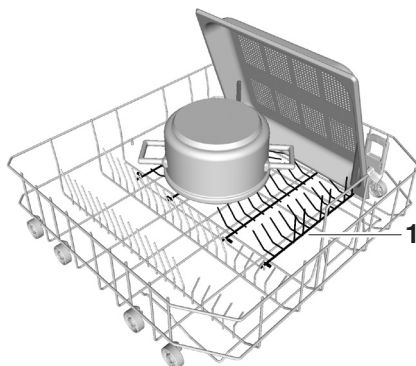

In order to fold the racks down, the locking grip **2** at the side must be pulled up.

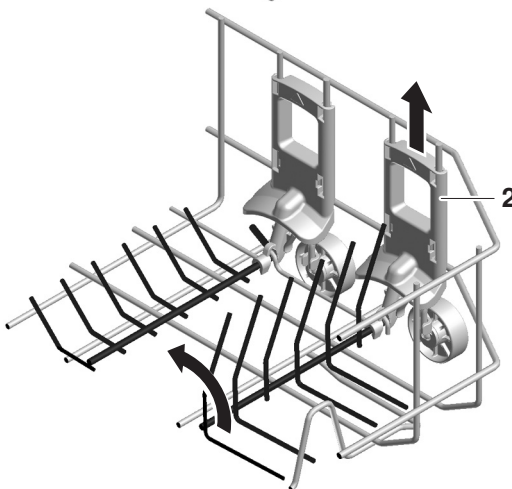


Easy prongs

The easy prongs **1** can be placed over the prongs anywhere in the basket.

By using the easy prongs, drinking glasses, baby bottles, sports bottles, vases and carafes can be placed anywhere in the basket.


Use 2 easy prongs for wider vessels.

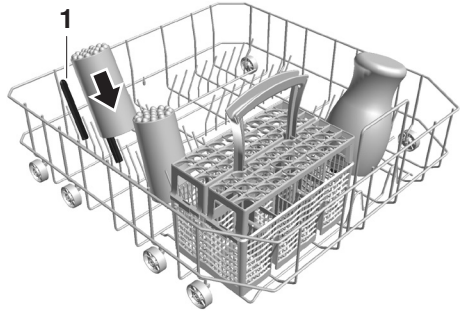

Cleaning baking trays


The upper basket has to be removed for larger baking trays.

- Slide the upper basket out as far as possible.
- Remove the basket safety lock **2** by pushing it upwards.
- Pull the upper basket out of its guides.

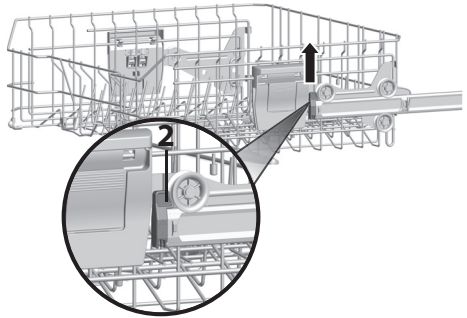

When the upper basket is put back, the basket safety lock **2** must be put back in.

- Arranging baking trays.
 - The easy prongs act as a stable prop.

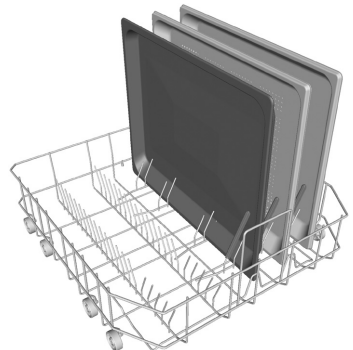

Cutlery basket



To avoid injury, place knives and cutlery with sharp edges or points into the cutlery basket in such a way that they do not stick out (points facing downwards).




Knives and cutlery with sharp edges or points may also be placed horizontally in the upper basket.

The cutlery basket may be placed over the easy prongs anywhere in the lower basket.


- Put cutlery loosely in the cutlery basket, with handles pointing down. Make sure no spoons are sticking together.

The inserts **1** supplied prevent items of cutlery sticking together, water spots during drying, and smaller items (e.g. mocca spoons) slipping through the basket.

- Fit the inserts to the cutlery basket.

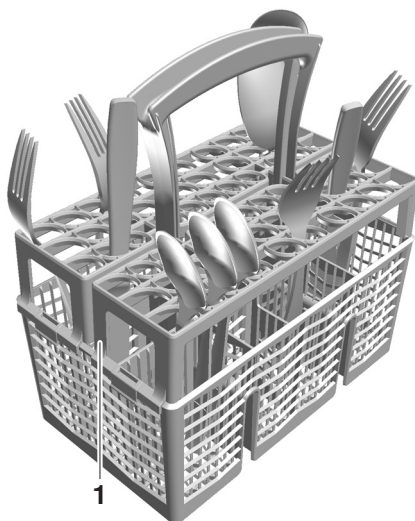



When closing the appliance door, ensure no items of cutlery are sticking out of the tub or are trapped. The leak tightness of the appliance cannot otherwise be assured.

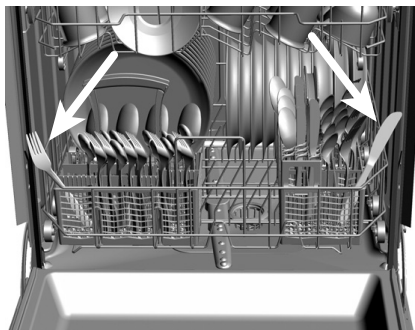

5.5 Adding the detergent

Powder

- Open the detergent dispenser by pushing the release catch in the direction of the arrow.
- Add the detergent to the detergent compartment.
 - For dosage, follow the detergent manufacturer's instructions.
 - Observe the «20 and 30 ml» level marks **1**.
 - For heavier soiling, add approximately 1 tablespoon of detergent to the pre-rinsing compartment **2**.

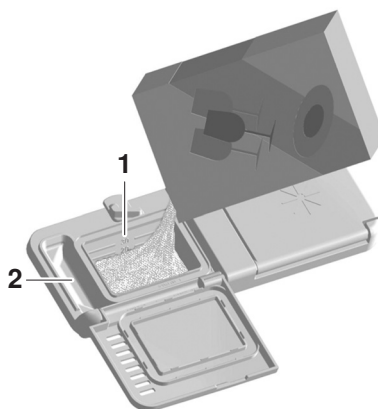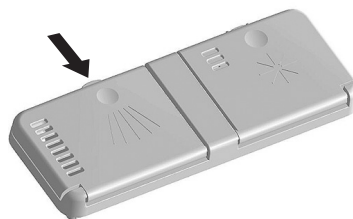


- Close the cover.



Tabs

- Place the tab **3** flat in the detergent compartment.

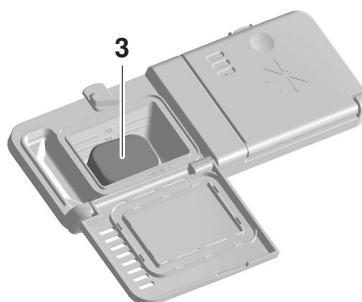

Choice of detergent




Do not use washing-up liquid. It can cause excessive foaming, causing your appliance to malfunction.

Follow the dosage instructions printed on the detergent package carefully. Using too high a dosage can cause damage to the appliance.

- Only use detergent specially formulated for dishwashers.
- The detergent manufacturer's advice centre will gladly help with any problems (e.g. detergent dosage).
- Tabs may not dissolve properly at a wash temperature of 55 °C or lower, affecting the cleaning performance of the appliance.

Using combination cleaning products (^{all}/_{in} 1 tabs/powder)

If using combination cleaning products, which should render the use of rinse agent and regeneration salt superfluous, please observe the following tips:

- Use the **All in 1** **ON** user settings to adapt the programmes and displays to the detergent.
- If the **S** or  refill indicators illuminate, the regeneration salt or rinse agent should still be refilled.
- If the washing and drying results are not satisfactory, use conventional cleaning products. Refill the regeneration salt and rinse agent reservoirs. Change the user settings to **All in 1** **OFF**. For complaints, please contact the detergent manufacturer.

5.6 Selecting a programme

- Press the ►►► button repeatedly until the required programme symbol flashes.





- Close the appliance door.
 - The programme starts immediately.




If the appliance door is not closed within 15 seconds of selecting a programme, all entries, symbols and the display are cleared. A 2× acoustic signal is also emitted. It is necessary to make a new programme selection.

Press the ► button at any time to cancel the programme selected.

5.7 Selecting the economy programme


- With the appliance switched off, press the  button.
 -  flashes.

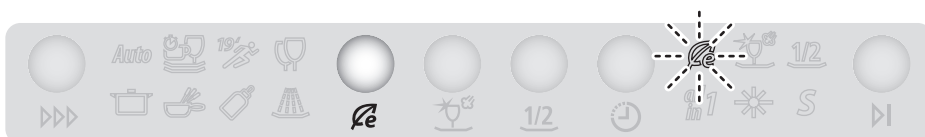


- Close the appliance door.
 - The programme starts immediately.

5.8 Selecting additional functions



After selecting a programme, it is possible – within 15 seconds and while the programme symbol is flashing – to select additional functions.

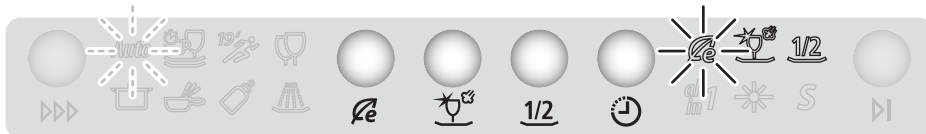


- Press the additional function button.
 -  illuminates (example).



- Close the appliance door.
 - The programme starts immediately.






It is not possible to select the additional  function with the  programme.

It is not possible to select the additional  and  functions with the  programme.




Energy saving

This additional function reduces the energy consumption by approximately 10 %.

- Press the  button while the programme symbol is flashing.
 -  illuminates.
- Press the  button repeatedly to cancel the additional function.

SteamFinish

This additional function results in sparkling, dry dishes.

- Press the  button while the programme symbol is flashing.
 -  illuminates.
- Press the  button repeatedly to cancel the additional function.



SteamFinish is not selectable if there is not sufficient regeneration salt in the salt reservoir. **Refill salt** appears in the display.

Partial load

This additional function adjusts the amount of water to the smaller load.

- Press the **1/2** button while the programme symbol is flashing.
 - **1/2** illuminates.
- Press the **1/2** button repeatedly to clear the additional function.

5.9 Saving additional functions

When an additional function is saved, it is automatically active during programme selection.

- Hold the additional function button depressed for 5 seconds.
 - The selection is saved.
- Depress the button again for 5 seconds to clear the saved function.




The corresponding symbol flashes briefly and an acoustic signal is emitted to confirm that the additional function has been saved or deselected.

5.10 Delayed start

The delayed start allows you to wash during off-peak hours (e.g. at off-peak electricity rates). A delayed start of between 30 minutes and 24 hours can be set. The delayed start duration last entered is shown as a suggestion.

Setting a delayed start

- Select a programme and the additional «Delayed start» function.
- Repeatedly press or hold down the  button until the required delayed start duration appears in the display, e.g.: **Start in 2 hours**
- Close the appliance door.
 - The display goes dark.
 - The countdown to the set delayed start begins.




Dishes can be loaded at any time during the delayed start.

When the delayed start period is up, the programme selected starts automatically.



No acoustic signal is emitted at the end of the programme.

Clearing

- Open the appliance door.
- Repeatedly press or hold down the  button until the delayed start is cleared and the programme phase appears.
- Close the appliance door.
 - The programme selected starts.

5.11 Interrupting a programme



The dishes and water may be hot – scalding hazard!

- Open the appliance door carefully.
 - The programme is interrupted.
 - The programme symbol flashes.
 - Display (alternates), e.g.:

Close the door

Cleaning

1h05



When the appliance door is closed – in the case of higher water temperatures – noise from the pump switching on and off up to 5 times with short pauses in between may be heard. During this phase, temperature equalisation takes place.

5.12 Aborting a programme



The dishes and water may be hot – scalding hazard!

- Open the appliance door carefully.
 - The programme is interrupted.
- Hold the ►| button depressed for 2 seconds.
 - The water is pumped off.
 - Display (alternates):
 - A 5× acoustic signal is emitted.
 - The display and symbols go out.

Programme interrupted

Please wait ...

5.13 End of programme

At the end of the programme:

- A 5× acoustic signal is emitted.
- The display remains illuminated for about 30 minutes (drying).
- After drying, a long acoustic signal is emitted



For a better drying result, the fan continues running. The appliance door should not be opened until a long acoustic signal is emitted and the display goes out. After drying, the appliance enters the energy-saving stand-by mode.

Unloading

- Unload the dishes or alternatively leave them in the appliance until next needed.




Unload the lower basket first.

- Periodically check the filter system and clean if necessary.

5.14 Operation with childproof lock activated

When the childproof lock is activated, before a programme can be selected the childproof lock has to be overridden by pressing two buttons at the same time. After accessing programme selection, the next steps (as described in the previous sections) can be carried out.

Accessing programme selection

- Open the appliance door.
 - Display for 15 seconds:
- Hold the ►►► button (the  button for the economy programme) depressed and at the same time press the ►| button.
 - The childproof lock has been overridden.

Childproof lock




The appliance can now be operated without regard to the childproof lock.

6 Care and maintenance

6.1 Cleaning the interior

Using the correct dosage of detergent will automatically clean the interior of the appliance. We recommend cleaning the appliance twice a year with dishwasher cleaner.



Follow the directions for use for dishwasher cleaner carefully. Most dishwasher cleaners work more effectively at higher temperatures. We therefore recommend using the  programme.

6.2 Cleaning the exterior

- Do not use abrasive or highly acidic detergent.
- Do not use abrasive scouring pads, metal wool, etc. – damage to the surface.
- Remove any soiling or traces of cleaning agent immediately.
 - Detergent: washing-up liquid, glass cleaner
- Clean the surfaces with a soft, damp cloth – for metal surfaces rub in the direction of the polish lines. Wipe dry with a soft cloth.
- Clean the operating panel with a damp cloth and then wipe dry.
 - Detergent: washing-up liquid, glass cleaner
- From time to time, clean the seal and the edges of the appliance door with a soft, damp cloth.

6.3 Cleaning the filter system



Only use soft materials for cleaning beneath the filter system.

Never use metal objects for cleaning.

An incorrectly assembled filter system can cause the appliance to malfunction.

A dirty filter system can cause unsatisfactory cleaning results and affect the water outlet. Therefore, periodically check and clean the filter system.

- Open the appliance door and pull out the lower basket.
- Release the filter system in fine filter **1** in an anti-clockwise direction and remove.
- Open the coarse filter **2** by pressing on closure plate **3** and clean the filter system under running water using a brush.
- Remove any coarse debris.
- Replace the filter system and turn the fine filter **1** as far as it will go in a clockwise direction.




6.4 Cleaning the spray arms

If the cleaning performance is unsatisfactory or if dishwasher detergent is being left behind, then the nozzles in the spray arms may be clogged.


Upper spray arm

- Remove the upper basket.
- Release bayonet fastener **1** in an anti-clockwise direction and remove.
- Remove the spray arm **2** from the shaft and rinse well under running water.
- Check the nozzles.

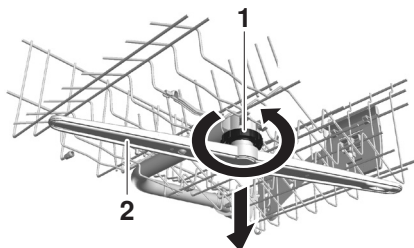

Lower spray arm

- Hold the spray arm **3** in the middle and pull hard upwards.
- Rinse the spray arm well under running water.
- Check the nozzles.

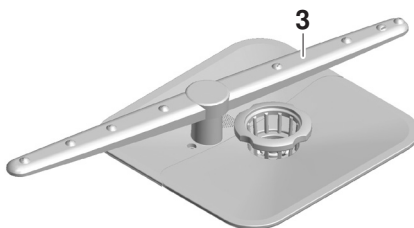

Clean the filter system and the coarse filter at the same time. See **CLEANING THE FILTER SYSTEM**.


6.5 Filling with regeneration salt



Never fill the salt reservoir with detergent!

When the supply of regeneration salt is exhausted, the **S** refill indicator illuminates during programme selection and at the end of the programme.

– Display: **Refill salt**

- Open the appliance door and pull out or remove the lower basket.
- Open the cover of the salt reservoir by lifting up the grip.
- When using for the first time, fill with approximately 1.5 l water. Then fill with 1 kg standard regeneration salt. The drain pump may come on briefly.
- Wipe away any excess salt around the edge of the salt reservoir.
- Close the cover and engage the latch.
- Run the  programme without dishes to protect the appliance from corrosion from any excess salt.



On initial use, the **S** refill indicator can remain illuminated for several wash cycles. Mix the salt solution well using a wooden spoon. **S** goes out when the salt concentration in the reservoir is evenly distributed (after approximately 10 wash cycles).

Approximate consumption of regeneration salt

Water supply	°fH	0-5	6-10	11-15	16-20	21-25	26-30	31-35
	°dH	0-3	4-6	7-9	10-12	13-14	15-16	17-19
1 kg salt suffices for approx. cycles		–	680	360	250	150	125	100
Water supply	°fH	36-40	41-50	51-60	61-70	71-80	81-120	
	°dH	20-22	23-27	28-32	33-38	39-45	46-65	
1 kg salt suffices for approx. cycles		85	60	45	35	28	20	

6.6 Filling with rinse agent



Never fill the rinse agent reservoir with detergent.

Wipe away any spilt rinse agent (risk of foaming and error messages

A0 Foaming?


or

A2 Check water outlet

).


Follow the manufacturer's safety instructions and warnings.

Rinse agent prevents water spotting after final rinsing (rinsing with rinse agent). The rinse agent is dosed automatically from the reservoir in the appliance door.

When the supply of rinse agent is exhausted, the  refill indicator illuminates during programme selection and at the end of the programme.

– Display: **Refill rinse agent**

- Open the rinse agent reservoir by pushing the release catch in the direction of the arrow.
- Fill with rinse agent up to the «max.» mark (1.3 dl suffices for approximately 35 wash cycles).
- Close the cover.
- Wipe away any spilt rinse agent.

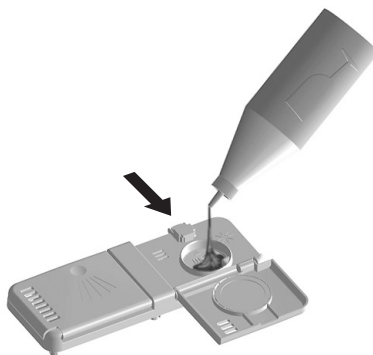

6.7 Cleaning the water inlet filter




Have the water inlet filter cleaned by experts only. If carried out incorrectly, there is a risk of flooding!

The built-in water inlet filter can become blocked by limescale deposits, rust or foreign objects.


This can cause the **A9 Check water inlet** error message.

- Turn off the water tap.
- Unscrew the connection **1** using water pump pliers.
- Remove the water inlet filter **2** using pointed pliers and then clean or replace.
- Clean the seal **3**.
- Replace the water inlet filter **2** and seal **3**. Tighten the connection **1** on the water tap.
- Turn on the water tap and check for leaks.

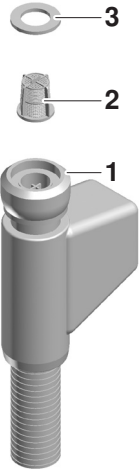

7 Troubleshooting

This section lists faults that can be solved simply by following the instructions given. If another fault is displayed or the fault cannot be remedied, please call Customer Services.



Please note down the error message and the serial number (FN) before calling Customer Services.



Malfunction warning indicated by acoustic signal

- In the event of a malfunction, an acoustic signal is emitted for 1 minute.
- Malfunction warnings are indicated by an acoustic signal even if the acoustic signal is switched off in the USER SETTINGS.
- Detailed information on any current malfunction appears in the display.

7.1 What to do if ...

... **A0 Foaming?**

appears

Possible cause	Solution
<ul style="list-style-type: none">• High foaming detergent was used.• Spilt rinse agent.• Washing-up liquid was used.	<ul style="list-style-type: none">➤ Wipe away spilt rinse agent with a cloth.➤ Get rid of the foam with approximately 1 dl vinegar.➤ Cancel the error message by pressing the  button.➤ Select the  programme.

... **A2 Check water outlet** **appears**

Possible cause	Solution
<ul style="list-style-type: none"> • Filter system blocked. • Drain hose bent or kinked. • Drain pump or siphon is blocked. • Excessive foaming due to rinse agent spillage. 	<ul style="list-style-type: none"> ➤ Fix the problem. ➤ Cancel the error message by pressing the DI button. ➤ Restart the programme.



... **A9 Check water inlet** **appears**

Possible cause	Solution
<ul style="list-style-type: none"> • Water tap is turned off. • Water inlet filter is blocked. • Interruption in water supply. • Water pressure is too low. 	<ul style="list-style-type: none"> ➤ Fix problem or wait until water supply is restored. ➤ Cancel the error message by pressing the DI button. ➤ Restart the programme.



... **F8 / E18 See instructions** / **FN XXX XXXXXX** **appears**

Possible cause	Solution
<ul style="list-style-type: none"> • Water intake is hotter than 79 °C (hot water connection). 	<ul style="list-style-type: none"> ➤ Have a plumber reduce the temperature of the water intake.

... **F.. / E.. See instructions** / **FN XXX XXXXXX** **appears**

Possible cause	Solution
<ul style="list-style-type: none">• Various situations can lead to a «F» message.	<ul style="list-style-type: none">➤ Cancel the error message by pressing the  button. <p>If the error message persists:</p> <ul style="list-style-type: none">➤ Switch the power supply off for about 1 minute.➤ Switch the power supply back on again.➤ Cancel the error message by pressing the  button.➤ Restart the programme.➤ If the error appears again, note down the error message and FN number.➤ Turn off the water tap and interrupt the power supply.➤ Call Customer Services.

... **U.. / E.. See instructions** **appears**

Possible cause	Solution
<ul style="list-style-type: none"> Faulty electrical connection. Overvoltage. 	<p>➤ Cancel the error message by pressing the  button.</p> <p>If the error message persists:</p> <ul style="list-style-type: none"> ➤ Switch the power supply off for about 1 minute. ➤ Switch the power supply back on again. ➤ Cancel the error message by pressing the  button. ➤ Restart the programme. ➤ If the error appears again, note down the error message and FN number. ➤ Switch the power supply off. ➤ Have the electrical installation checked by an expert.


... the appliance does not start

- Close the appliance door.
- Insert the plug into the mains socket.
- Check the fuse or circuit breaker.
- See OPERATION WITH CHILDPROOF LOCK ACTIVATED.

... the dishes are not clean

- Select a more powerful programme.
- Load the baskets differently, avoiding blind spots.
- Clean the filter system and re-insert correctly.
- Check whether the spray arms are clogged or dirty.
- Use the correct amount of detergent or use a different kind of detergent.
- Check the water hardness setting.
- Refill the salt reservoir with regeneration salt.

... there is a white film on the dishes

- Refill the salt reservoir with regeneration salt and then start the  programme without any dishes.
- Use the correct amount of detergent or use a different kind of detergent.
- Refill the rinse agent.
- Increase the rinse agent dosage setting.
- If not using **all in 1** detergent, **All in 1** **OFF** must be set in the USER SETTINGS.

... there are streaks or milky spots on the dishes


- Reduce the rinse agent dosage setting.
- If not using *all in 1* detergent, **All in 1** **OFF** must be set in the USER SETTINGS.

... the dishes are wet and dull or have water marks on them

- Refill the rinse agent.
- Increase the rinse agent dosage setting.
- Do not open the appliance door until the end of the programme when a long acoustic signal is emitted and the display goes out.
- If not using *all in 1* detergent, **All in 1** **OFF** must be set in the USER SETTINGS.

... there are rust stains on the items being washed

The rust stems from another source, e.g. the cutlery, pans, water pipe, etc. The appliance is made of rust-free steel.

- After filling the salt reservoir, select the  programme without dishes.

... the detergent is not fully dissolved

- Check to see whether the spray arms are clogged or dirty.
- Use a different kind of detergent.
- Check the detergent dispenser cover.


... the time display freezes for up to 4 minutes at the beginning of the programme or during the wash cycle

- The water softener is being rinsed through after the regeneration process.
- The duration of the programme and the time display are being automatically adjusted to the degree of soiling of the load being washed.

... there is discolouring of the baskets and plastic parts inside the appliance

Dishes were washed that still had discolouring food leftovers on them (e.g. tomato or curry sauce). The discolouration may fade after a few wash cycles.

... an unpleasant smell tends to come from the appliance

- Clean the filter system.
- Add detergent and run the  programme.
- Select a more powerful programme.
- Add enough regeneration salt.

7.2 Power failure

A power failure causes:

- the programme that is currently running to stop. After the cause of the power supply failure has been resolved, the programme is resumed.
- the fault indication system to be interrupted.


8 Dishwashing tips

Dishes

Not all table- and kitchenware are dishwasher safe.

- Handcrafted objects and wooden or plastic parts that are sensitive to heat or detergent suds should be cleaned by hand.
- Printed glass and porcelain are hardwearing only to a point and eventually can wear off over time.
- Handcrafted pottery has a tendency to crack or chip.
- Objects made of silver, copper and tin have a tendency to discolour, turning brown or black.
- Stress and tension in thick cut crystal glasses and dishes can cause cracking.
- Depending on the type of glassware and the detergent being used, permanent clouding may result. Check with your glassware supplier as to whether your glassware is dishwasher safe.
- Spots tend to form on aluminium. This can affect other items being washed (spots on porcelain). Aluminium should therefore ideally be washed separately.

General


- To prevent damage to glass and water spots, arrange glasses in such a way that they do not touch.
- Do not overload the baskets.
- Load beverage and food containers such as cups, glasses, pots, etc. with the opening facing downwards so that the water can drain off.
- Save energy, water and detergent by loading the appliance to capacity.
- When washing range hood grease filters use the maximum detergent dosage.
 - Select the  programme.

9 Accessories and spare parts


Please give model number of the appliance and exact description of the accessory or spare part when ordering parts.

Accessories


«Small» cutlery basket

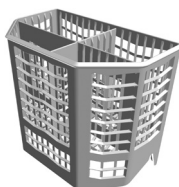


Cup insert

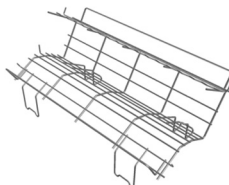

Vario cutlery basket insert

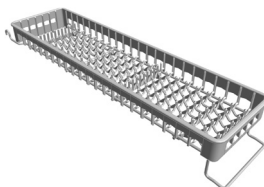

Racks

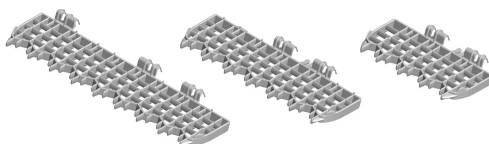


Set of 4 easy prongs




Spare parts

Seal/water inlet filter for Aqua-Stop

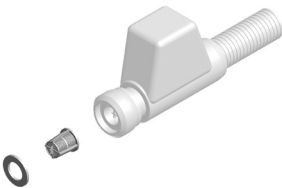

Filter system

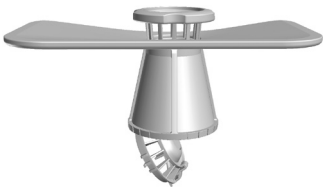

10 Technical data

External dimensions

	Standard	Extra height
Height (with slide plate) [cm]	75.9	82.4
Height (with plinth) [cm]:	78.0–89.8	84.5–96.3
Width [cm]:	59.6	59.6
Depth [cm]:	57.2	57.2
Weight [kg]:	42	44

Plumbing

Cold or hot water up to 60 °C: G¾"

Permitted pressure of water supply: 0.1–1.0 MPa (1–10 bar)

Max. pumping height: 1.2 m

Noise level

- Noise level according GB19606.3-2009: 41 dB(A)

Electrical connection

- See identification plate

Safety concept

Provided power is going to the appliance, the electronic control unit monitors the appliance. Any malfunction is indicated by error messages.


Overflow protection




In the event of a power failure, the overflow protection system is rendered ineffective. Hence, the water tap should be turned off during longer periods of non-use.

The electronic control unit monitors the water level in the appliance. In the event of a malfunction, the drain pump turns on, stopping the supply of water to the appliance.

10.1 Note for testing institutes


Capacity:	13 place settings
Loading:	See following images
Detergent dosage:	5 g reference detergent on the inner door panel and 26.25 g in the detergent dispenser
Rinse agent dosage:	Level 10
Declaration programme:	Economy programme 
Electrical connection:	230 V~ 50 Hz, 10 A
Drying measurements:	At the end of the programme open the door about 100 mm upon completion of dry test.

Upper basket

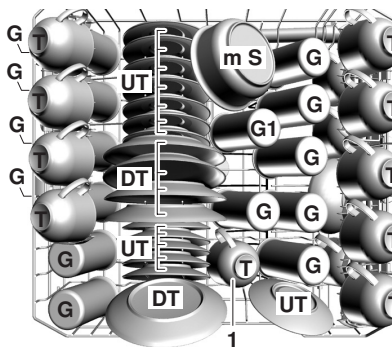


- 13 cups
- 13 saucers
- 13 glasses
- 2 dessert plates

- Lower the basket right down.
- Engage racks in upper position.
- For glasses, fold the glass holder up.
- The cups must sit on the rack (cam) and not lie against the basket (see image).

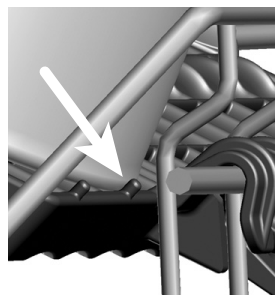

Lower basket

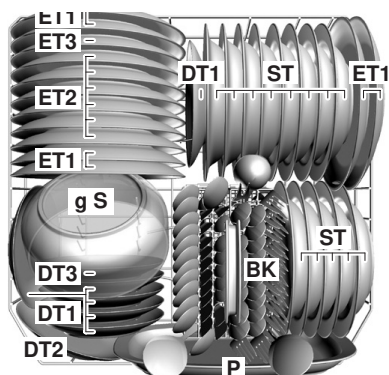


13 plates
13 soup plates
11 dessert plates



Cutlery basket and plates should not touch.

Cutlery basket

back (3 compartments)

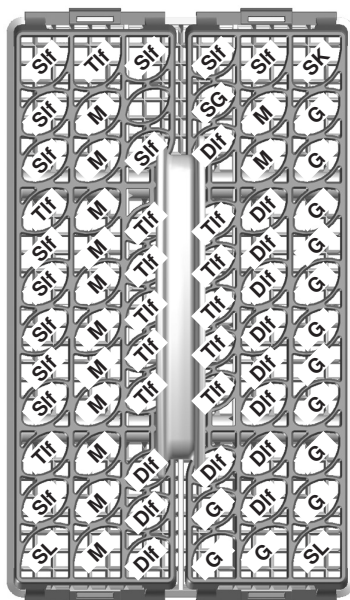

Tlf 13 teaspoons
Dlf 13 dessert spoons
Slf 13 soup spoons
M 13 knives
G 13 forks

front (2 compartments)

► Arrange cutlery vertically and so that it is not touching.

10.2 Noise measurement

The measurement is to be carried out in accordance with the European Norm on airborne acoustical noise IEC 60704.



Please note the Installation Instructions accompanying the appliance.

- Install the appliance (see Installation Instructions).
- For relevant appliances, screw the slide plate to the floor at the front and back.
- Feed the inlet and drain hose into and then out of the test cabinet (see Installation Instructions). Seal the opening around the hoses and cable in accordance with the norm.
- Fit a 19 mm thick chipboard (density: $>750 \text{ kg/m}^3$) to the appliance door as a decorative plate. The decorative plate must reach down to the floor, with an air gap of max. 2 mm. The lateral distance may not exceed 2 mm. Appliances with an adjustable plinth are built in without this.
- To level out any unevenness between the test cabinet and the floor, seal any gaps between them.
- As described in the norm, the measurement is to be carried out without detergent and rinse agent. Turn rinse agent dosage off (see **USER SETTINGS**).
- First, completely fill the salt reservoir with water and then add the regeneration salt (see **CARE AND MAINTENANCE**).
- The appliance regenerates periodically. This extends the life of the appliance, but has no significant effect on the noise measurement.
- Set the water hardness setting (see **USER SETTINGS**).

11 Disposal

Packaging

- All packaging materials (cardboard, plastic film (PE) and polystyrene (EPS)) are marked and should, if possible, be collected for recycling and disposed of in an environmentally friendly way.

Disconnection

- Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician!


Safety

- Disable the appliance to prevent accidents caused by improper use, especially through children playing.
- Pull the plug out of the mains socket or have the appliance disconnected from the mains by a qualified electrician. Then cut off the mains cable.
- Remove or disable the lock on the appliance door.

Disposal

- The old appliance should not be discarded as worthless rubbish. If disposed of correctly, the raw materials can be recovered for recycling.



- The  symbol on the identification plate warns that the appliance may not be disposed of in normal household waste.
- The appliance must be disposed of in accordance with local regulations on waste disposal. For more information on the handling, disposal and recycling of the product, please contact the local authorities, the local recycling facilities for household waste or the retailer from whom you purchased the appliance.

12 Notes

13 Index

A

- Accessories 67
- Acoustic signal 13, 23
- Additional function
 - Delayed start..... 16, 48
 - Energy saving..... 16, 46
 - Partial load 16, 47
 - Saving..... 47
 - Selecting..... 46
- Additional functions..... 12
- Appliance construction 11
- Appliance description 10
- Automatic 14

B

- Before using for the first time 5

C

- Care 52
- Childproof lock
 - Accessing programme selection. 51
 - Setting..... 25
- Children in the home..... 7
- Cleaning
 - Filter system 53
 - Spray arms 54
- Cleaning products
 - «All in 1»..... 44
- Cleaning the exterior..... 52
- Cleaning the interior 52
- Consumption data..... 15
- Contrast 22
- Cutlery basket..... 42

D

- Daily Quick 14
- Delayed start..... 16, 48
- Detergent
 - «All in 1»..... 24
- Disconnection..... 73
- Dishes
 - Loading..... 33
 - Unloading..... 50
- Dishwashing tips..... 66
- Display 13
 - A0 Foaming 58
 - A2 Check water outlet 59
 - A9 Check water inlet 59
 - F.. / E.. See instructions 60
 - F8 / E18 See instructions..... 59
 - U.. / E.. See instructions..... 61
- Display elements..... 12
- Disposal 73

E

- Easy prongs 36, 41
- Economy programme..... 14
 - Selecting..... 45
- Electrical connection..... 69
- End of programme 50
- Energy saving..... 16, 46
- External dimensions 69

F

- Factory settings
 - Restoring 31
- Filter system
 - Cleaning..... 53
- FN (serial number) 58
- Foldable racks 36, 40
- Fondue/Raclette 14, 17

G

Glass	14
Glass holder	35

H

Height adjustable	38
Hot water	29
Hygiene	14

I

Identification plate	79
Intensive	14

L

Language	21
Factory setting	21
Loading tips for the lower basket	
Cutlery basket	42
Easy prongs	41
Foldable racks	40
Loading	39
Loading tips for the upper basket	
Easy prongs	36
Foldable racks	36
Glass holder	35
Height adjustable	38
Loading	34
Racks	35
Vario cutlery basket insert	37
Lower basket	
Loading	39

M

Maintenance	52
Malfunction	79
Model no.	2

N

Noise level	69
Noise measurement	72
Note for testing institutes	70

O

Operating elements	12
Overflow protection	69

P

Packaging	73
Partial load	16, 47
Plain text display	13
Plain text display on glass panel ..	11
Plumbing	69
Power failure	9, 65
Pre-rinsing	14
Programme	
Aborting	49
Interrupting	49
Selecting	45
Programme buttons	12
Programme overview	14
Programme sequence	15
Programme symbols	12

Q

Quick instructions	80
--------------------------	----

R

Racks	35
Regeneration salt	
Filling reservoir	55
Repair service	79
Rinse agent	
Filling reservoir	56
Rinse agent dosage	26

S

Safety	73
Safety concept	69
Safety precautions	
Before using for the first time	5
Children in the home	7
Correct use	6
Note on use	7
Serial number (FN)	58
Spare parts	68
Spray arms	
Cleaning	54
Sprint	14
SteamFinish	16, 47
Symbols	2

T

Technical data. 69
Temperature unit. 30
Trouble-shooting 58
Type 2

U

Unit of temperature 30
Unit of water hardness 27
Unloading 50
Upper basket
 Loading 34
Use 14
User settings 19, 20
Using for the first time 5

V

Validity 2
Vario cutlery basket insert. 37

W

Wash programme 45
Water connection 9
Water hardness. 27, 28
 Levels 28
Water hardness unit 27
Water inlet filter
 Cleaning 57

14 Repair service



The **TROUBLE-SHOOTING** section will help you to carry out small repairs yourself, saving you the time and trouble of calling out a service technician and the cost that goes along with it.

Whether you contact us about a malfunction or an order, please always state the serial number (FN) and the model type of your appliance. Enter these details below and also on the service sticker which comes with the appliance. Stick it in a conspicuous place or in your telephone or address book.

FN

Appliance

You will also find the same details on the certificate of guarantee, the original sales invoice and the identification plate of the appliance.

- Open the appliance door.
 - The identification plate is located on the left-hand side on edge of the tub.

Quick instructions

Please first read the safety precautions in the operating instructions!

- Open the appliance door
- Load the dishes
- Add the detergent
- Select a programme
- Select any additional function(s), if required
- Close the appliance door
- The programme starts immediately
- When a long acoustic signal is emitted, open the appliance door and unload the dishes

V-ZUG Ltd

Industriestrasse 66, CH-6301 Zug
vzug@vzug.ch, www.vzug.com



J234.361-1