


Glass ceramic hob

Induction wok

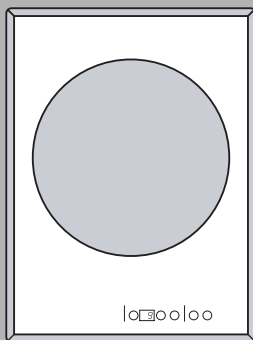

Operating instructions

Dear V-ZUG Customer

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarize yourself with the appliance and get the best use out of it.

Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliance is reserved.

Symbols used



Denotes important safety precautions. Failure to observe said precautions can result in injury or damage to the appliance or fittings!

- ▶ Indicates step-by-step instructions.
 - Describes how the appliance reacts to the steps taken.
- Indicates a list.



Denotes useful tips for the user.

Validity

The model number corresponds to the first three digits on the identification plate. These operating instructions apply to the model:

Type	Model no.
GK16TIWF	226

Variations depending on the model are noted in the text.

Contents

Safety precautions	5
Before using for the first time	5
Correct use	6
Children in the home	6
Note on use	7
Your appliance	10
Appliance description	10
Construction	10
Operating and display elements	11
How induction hobs function	12
User settings	13
Childproof lock	13
Acoustic signal	14
Operating the appliance	15
Pan detection	17
Powerplus	18
Original wok pan	19
Safety features	20
Automatic safety shut-off	20
Excess temperature protection	21
Control panel monitoring	22
After a power failure	22
Care and maintenance	23
Cleaning	23
Cleaning the original wok pan	24
Trouble-shooting	25
What to do if	25
Technical data	28

Disposal	29
Notes	30
Index	33
Repair service	35
Quick instructions	36

Safety precautions



The appliance corresponds to recognised technology standards and the relevant safety regulations. Proper use of the appliance is however essential to avoid damage and accidents. Please therefore follow the precautions given in these operating instructions.

In accordance with the requirements of IEC 60335-1:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or unless they have been given instruction concerning the use of the appliance by a person responsible for their safety.

Before using for the first time

- The appliance must be installed and connected to the electricity supply in accordance with the separate installation instructions. The necessary work should be carried out by a qualified fitter or electrician.
- Dispose of the packaging material in accordance with local regulations.
- Change the user settings to suit your own needs.

Correct use

- The appliance is designed for use in the home for preparing food. No liability is assumed for any damage caused by improper or incorrect use.
- The appliance is not to be used as a room heater.
- Any repairs, modifications or manipulations to the appliance, especially any electrically live parts, should only be carried out by the manufacturer, its Customer Services or similarly qualified persons. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance. If the appliance is not working properly or in case of a repair order, follow the instructions given in the 'Repair service' section. Please contact Customer Services if necessary.
- Retain these operating instructions for future reference. If you sell or pass the appliance on to a third party, please ensure these operating instructions accompany the appliance, together with the instructions on installation. In this way, the new owner can inform themselves about how to use the appliance correctly and read the pertinent safety precautions.

Children in the home

- Packaging material (e. g. plastic, polystyrene) can be dangerous for children. Danger of suffocation! Keep packaging material away from children.
- The appliance is designed for use by adults who are familiar with these operating instructions. Children are often unable to recognise the danger of electrical appliances. Ensure proper supervision and do not allow children to play with the appliance.
- A hob guard can be fitted to protect small children. The Swiss Council for Accident Prevention (bfu) in Berne can provide advice.
- Use the childproof locking facility.

Note on use

- During the first few hours of use, a cooking zone can give off an unpleasant smell. This is normal for brand new appliances. Ensure that the room is well ventilated.
- If the appliance is visibly damaged, do not use it. Contact our Customer Services.
- If the appliance is not operating properly or if cracks caused by an extreme mechanical impact appear on the surface, disconnect the appliance from the mains immediately.
- If the mains cable is damaged, it must be replaced by Customer Services.
- If any electronic components fail, it may not be possible to switch the appliance off in which case remove the fuse or switch the circuit breaker off.
- Ensure the mains cables of other electrical appliances do not touch the hot cooking zones or cookware, as the electrical cable insulation could get damaged.

Important warning for persons with a cardiac pacemaker, a hearing aid or a metallic implant

- Induction hobs produce a high frequency magnetic field around the cooking zones. Standing near the cooking zones can under unfavourable circumstances have an adverse effect on or affect the working of the pacemaker, hearing aid or metallic implant.
- Tests have shown that under normal circumstances there is no risk to cardiac pacemaker users. If, as the user of a cardiac pacemaker (or a hearing aid or another type of implant), you would like to be reassured that using the appliance does not pose a risk, you are advised to consult a competent medical authority.

Caution: Burns/Fire hazard!

- Do not leave the appliance unattended when in use.
- Ensure objects made of metal or with metallic parts, e. g. cutlery, aluminium foil, wrapping paper, do not come into contact with the surface of the appliance.
- The surface will remain hot for some time after it is switched off and will cool down only slowly to room temperature. Please allow sufficient time for the appliance to cool down before, for instance, cleaning it.
- If smoke or fire comes out of the appliance when in use, switch off the fuse in the house wiring system.
- Do not leave the appliance unattended when deep frying. Overheated fat and oil can easily catch fire! Never try to extinguish burning oil or fat with water. Danger of explosion! Smother the flames with a damp cloth and keep all doors and windows closed.
- Keep pets away from the appliance.

How to avoid damaging the appliance



The surface is resistant to heat (up to 650 °C) and fluctuations in temperature. It is also shock and scratch resistant to a certain degree. Nevertheless, please observe the following precautions in order to avoid damaging the appliance.

- In case of overheating, switch the appliance off and allow it to cool down completely. Under no circumstances should you use cold water to cool it down!
- Do not climb on to the appliance.
- A sudden impact such as a salt pot falling on to the hob can damage the surface. Such objects should not be stored above the appliance.
- Do not operate the appliance for any length of time without or with empty cookware.
- Check that the base of the cookware and the surface of the cooking zone are clean and dry before use.
- Always lift – i. e. do not slide – the cookware off the hob so as not to scratch the surface or damage the markings.
- Do not place hot cookware on the frame.
- Do not prepare (peel, cut etc.) fruit and vegetables on the surface. Fine dirt particles and hard objects can damage the surface of the appliance.
- Do not use the appliance as a storage area. In particular, do not deposit any inflammable materials, cardboard or plastic packaging on the surface.
- Tin, zinc and aluminium objects (including aluminium foil and empty espresso capsules) can melt on the hot cooking zone, causing damage.
- Take particular care that sugary foods or juices do not get on to the hot cooking zone as they can damage the surface. If sugary foods or juices do get on to the hot cooking zone, clean away immediately (while still hot) with a scraper.
- Avoid food boiling over.
- When cleaning the appliance make sure no water gets inside it. Use a moderately damp cloth. Do not spray the appliance with water. Do not use a steam cleaner. If water gets inside the appliance, it can cause damage!


Your appliance

Appliance description


- Powerplus
- Electronic energy regulator with 9 power levels
- Automatic safety shut-off
- Pause cooking
- Childproof lock
- Acoustic signal
- Pan detection

Construction



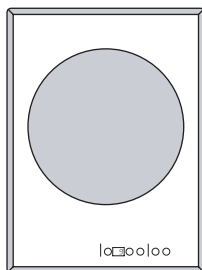


- One \varnothing 300 mm wok cooking zone
- Original wok pan with lid, rack and wok stand

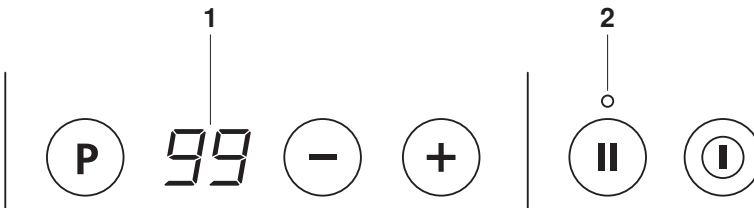

Operating and display elements



Touch buttons

-  Appliance ON / OFF
-  Pause cooking ON / OFF
-  Increase power
-  Reduce power
-  Powerplus

Displays

- 1** Cooking zone power level
- 2** Pause cooking

How induction hobs function

Induction hobs have a quick reaction time, allow precision cooking, are powerful, economical and safe.

They work in a very different way to conventional hobs or solid plates. The induction coils under the glass ceramic plate produce a rapidly changing magnetic field which directly heats up the magnetic base of the cookware.



Induction hobs require cookware with a magnetic base.

The glass ceramic plate remains relatively cool as it only receives heat from the hot cookware.

Removing the cookware from the cooking zone immediately interrupts the supply of energy.

Residual heat indicator

After the cooking zone is switched off, **H** remains illuminated in the display as long as a burn hazard exists.






User settings

Childproof lock


 



The childproof lock is to prevent the appliance being accidentally switched on.

Switching the childproof lock on

Ensure the cooking zone is switched off.





- ▶ Press the  touch button to switch the appliance on.
 -  flashes in the power level display.
- ▶ Hold the  touch button depressed and at the same time depress the  touch button for about 1½ seconds.
 - An acoustic signal is emitted.
 -  appears in the power level display for 10 seconds.

Operating the appliance with the childproof lock activated

- ▶ Press the  touch button to switch the appliance on.
 -  appears in the power level display for 10 seconds.
- ▶ With the childproof lock activated, hold the  touch button depressed and at the same time press the  and  touch buttons.
 - The childproof lock is overridden. The appliance can be operated as usual.
 - 10 minutes after switching the appliance off, the childproof lock is automatically activated again.

Switching the childproof lock off

Ensure the cooking zone is switched off.



- ▶ Press the  touch button to switch the appliance on.
- ▶ Depress the  and  touch buttons simultaneously for about 1½ seconds.
 - A double acoustic signal is emitted.
 -  flashes in the power level display for 10 seconds.

Acoustic signal

An acoustic signal is emitted whenever a button is touched (factory setting). The acoustic signal can be switched off.



To switch off

Ensure the cooking zone is switched off.

- ▶ Press the  touch button to switch the appliance on.
- ▶ Hold the  touch button depressed for about 3 seconds.
 - A double acoustic signal confirms the setting.

To switch on

Ensure the cooking zone is switched off.

- ▶ Press the  touch button to switch the appliance on.
- ▶ Hold the  touch button depressed for about 3 seconds.
 - A single acoustic signal confirms the setting.



The last setting is stored when the appliance is switched off.

The acoustic signal cannot be switched on or off if the childproof lock is activated.

Operating the appliance

When the appliance is switched off, all the displays are dark (stand-by mode), except for the residual heat indicator **H** should the cooking zone still be hot.

Switching the cooking zone on

- ▶ Press the **ⓘ** touch button to switch the appliance on.
 - **0** flashes in the power level display.
- ▶ Switch the cooking zone on within 10 seconds.
 - If no button is pressed within the next 10 seconds, then for safety reasons the appliance switches off automatically.

Setting the power level

- ▶ Press the **+** touch button 1×.
 - The cooking zone comes on at power level **9**.

Alternatively

- ▶ Press the **-** touch button 1×.
 - The cooking zone comes on at power level **3**.
- ▶ To change the power level initially selected, press either the **+** or **-** touch button.
 - Hold the touch button depressed to incrementally change the power level.
 - The power level selected is shown in the display.

Power level

Due to the high power output of induction hobs, cookware is heated very quickly. To avoid burning food, a slightly different approach is therefore required when selecting the power level than with conventional cooking systems.

The following table serves as a guide only.






It is recommended that the power level be increased or reduced depending on the quantity being cooked.

Power level	Use
1-2	Melting, warming
3-6	Simmering, cooking by the absorption method, steaming
7-8	Making egg dishes, stewing
8-9	Stir frying, frying, deep frying
Powerplus	Boiling water

Switching the cooking zone off

- ▶ Press the  touch button repeatedly until  appears in the display.

Alternatively

- ▶ Press the  and  touch buttons at the same time until  appears in the display.

If no other touch button is pressed, the appliance switches off automatically after 10 seconds.






Switching the appliance off

The appliance can be switched off at any time.

- ▶ Press the  touch button.


Pause cooking

With this function, the cooking zone can be switched off temporarily for a maximum of 10 minutes. Cooking can be resumed with the selected settings.

- ▶ Press the  touch button.
 - The indicator light for the  touch button flashes.
 - The power level of the cooking zone changes to .
 - Except for  and , all touch buttons are inactive.




If the pause cooking function is not turned off within 10 minutes, the appliance switches off completely.



- ▶ To resume cooking, press the  touch button again.
 - The cooking zone switches back on again with the selected settings.

Pan detection

The cooking zone is equipped with pan detection. In order to be able to switch the cooking zone on, the original wok pan has to be on the cooking zone.

- If the original wok pan is removed from the cooking zone during operation, energy transfer is interrupted and  appears in the display.

Pan detection runs 10 minutes. If in this time the original wok pan is not used, the cooking zone switches off.

The display changes from  to . The appliance switches off automatically after 10 seconds.

Powerplus

The cooking zone is equipped with the Powerplus **(P)** booster. When Powerplus is switched on, the cooking zone works at extra high power for 10 minutes. After 10 minutes, it automatically reverts to power level **9**.

Switching on

- ▶ Press the **(P)** touch button.
 - **P** appears in the display.
 - After 10 minutes, it automatically reverts to power level **9**.



Removing the cookware interrupts Powerplus. As soon as the cookware is returned to the cooking zone, Powerplus is resumed.

Switching off before time

To switch off before time:

- ▶ Press the **(P)** touch button again.
 - Power level **9** is active.

Alternatively

- ▶ Press the **(-)** touch button repeatedly for the required power level.



If the control unit or the cooking zone overheat, Powerplus automatically ends.

Original wok pan



Only use the original wok pan supplied. Other pans can cause malfunction of or damage to the appliance.

The original wok pan was especially designed for this appliance. It is made of a special material with particular inductive heat transfer properties. As a result, the original wok pan and the food being prepared in it cannot overheat, providing additional safety both in terms of operating the appliance and fire prevention.

- ▶ Before use, ensure the outside of the original wok pan is clean and dry.
- ▶ Place the original wok pan carefully in the wok bowl.
- ▶ Always lift the original wok pan out of the wok bowl – do not slide it out over the edge of the wok bowl.

The original wok pan is unable to stand securely on flat surfaces because of its curved base.

- ▶ For this reason, the original wok pan must always be used with its wok stand when serving.

Safety features

Automatic safety shut-off

The appliance is equipped with an automatic safety shut-off, whereby, depending on the power level being used, the cooking zone switches off automatically after a certain period of time.

Power level	Safety shut-off activated in hours
1-2	10
3	5
4	4
5-6	3
7-8	2
9	1

- If the cooking zone has been switched off because the time limit has been exceeded, **H** and **0** flash alternately in the display.



The cooking zone can be switched on again in the usual way.

Excess temperature protection



Do not put any hot cookware on the control panel.

The control panel is equipped with an excess temperature sensor. If the sensor is activated, the cooking zone switches off automatically.

– **H** flashes in the display.

The cooking zones cannot be used again until the control panel has cooled down.

– Once the control unit has cooled down, press any touch button to cancel the flashing display **H**. The cooking zone can now be switched on again.

Cooking zone

The cooking zone is equipped with an excess temperature sensor. If the sensor is activated, the following measures are carried out automatically:

■ As long as the temperature is too high, the cooling fan runs at maximum speed. Powerplus, if running, ends.

– The display changes from **P** to **g**.

■ If this measure is insufficient, the cooking zone switches off.

– **H** flashes in the display.

Once the cooking zone has cooled down, it can be switched back on again.

Control panel monitoring

If a touch button is touched for longer than 5 seconds (e. g. because an object is standing on it or because food has boiled over on to it), the cooking zone switches off automatically.

- A continuous acoustic signal is emitted.
- **E** flashes in the display.

► Remove the object or the food that has boiled over, etc.

The appliance can now be used again.

After a power failure

After a power failure, **UO** flashes in the display.

- To exit, press any touch button.
 - The childproof lock is no longer activated.
 - The acoustic signal is on.

Care and maintenance



Allow the appliance to cool down before cleaning.

Cleaning



During and after cleaning, ensure no cooking zone has inadvertently been left on.

Remove any soiling as quickly as possible. Dried-up or burned-on food residue is harder to clean off.

- ▶ Clean the surface with a soft cloth or sponge, water and a suitable detergent and conditioner. We recommend using products with a protective additive for the surface. Always follow the detergent manufacturers' instructions for use.




Avoid cleaning the surface with abrasive cleaning agents, scouring pads, wire wool etc. which can damage the surface.

- ▶ Remove slight soiling with a damp cloth and detergent.
- ▶ To remove heavier soiling (gravy spills, soup spills etc.), using a clean cloth or sponge, add detergent to the surface – if necessary, giving it some time to work. Wipe clean with a clean, damp cloth and rub dry.
- ▶ Stubborn soiling (boiled-over milk and non-sugary food etc.) can be removed either when still warm (but not hot!) or cold. Cooktop scrapers, which are available from retailers, are best for this purpose.

- ▶ Remove limescale stains (yellow discolouration) with a small amount of limescale remover (e.g. vinegar, lemon juice, descaler). For stronger stains, allow the solution to work longer. Wipe clean with a clean, damp cloth.

Use of improper cleaning techniques can result in damage to the markings or surface. Damage of this type cannot be reversed through cleaning.

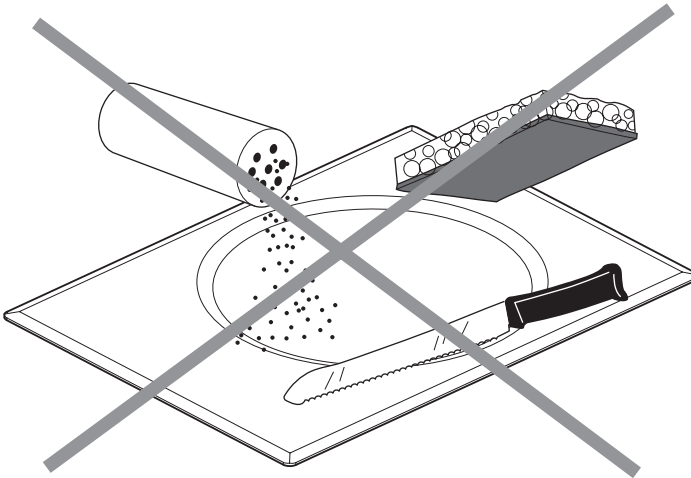

Cleaning the original wok pan

- ▶ Clean with a dish cloth or non-abrasive pad, water and a suitable detergent.



Avoid cleaning the surface with abrasive cleaning agents, scouring pads, wire wool etc. which can damage the surface.

- ▶ Soak the original wok pan in water for a while in order to remove stubborn soiling e. g. rice.

Trouble-shooting

What to do if ...

... **H** and flash alternately in the display

Possible cause	Solution
<ul style="list-style-type: none">■ The automatic safety shut-off has been triggered.	<ul style="list-style-type: none">▶ Switch the cooking zone back on again when required.

... **H** flashes in the display

Possible cause	Solution
<ul style="list-style-type: none">■ The excess temperature protection has been triggered.	<ul style="list-style-type: none">▶ Check the cookware and the food being cooked are OK.▶ Allow the cooking zone to cool down.

... the appliance is not working and the displays are not illuminated

Possible cause	Solution
<ul style="list-style-type: none">■ The fuse or circuit breaker for electrical installations in the home is defective.	<ul style="list-style-type: none">▶ Change the fuse.▶ Reset the circuit breaker.
<ul style="list-style-type: none">■ The fuse or circuit breaker keeps blowing.	<ul style="list-style-type: none">▶ Call Customer Services.
<ul style="list-style-type: none">■ An interruption in the power supply.	<ul style="list-style-type: none">▶ Check the power supply.

... a continuous acoustic signal is emitted and the appliance switches off

Possible cause	Solution
■ Object (e. g. pans, keys) on the control panel.	▶ Remove the object and then operate the appliance as usual.
■ Food has boiled over on to the control panel.	▶ Remove any food spillages and then operate the appliance as usual.


... *U0* flashes in the display

Possible cause	Solution
■ Interruption in the power supply.	▶ Press any touch button to cancel the display.

... *Er* appears in the display, alternating with two numbers

Possible cause	Solution
■ Various situations can lead to an «Er» error message.	▶ Note down the error number. ▶ Call Customer Services.

... **E** and **5, 6, 7** or **9** appears in the display

Possible cause	Solution
<ul style="list-style-type: none">■ The cooking zone is defective.	<ul style="list-style-type: none">▶ Note down the error number.▶ Call Customer Services.▶ Press the  touch button to cancel the error message.

... **U** appears in the display

Possible cause	Solution
<ul style="list-style-type: none">■ Cookware is not suitable for use with the induction wok.	<ul style="list-style-type: none">▶ Only use the original wok pan.

... **when operating the cooking zone for the very first time, an unpleasant smell is produced**

Possible cause	Solution
<ul style="list-style-type: none">■ This is normal for brand new appliances.	<ul style="list-style-type: none">▶ Ensure the room is well ventilated.▶ The smell will wear off after the appliance has been in use for a few hours.

Technical data

Electrical connection

Voltage: 230 V~ 50 Hz
Fuse: 16 A

Connected load

GK16TIWF 3000 W

Dimensions (H × W × D)

GK16TIWF 127.5 × 384 × 480 mm

Disposal

Packaging

- All packaging materials (cardboard, plastic film (PE) and polystyrene (EPS)) are marked and should, if possible, be collected for recycling and disposed of in an environmentally friendly way.

Disconnection


- Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician!

Safety

- Disable the appliance to prevent accidents caused by improper use, especially through children playing.
- Pull the plug out of the mains socket or have the appliance disconnected from the mains by a qualified electrician. Then cut off the mains cable.

Disposal

- The old appliance should not be discarded as worthless rubbish. If disposed of correctly, the raw materials can be recovered for recycling.

- The  symbol on the identification plate warns that the appliance may not be disposed of in normal household waste.
- The appliance must be disposed of in accordance with local regulations on waste disposal. For more information on the handling, disposal and recycling of the product, please contact the local authorities, the local recycling facilities for household waste or the retailer from whom you purchased the appliance.

Notes

Index

A

Acoustic signal	14
Appliance	
Switching off	36
Switching on	36
Appliance description	10
Automatic safety shut-off	20

C

Care	23
Childproof lock	13
Cleaning	23
Original wok pan	24
Construction	10
Control panel monitoring	22
Cooking zone	
Switching off	16
Switching on	15

D

Disconnection	29
Display element	11
Displays	11
Disposal	29

E

Excess temperature	21
--------------------------	----

I

Induction hobs	
Functioning of	12

M

Maintenance	23
Malfunction	25

O

Operating element	11
Operating the appliance	15
Operation	15
Original wok pan	19

P

Packaging	29
Pan	19
Pan detection	17
Pause cooking	17
Power failure	22
Powerplus	18
Switching on	18

Q

Quick instructions	36
--------------------------	----

R

Repair service	35
Residual heat indicator	12

S

Safety	29
Safety features	20
Safety precautions	
Before using for the first time ..	5
Children in the home	6
Correct use	6
Note on use	7
Switching off	16, 36
Switching on	15
Symbols	2

T

Technical data	28
Touch buttons	11
Trouble-shooting	25

U

User settings..... 13
Using for the first time 5

W

Wok pan..... 19

Repair service



The 'Trouble-shooting' section will help you to carry out small repairs yourself, saving you the time and trouble of calling out a service engineer and the cost that goes along with it.

Whether you contact us for repairs or orders, please always state the serial number (SN) and the name of the appliance. Enter these details below and also on the service sticker which comes with the appliance. Stick it in a conspicuous place or in your tele-phone or address book.

SN

Appliance


You will also find the same details on the certificate of guarantee, the original sales invoice and the identification plate of the appliance.

- ▶ Open fitted unit underneath.
 - The identification plate is located behind the front panel.



Quick instructions

Please first read the safety precautions in these operating instructions!


To switch appliance on

- ▶ Depress the  touch button for about 1 second.

To select the power level

- ▶ Select the power level within 10 seconds using the  or  touch button.

Alternatively

- ▶ Press the  touch button to work at extra high power.

To switch cooking zone off

- ▶ Press the  touch button repeatedly until  appears in the display.

To switch appliance off

- ▶ Press the  touch button.

V-ZUG Ltd

Industriestrasse 66, CH-6301 Zug
vzug@vzug.ch, www.vzug.com



J226.352-1