

Operating instructions

Miwell-Combi XSL

Microwave

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarise yourself with the appliance and get the best use out of it.

Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliance is reserved.

Validity

The product family (model number) corresponds to the first alphanumeric on the identification plate. These operating instructions apply to:

Type	Product family	Size system
MWCXSL60	24009	60-450

Variations depending on the model are noted in the text.

Colour operating instructions can be downloaded from the internet from www.vzug.com.

Table of contents

1	Safety precautions	5
1.1	Symbols used.....	5
1.2	General safety precautions	6
1.3	Appliance-specific safety precautions	7
1.4	Instructions for use	8
1.5	Accessories.....	11
2	Disposal	13
3	Using for the first time	14
4	Appliance description	15
4.1	Construction.....	15
4.2	Operating and display elements.....	15
4.3	Cooking space	16
4.4	Accessories.....	17
4.5	Ventilation fan	19
4.6	Installation.....	19
5	Operating modes	20
5.1	Overview of operating modes	20
5.2	Favourite	20
5.3	Microwave	21
5.4	CombiCrunch.....	23
5.5	Hot air.....	24
5.6	Hot air combi mode.....	24
5.7	Fast heating	25
5.8	Grill.....	25
5.9	Grill combi mode	26
5.10	Grill-forced convection	27
5.11	Grill-forced convection combi mode	28
6	Operating the appliance	29
6.1	Selecting and starting the operating mode	30
6.2	Changing the microwave power level/temperature	31
6.3	Changing the operating mode	31
6.4	Changing the duration	32
6.5	Timer.....	32
6.6	Interrupting	33
6.7	Continuing	33

6.8	Aborting the operation	34
6.9	End of operation.....	34
6.10	Switching the appliance off.....	36
7	AutomaticPlus	37
7.1	Overview	37
7.2	Selecting and starting automatic programme	41
8	Tips and tricks	42
8.1	Unsatisfactory cooking result.. ..	42
8.2	Saving energy	43
9	User settings	44
9.1	Selecting user settings.....	44
9.2	Adjusting user settings	44
9.3	Language.....	44
9.4	Childproof lock	45
9.5	Clock functions.....	45
9.6	Illumination	46
9.7	Acoustic signal	46
9.8	Temperature unit.....	47
9.9	Time format.....	47
9.10	Contrast	47
9.11	Factory settings	47
10	Care and maintenance	48
10.1	Cleaning the exterior	48
10.2	Cleaning the appliance door	48
10.3	Cleaning the door seal.....	49
10.4	Cleaning the cooking space.....	49
10.5	Cleaning the accessories.....	50
10.6	Replacing the halogen light bulb.....	50
11	Trouble-shooting	51
11.1	What to do if	51
11.2	After a power failure	52
12	Accessories and spare parts	53
13	Technical data	55
13.1	Temperature measurement.....	55
13.2	Automatic energy-saving stand-by.....	55
14	Index	56
15	Service & Support	59

1 Safety precautions

1.1 Symbols used



Denotes important safety precautions.

Failure to observe said precautions can result in injury or in damage to the appliance or fittings!



Information and precautions that should be observed.



Information on disposal



Information about the operating instructions

- ▶ Indicates step-by-step instructions.
 - Describes how the appliance reacts to the steps taken.
- Indicates a list.

1.2 General safety precautions



- Read the operating instructions before using the appliance for the first time!



- This appliance can be used by children aged 8 and above and by persons with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, provided they are supervised or have been instructed on the safe use of the appliance and have understood the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be undertaken by children without supervision.
- If an appliance is not equipped with a mains cable and a plug or other means for disconnecting from the mains with a contact opening on each pole complying with the conditions of overvoltage category III for full isolation, an isolating device must be incorporated into the permanently installed electrical installation in accordance with the installation regulations.
- If the mains cable of this appliance is damaged, it must be replaced by the manufacturer or its Customer Services or a similarly qualified person in order to avoid hazard.

1.3 Appliance-specific safety precautions



- READ THE IMPORTANT SAFETY INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE.
- WARNING: In the event that the door, door seals or interior are damaged, the appliance must not be used until it has been repaired by a qualified competent person.
- WARNING: Maintenance or repair work which involves removing a cover that gives protection against exposure to microwave energy must only be carried out by a qualified competent person.
- WARNING: Never heat food or liquids in sealed containers such as cans or bottles, as they are liable to explode due to overpressure. Always open food containers before placing them in the cooking space.
- WARNING: Children should only use the appliance in the combined operating mode under adult supervision due to the temperatures generated.
- This appliance is intended for use in the home or in similar environments such as staff kitchens in shops, offices and other commercial spaces; on agricultural premises; for customers in hotels, motels and other residential facilities; or in bed and breakfasts.
- The appliance is intended for heating up food and beverages. Desiccating food, drying clothing or heating warming pads, slippers, sponges, damp cloths and the like can result in injury, ignition or fire.
- If you notice smoke, switch off the appliance or disconnect it from the mains. Keep the door closed to stifle any flames.
- The appliance is intended to be used built-in. Do not use it freestanding. Do not place nor use in a cabinet.

- Only use containers that are suitable for use with microwave appliances.
- Heating beverages in a microwave can result in delayed eruptive boiling (super boiling). Scalding hazard! Be careful when you handle the container!
- The contents of feeding bottles and baby food jars must be stirred or shaken and the temperature must to be checked before consumption in order to avoid burns and scalds.
- Eggs in their shell or whole hard-boiled eggs should not be heated in microwave appliances since they may explode, even after microwave heating has ended.
- Keep the appliance and the door seals clean. Remove any soiling as soon as possible. Otherwise the appliance or the door seal could become damaged, adversely affecting the life of the appliance and possibly resulting in a hazardous situation. For more information on cleaning the door seals, the cooking space and the adjoining parts, see the «Care and maintenance» section.
- Do not use aggressive or abrasive cleaning agents or sharp metal scrapers to clean the glass in the appliance door, as they could scratch the surface. This could destroy the glass.
- Never use a steam cleaner for cleaning the appliance.

1.4 Instructions for use

Before using for the first time

- The appliance must be installed and connected to the electricity supply in accordance with the separate installation instructions. Have a qualified fitter/ electrician carry out the necessary work.

Correct use

- The appliance is designed for use in the home for preparing food. Under no circumstances flambé or cook food using a lot of fat in the cooking space! No liability is assumed for any damage caused by improper use or incorrect handling.
- Never use the appliance to dry animals, textiles or paper, etc.
- Do not use the appliance as a room heater.

- The appliance should only be installed and operated at an ambient temperature of 5 °C to 35 °C.
- Any repairs, modifications or manipulations to the appliance, especially any electrically live parts, may only be carried out by the manufacturer, its Customer Services or a similarly qualified person. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance. If the appliance is not working properly or in case of a repair order, follow the instructions given in the «Service & Support» section. Please contact our Customer Services if necessary.
- Use original spare parts only.
- Retain these operating instructions for future reference.
- The appliance corresponds to recognized technology standards and the relevant safety regulations. Proper use of the appliance is essential to avoid damage and accidents. Please therefore follow the precautions given in these operating instructions.

Note on use

- Use the childproof locking facility.
- If the appliance is visibly damaged, do not use it. Contact our Customer Services.
- If the appliance is not operating properly, disconnect it from the power supply immediately.
- Ensure there are no foreign bodies or pets in the cooking space before closing the appliance door.
- Objects that could pose a danger if the appliance were accidentally switched on should not be stored in the cooking space or the heatable appliance drawer. Do not store food or any temperature-sensitive or inflammable materials, e.g. cleaning agents, oven sprays, etc., in the cooking space or the heatable appliance drawer.
- For appliances with grill: Leave the appliance door closed when grilling. The heat could otherwise damage the operating and display elements or the fitted units above.
- Do not switch the microwave on until you have put the food in the cooking space.
- Remove any non-microwaveable plastic and paper packaging from the food before cooking or defrosting it. Ignition hazard!
- Do not leave the appliance unattended when heating food in plastic or paper containers. Ignition hazard!

1 Safety precautions

- Always open sealed food containers before placing them in the cooking space. Danger of explosion due to excess pressure!

Caution: Risk of burns!

- The appliance gets very hot when in use. The appliance door also gets hot.
- Steam and/or hot air may escape from the cooking space when the appliance door is opened.
- The appliance will remain hot for some time after it is switched off and will only cool down slowly to room temperature. Allow sufficient time for the appliance to cool down before, for instance, cleaning it.
- Overheated fat and oil can easily catch fire. Heating oil in the cooking space to sear meat is dangerous and should not be done. Never attempt to extinguish burning oil or fat with water. Danger of explosion! Smother the flames with a fire blanket. Keep doors and windows closed.
- Do not pour spirits (brandy, whisky, schnapps, etc.) over hot food. Danger of explosion!
- Do not leave the appliance unattended when drying herbs, bread, mushrooms, etc. If the foodstuff dries out too much, it can pose a fire hazard.
- If you notice smoke possibly coming from the appliance itself or from inside the cooking space, keep the appliance door closed. Disconnect the appliance from the power supply.
- Accessories get hot in the cooking space. Use protective gloves or oven cloths.
- Do not heat up alcoholic beverages!
- When heating liquids in a microwave, place a teaspoon in the vessel to prevent delayed boiling. When delayed boiling occurs, the boiling temperature is reached without the usual steam bubbles rising. Disturbing a vessel, even slightly, can cause the liquid to erupt if the container is open. Do not use vessels with a narrow lip.

Caution: Risk of injury!

- Be careful not to put fingers in the door hinges, there is otherwise a risk of injury if the appliance door is moved. Particular care should be taken when children are around.
- Only leave the appliance door open in the at-rest position. An open appliance door poses a danger of tripping or injury! Do not sit or rest on the appliance door or use it as a storage surface.
- For hobs: A hob guard can be fitted to protect small children. Hob guards are available from specialist retailers.

Caution: Risk to life!

- Danger of suffocation! Keep packaging material, e.g. plastic film and polystyrene, away from children. Packaging material can be dangerous for children.

How to avoid damaging the appliance

- Close the appliance door carefully.
- For appliances with visible bottom heating element: Do not place any objects directly on the bottom heating element.
- Do not use protective aluminium inserts with appliances with no visible bottom heating element.
- Do not use objects that can rust in the cooking space.
- Using knives or cutting wheels on the baking tray will visibly damage the surface.
- To prevent corrosion, leave the appliance door open in the at-rest position until the cooking space has cooled down.
- When cleaning the appliance, make sure no water gets inside it. Use a moderately damp cloth. Do not spray the outside or the inside of the appliance with water. If water gets inside the appliance, it will cause damage.
- The construction of the appliance may not be changed in any way. Do not apply force to or interfere with the appliance door or the control and safety devices. The illumination may only be replaced by our Customer Services.
- Take care not to damage the appliance door, the door frame and the door hinges.
- Ensure that nothing is trapped between the appliance door and the frame.
- Do not switch the microwave on until you have put the food in the cooking space.

1.5 Accessories

Risk of burns! The accessories get very hot during use. Use protective gloves or oven cloths.

Turntable roller and glass turntable

- Use the appliance at all times and exclusively with the turntable roller and the glass turntable supplied.
- Never place any other vessel than the glass turntable directly on the turntable roller.
- Allow the glass turntable to cool down first before cleaning it or rinsing it with water.

1 Safety precautions

- Do not cook food directly on the glass turntable.
- Do not place hot food or containers on the glass turntable when it is cold.
- Do not place frozen food or containers on the glass turntable when it is hot.

CombiCrunch plate

- Only use the CombiCrunch plate in the CombiCrunch and hot air modes.
- Never use the CombiCrunch plate in the CombiCrunch mode together with the wire rack.
- Never use the CombiCrunch plate as a stand for dishes or containers.

Wire rack

- Always place the wire rack in the centre of the glass turntable.
- Never lay metal dishes on the wire rack in combi mode. This could cause sparks which could damage the appliance.
- Never use the wire rack for favourite, microwave or CombiCrunch operation. This could cause sparks which could damage the appliance.

Food cover

- Only use the food cover for microwave operation as well as for automatic reheating. Otherwise, the food cover could melt.

Baking tray

- Only use the baking tray in the hot air mode. Otherwise, arcing may occur which could damage the appliance.

Cookware

- Ensure the cookware does not touch the sides of the cooking space as it rotates.
- Use only heat-resistant, microwave-safe cookware, such as glass, ceramic, porcelain, or heat-resistant plastics. Microwaves can penetrate these materials. Microwaves cannot or can only partially penetrate metal cookware; food in this instance will remain cold. If you use metal cookware, arcing may occur which could damage the appliance.
- Only use cookware with a metal decor, e.g. a gold rim, or food in aluminium containers if the manufacturer guarantees their microwave compatibility. This also applies to products made from recycled paper.
- Do not use a meat thermometer. The features of meat thermometers can cause arcing in the microwave mode, which will damage your appliance.
- Porcelain, ceramic and earthenware cookware may have cavities. These can fill with water, causing the dishware to crack. Follow the manufacturers' instructions.

2 Disposal

Packaging

- All packaging materials (cardboard, plastic film (PE) and polystyrene (EPS)) are marked and should, if possible, be collected for recycling and disposed of in an environmentally friendly way.

Disconnection

- Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician!

Safety

- Disable the appliance to prevent accidents caused by improper use, especially through children playing.
- Pull the plug out of the mains socket or have the appliance disconnected from the mains by an electrician. Then cut the mains cable off flush with the appliance.

Disposal

- The old appliance should not be discarded as worthless rubbish. If disposed of correctly, the raw materials can be recovered for recycling.



- The  symbol on the identification plate warns that the appliance may not be disposed of in normal household waste.
- The appliance must be disposed of in accordance with local regulations on waste disposal. For more information on the handling, disposal and recycling of the product, please contact the local authorities, the local recycling facilities for household waste or the retailer from whom you purchased the appliance.


3 Using for the first time

Before operating the newly installed appliance for the first time, the following steps should be taken:


- ▶ Remove the packaging and transportation material as well as any blue protective film from the cooking space.
- ▶ Set the time (see page 45).
- ▶ Switch on the childproof lock if necessary.
- ▶ Clean the cooking space and accessories with a mild cleaning agent and water, and wipe dry with a soft cloth.

4 Appliance description


4.1 Construction

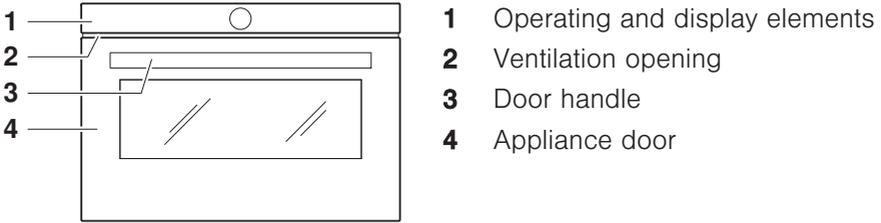


4.2 Operating and display elements

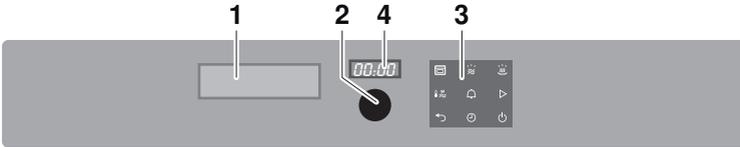

Touch buttons

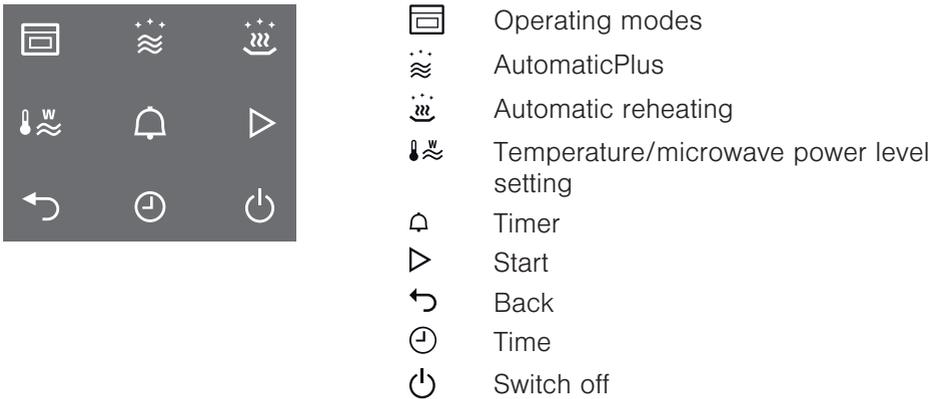

4.3 Cooking space

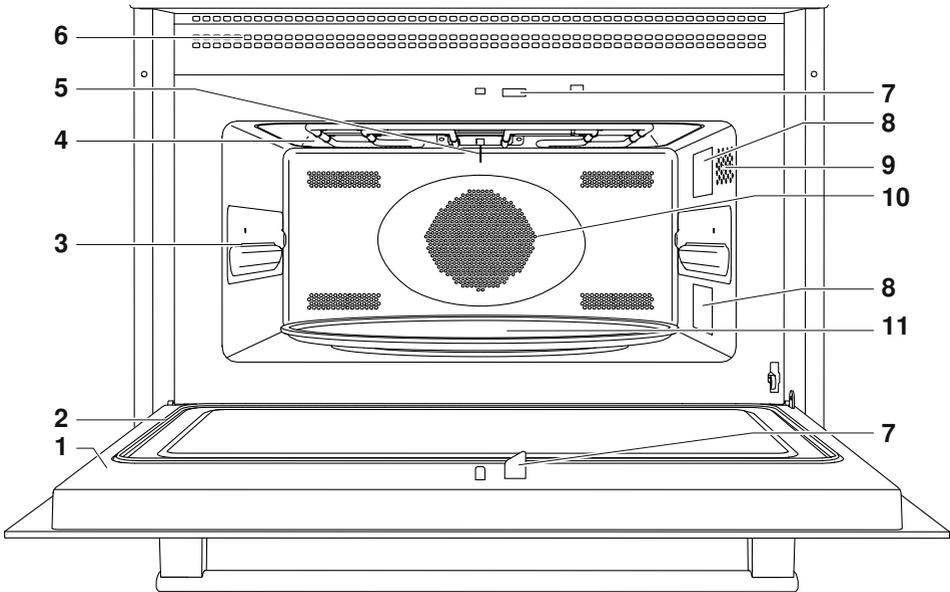


- | | | | |
|----------|-----------------------|-----------|--------------------------------------|
| 1 | Appliance door | 7 | Locking mechanism for appliance door |
| 2 | Door seal | 8 | Microwave inlet |
| 3 | Level for baking tray | 9 | Illumination |
| 4 | Grill | 10 | Hot air fan |
| 5 | Moisture sensor | 11 | Glass turntable |
| 6 | Ventilation slots | | |

4.4 Accessories


Turntable roller and glass turntable



Always use the turntable roller and the glass turntable, also in combination with the other accessories.

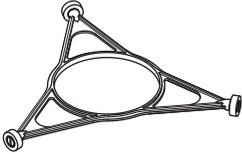

- ▶ Place the turntable roller in the fitting in the floor of the cooking space.

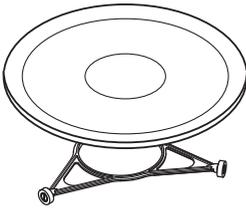


- ▶ Position the glass turntable on the turntable roller so that the pegs on the base of the glass turntable engage in the corresponding recesses of the turntable drive in the floor of the cooking space. The glass turntable can turn clockwise and anti-clockwise.
- ▶ The glass turntable must be used with all operating modes, including when using accessories. It collects meat juices and food particles, preventing soiling of the cooking space floor.

CombiCrunch plate



Do not use the CombiCrunch plate in microwave or grill mode.

Do not use knives or cutting wheels on the CombiCrunch plate. This will cause visible damage.

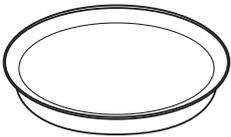

- Browns and crisps up the food.
- ▶ Arrange the food directly on the CombiCrunch plate.

CombiCrunch grip




- ▶ Use the CombiCrunch grip for taking the CombiCrunch-plate out of the cooking space.

High/Low wire rack



Never place metal dishes on the wire shelf in the combi mode. This could cause sparks which could damage the appliance.

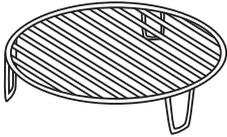


- ▶ In the grill mode, place the food directly on the wire rack and do not cover.

Food cover



Only use the food cover for microwave operation and for  «Automatic reheating». Otherwise, the food cover could melt.

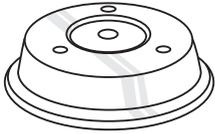

- Prevents the food from drying out.
- Prevents the cooking space from becoming soiled.
- Shortens the cooking time.
- For reheating food on more than one level:
 - ▶ Place a plate on the glass turntable and cover with the food cover.
 - ▶ Place a second plate on the food cover and cover it with a second food cover.

Baking tray

 


Only use the baking tray in the hot air mode. The baking tray must not be used in the microwave or combi modes.


Do not cut using knives or cutting wheels on the baking tray. This will cause visible damage.



- Baking tin especially for savouries and biscuits
- If not fully covered, its shape can become distorted during baking. This is normal. It will go back to its original form as it cools down.
- ▶ Ensure that the «sloped» side **1** of the baking tray points in the direction of the appliance door. This increases safety when removing the tray.



1

 

- ▶ Only use the normal way round – not upside down.

4.5 Ventilation fan

The fan switches on automatically during operation. The fan can continue to run at the end of operation to cool down the electronic components. During this time, the appliance door can be opened and the food removed. The fan switches off automatically.

4.6 Installation



Do not obstruct the ventilation slots at any time.


Adequate air circulation is essential for the appliance to run smoothly. Observe, therefore, the installation instructions and follow the detailed installation specifications.

The appliance may only be operated with the appropriate approved installation kit. Alternative ways of setting up or installing the appliance are not permitted. A special mounting rail is provided for installing the appliance. The appliance can be operated at an ambient temperature of +10 °C to +35 °C.

5 Operating modes



Always use the turntable roller and the glass turntable, also in combination with the other accessories.

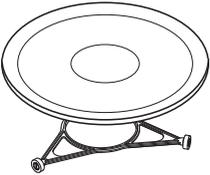

5.1 Overview of operating modes

All the operating modes and fast heating are described below.



Follow the advice under «Tips and tricks» (see page 42) and in the separate «Tips on settings».

5.2 Favourite

If you use a specific operating mode, microwave power level and duration frequently, e.g. to heat up milk, you can save these settings as a favourite.

Setting favourites

- ▶ Press the  sensor button.
- ▶ Select the desired operating mode.
- ▶ Make the settings and confirm.
 - The operating mode summary appears in the display.
- ▶ Press and hold the adjusting knob down for 2 seconds.
 - The settings are saved.
- ▶ Press the  sensor button.
 - The operation starts.

Starting favourites

- ▶ Press the  sensor button.
- ▶ Select .
- The operating mode summary appears in the display.
- ▶ Press the  sensor button.
 - The operation starts.

5.3 Microwave





Power range

Recommended value

Accessories

50–900 W

650 W/5 min

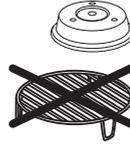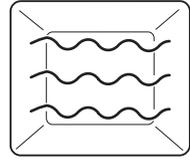

Foods and liquids are heated using microwaves.

Uses

- Precooked foods
- Frozen and convenience foods
- Liquids

Preparing eggs:

- ▶ Crack open the eggs and beat them before cooking.
- ▶ For fried eggs: Prick the yolk before cooking



- ▶ Turn or stir foods, if possible, halfway through the cooking time.



Use a fork to prick the skin or peel of foods such as potatoes, tomatoes, sausages, shellfish or similar.

Otherwise, the steam that is produced will be unable to escape and may cause the food to explode.

Note on use



Please follow the safety precautions.

Porcelain, ceramic and earthenware dishes with cavities – which can fill with water – can crack. Follow the manufacturer's instructions.



Suitable for microwave and combi mode



Not suitable for microwave and combi mode

Particularly suitable for microwave and combi mode

- Glass
- Porcelain
- Microwaveable plastic
- Silicon baking mould

Permitted for microwave mode

- Aluminium packaging for convenience foods
- ▶ Follow the manufacturer's instructions

Forbidden for microwave mode

- Cast iron pots
- Metal cookware
- Aluminium foil
- Baking trays
- Cookware with gold rim or metal decor
- Meat thermometer

Tips for microwave mode



Do not switch the microwave on until you have put the food in the cooking space.

- ▶ Cover food when using the microwave mode to prevent it from drying out. Suitable covers include microwave food covers, glass or porcelain covers and microwaveable films.

The cooking space can become damp when using the microwave mode. To avoid unpleasant odours and corrosion in the cooking space, please observe the following:


- ▶ Cover liquid and steaming foods.
- ▶ Wipe the cooking space with a damp cloth at the end of cooking.
- ▶ Leave the appliance door open in the at-rest position at the end of cooking until the cooking space has cooled down.

5.4 CombiCrunch



Recommended duration 2 min

Accessories

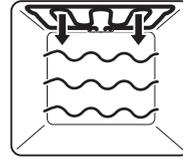

Use the CombiCrunch plate exclusively.

Risk of burns! The cooking space and the CombiCrunch plate get very hot.

Always use the supplied CombiCrunch grip or an oven cloth to remove the CombiCrunch plate.

Do not place the hot CombiCrunch plate on heat-sensitive surfaces.

In CombiCrunch mode, the cooking space heats up using a combination of the grill and microwaves with a fixed microwave power level. The CombiCrunch plate browns and crisps up the food.

- ▶ Arrange the food directly on the CombiCrunch plate.

Uses

- Frozen convenience food, e.g. pizza, chips, fish fingers, chicken nuggets



- ▶ Preheat the CombiCrunch plate for 3 minutes. This makes the food even crispier.




Use a fork to prick the skin or peel of foods such as potatoes, tomatoes, sausages, shellfish or similar.

Otherwise, the steam that is produced will be unable to escape and may cause the food to explode.

5.5 Hot air



Temperature range 50–250 °C
Recommended value 180 °C/15 min

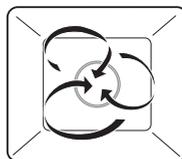

Accessories



All temperatures in these operating instructions are in degrees Celsius. Apply the corresponding conversions via the user setting «Degrees Fahrenheit» (see page 47).

A heating element behind the back wall of the cooking space heats up the air inside the cooking space, which is circulated evenly.

Uses

- Cakes, bread, savouries and biscuits

5.6 Hot air combi mode




Risk of arcing causing damage to the appliance!

Use glass, porcelain or silicone cookware. Do not use metal cookware.



Power range 50–350 W
Temperature range 50–250 °C
Recommended value 180 °C/350 W/15 min

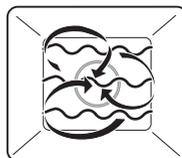

Accessories



In the combi mode, food is also cooked with microwaves, which shortens the cooking time.

Uses

- Fast baking of cakes, lasagne, baked dishes, etc.

5.7 Fast heating



Fast heating can only be used if the cooking space is empty and only with the  «Hot air» mode!

With  «Fast heating», the cooking space is heated using hot air and the grill, which shortens the preheating time.

- As soon as the set temperature is reached, an acoustic signal is emitted and fast heating is finished.

- ▶ Select the  operating mode.

5.8 Grill





Risk of damage to the appliance!

Do not use silicone dishes.



Recommended duration 15 min

Accessories

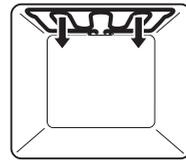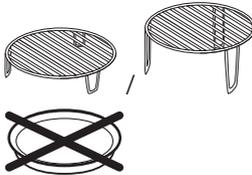

The cooking space is heated by the grill element.
The food quickly gets a crispy, brown crust on top.

Grill settings

The following grill settings are available:

1	Low	The food is grilled at the highest grill setting unless a different setting is selected.
2	Medium	
3	High	

Uses

- Gratinating
- Toasting
- ▶ Place the food to be grilled directly on the wire rack.

- ▶ Place a plate under the wire rack to catch food particles and condensate. 



Use a fork to prick the skin or peel of foods such as potatoes, tomatoes, sausages, shellfish or similar.

Otherwise, the steam that is produced will be unable to escape and may cause the food to explode.

 

5.9 Grill combi mode



Risk of damage to the appliance!
Only use a glass or porcelain dish, never a metal or silicone dish.



Power range 50–650 W
Recommended value 350 W/15 min
Accessories

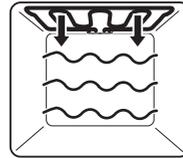

In the combi mode, food is also cooked with microwaves, which shortens the cooking time. Unlike CombiCrunch, the microwave power level and the grill setting can be set individually.

Grill settings

The following grill settings are available:

1	Low	The food is grilled at the highest grill setting unless a different setting is selected.
2	Medium	
3	High	

Uses

- Fast browning and gratinating, e.g. for baked potatoes or vegetables



Use a fork to prick the skin or peel of foods such as potatoes, tomatoes, sausages, shellfish or similar.


Otherwise, the steam that is produced will be unable to escape and may cause the food to explode.

5.10 Grill-forced convection



Recommended duration 15 min

Accessories

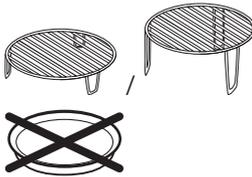

Grill settings

The following grill settings are available:

1	Low	The food is grilled at the highest grill setting unless a different setting is selected.
2	Medium	
3	High	

The heated air is distributed evenly in the cooking space by the fan and the food is grilled more evenly.

Uses

- Gratinating and cooking
- Place the food to be grilled directly on the wire rack.
- Place a plate under the wire rack to catch food particles and condensate. 

5.11 Grill-forced convection combi mode





Risk of damage to the appliance!

Use glass or porcelain cookware only. Do not use metal or silicone cookware.



Power range 50–650 W
 Recommended value 350 W/15 min
 Accessories

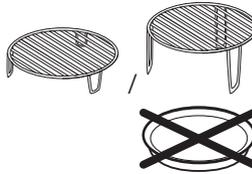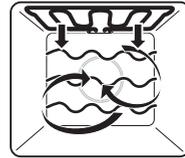

In the combi mode, food is also cooked with microwaves, which shortens the cooking time. The heated air is distributed evenly in the cooking space by the fan and the food is grilled more evenly.

Grill settings

The following grill settings are available:

1	Low	The food is grilled at the highest grill setting unless a different setting is selected.
2	Medium	
3	High	

Uses


- Fast cooking and browning, e.g. for fish or chicken breast
- ▶ Place the food to be grilled directly on the wire shelf.
- ▶ Place a plate underneath the wire shelf to catch food particles and condensate.



6 Operating the appliance

The different menus are selected by pressing the corresponding sensor buttons. Selected sensor buttons and functions are illuminated in white; all other sensor buttons are illuminated in orange.

The following sensor buttons are available with the following menus:

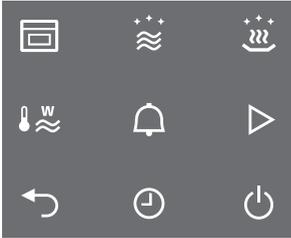

	Operating modes
	AutomaticPlus
	Automatic reheating
	Temperature/microwave power level setting
	Timer
	Start
	Back
	Time
	Switch off

Adjusting knob functions

- Press
- Switching on the appliance
 - Selecting/opening a submenu, setting, etc.
 - Confirming/closing a message
 - Activating/deactivating a user setting
- Turn
- Navigating within the submenus
 - Changing/setting a value or user setting



Return to the previous operating level at any time by pressing the  sensor button.

6.1 Selecting and starting the operating mode



Risk of burns when heating liquids in the microwave!

When liquids such as milk are heated in a microwave, delayed boiling can occur, and disturbing the vessel, even slightly, can cause the liquid to erupt.

- ▶ To prevent this delayed boiling, always place a teaspoon in the vessel with the liquid before heating. Stir the liquid halfway through.
- ▶ If the appliance is switched off, first press the adjusting knob.
 - All the sensor buttons are illuminated.
- ▶ Press the  sensor button.
 - The selection of operating modes appears in the display.
- ▶ Select the desired operating mode.
 - The setting for microwave power levels (watts), temperatures and/or grill settings appears in the display.
- ▶ Set the desired microwave power level, temperature and/or grill setting by turning the adjusting knob and pressing to confirm.
 - The duration  appears in the display.
- ▶ Set the desired duration and confirm.
 - If the duration is 20 minutes or less, the setting for the end time  appears in the display. This allows a delayed start to be set.



This does not apply to the  «Hot air» operating mode, where a delayed start can be set at any time.



If a delayed start has been set, the appliance starts later on.

- ▶ If you wish, set the desired end time and confirm.
 - The settings summary is displayed, e.g.:
- ▶ To start the selected operating mode, press the  sensor button.
 - The operating mode starts.
 - If a delayed start has been set, the appliance remains switched off until the automatic start.





With a delayed start, the settings summary remains visible for 3 minutes, then the display goes out. The  and  sensor buttons are illuminated in white; the  sensor button is illuminated in orange.

6.2 Changing the microwave power level/temperature



The microwave power level and the temperature cannot be changed during an automatic programme.

To change the microwave power level and/or temperature during operation:

- ▶ Press the  touch button.
 - Depending on the operating mode, either the grill setting, the temperature and/or the microwave power level is displayed first.
- ▶ Use the adjusting knob to set the required value and confirm.
 - In the combi modes, the temperature and/or microwave power level is now displayed. Change the value if necessary and/or confirm.
 - The operating mode summary is displayed.

6.3 Changing the operating mode



The operating mode selected cannot be changed during operation.

If no operating mode is running:

- ▶ Press the  or  sensor button.
 - The operating modes menu is displayed.

If an operating mode is already running:

- ▶ Press the  sensor button.
 - The selected operating mode is aborted and the appliance is switched off.
- ▶ Press the adjusting knob and select another operating mode.

6.4 Changing the duration



The duration cannot be changed for automatic programmes.

To change the duration during a running operating mode:

- ▶ Press the  sensor button.
 - The duration remaining is displayed.
- ▶ Change the duration by turning the adjusting knob and pressing to confirm.
 - The summary of the running operating mode appears in the display.

Or:

- ▶ Press the  sensor button.
 - Each press extends the duration by 30 seconds.

Or:

- ▶ Turn the adjusting knob.
 - The duration is extended in the display.



If no further settings are made after 5 seconds, the displayed value is confirmed and the summary of the running operating mode is displayed again.

6.5 Timer

The timer functions like an egg timer. It can be used at any time and independently of all other functions when the appliance is switched on.

Setting and starting the timer

- ▶ Press the  sensor button.
- ▶ Turn the adjusting knob and set the required duration.

The timer can be set for:

- Up to 10 minutes in 10-second intervals, e.g. 9 minutes and 50 seconds.
- Over 10 minutes in 1-minute intervals, e.g. 1 hour and 12 minutes.

The maximum timer duration that can be set is 9 hours and 59 minutes.

- ▶ Press the adjusting knob to confirm.
 - The timer starts.
 - The countdown to the time remaining is visible in the digital display.
 - The  sensor button is illuminated in white.

When the timer finishes

When the set duration is up:

- An acoustic signal is emitted for 1 minute.
- The display says «Timer finished».
- ▶ Confirm the message and switch off the acoustic signal by pressing the adjusting knob or a sensor button.

Checking and changing

- ▶ Press the  sensor button.
 - The time remaining flashes in the digital display.
- ▶ Turn the adjusting knob to change the duration of the timer.
- ▶ Press the adjusting knob to confirm.

Switching off before time

- ▶ Press the  sensor button.
 - The time remaining flashes in the digital display.
- ▶ Press the  sensor button again or turn the adjusting knob to set the count-down to the time remaining to 0.
- ▶ Press the adjusting knob to confirm.

6.6 Interrupting

All operating modes can be interrupted by opening the appliance door. The settings are maintained for 3 minutes. This means the food can be checked, turned or stirred.

6.7 Continuing

- ▶ Close the appliance door.
- ▶ Press the  sensor button 1x.

Operation is continued.



If the  sensor button is pressed repeatedly, each touch of the button lengthens the cooking time by 30 seconds (does not apply to automatic programmes).

6.8 Aborting the operation

- ▶ Press the  sensor button.
 - The operating mode is aborted and all settings are cleared.
 - An acoustic signal is emitted.
 - The appliance switches off.
- ▶ Open the appliance door and remove the food.

6.9 End of operation

- When the set duration is up:
 - The operating mode ends automatically.
 - An acoustic signal is emitted.
 - The following appears in the display, e.g.:



- ▶ Confirm the message and switch off the acoustic signal by pressing the adjusting knob or a sensor button.
- ▶ Open the appliance door and remove the cooked food.



Risk of scalding! Hot air may escape from the cooking space when the appliance door is opened.

- ▶ To prevent damage to the appliance, leave the appliance door open until the cooking space has cooled down.



The accessories get hot. Use protective gloves or the CombiCrunch grip.



Risk of burns when heating liquids in the microwave!

- ▶ Leave liquids to stand briefly after heating and stir them before consuming.

As long as the residual temperature is above 80° C, the following is displayed, e.g.:



Residual temperature
150 °C



During this time, the residual heat will still keep the food warm for some time.

As soon as the temperature falls below 80° C, the display goes out.



The cooling fan can continue to run for a short period.

Extending operation

- ▶ Press the ► sensor button once or several times up to 3 minutes after the end of operation.
 - The operating mode is extended by 30 seconds each time.

Or:

- ▶ Press the ⊕ sensor button.
 - The duration appears in the display.
- ▶ Set the desired duration and confirm.
- ▶ Press the ► sensor button.

Or:

- ▶ Press the 🌡️ sensor button.
 - Depending on the operating mode, either the grill setting, the temperature and/or the microwave power level is displayed first.
- ▶ Use the adjusting knob to set the required value and confirm.
 - In the combi modes, the temperature and/or microwave power level is now displayed. Change the value if necessary and/or confirm.
- ▶ Set the required value and confirm.
- ▶ Set the duration and confirm.
- ▶ Press the ► sensor button.

6.10 Switching the appliance off

- ▶ Press the  sensor button.
 - An acoustic signal is emitted.
 - The display and all sensor buttons go out.

For operating modes with hot air:

- The residual temperature is displayed as long as it is above 80° C.



During this time, the residual heat will still keep the food warm for some time.



The appliance is switched off if none of the sensor buttons are illuminated any more and the display is dark.

The cooling fan can continue to run.

7 AutomaticPlus

With «AutomaticPlus» , food can be prepared quickly and easily. The duration, preparation method and possible accessories are recommended automatically depending on the desired technique.



Neither a duration nor a delayed start can be set.

No settings can be changed during operation.

Follow the advice in the tips on settings.

7.1 Overview

Automatic programmes

	PerfectDefrost		Baking
	Automatic reheating		Melting
	Keep warm		Softening
	Crispy baking		Warming plates
	Cooking		

Accessories

The possible accessories required are displayed before the start of an automatic programme in the settings summary:

	Food cover
	CombiCrunch plate
	Baking tray

Raising the food

-  Place the food or the food container on the glass turntable or low wire rack.
-  Place the food or the food container on the high wire rack or use the baking tray.

PerfectDefrost

«PerfectDefrost»  is used for defrosting food. The following food groups can be selected:

Symbol	Food group	Weight	Accessories
	Meat	100–2000 g	–
	Chicken	100–2500 g	
	Fish	100–2000 g	
	Vegetables	100–2000 g	
	Bread	100–1000 g	

Automatic reheating

Food and liquids are heated using microwaves in the  «Automatic reheating» setting. The following types of food can be selected:

Symbol	Type of food	Weight	Accessories
	Plated meal	250–600 g	
	Soup	200–800 g	
	Beverage	100–500 g	–



Both frozen and unfrozen plated meals can be heated in this mode. A sensor measures the moisture in the cooking space and on the basis of this the appliance calculates the optimum reheating time – it is not necessary to enter the weight.

The cooking space must be cool and dry, otherwise the reheating time cannot be calculated correctly. The appliance door should not be opened during

 «Automatic reheating».

If no other settings are made, the food is heated on a medium heat. To change the heat level:

- ▶ Turn the adjusting knob right or left and confirm.

Keep warm

Cooked foods can be kept warm for a short time using the  «Keep warm» setting.

- ▶ Cover the food over with aluminium foil or heat-resistant lid.
- ▶ Do not use plastic film or a food cover.



If the cooking space is already hot, open the appliance door and allow the cooking space to cool down for 3 to 4 minutes before starting the «Keep warm» function. This ensures that the food does not overcook.

To maintain the desired degree of doneness and ensure that the food does not dry out, select a maximum duration of 1 hour.

Crispy baking

The following foods can be prepared using the «Crispy baking»  automatic programme:

Symbol	Type of food	Weight	Accessories
	Chips	200–500 g	
	Country fries	200–500 g	
	Pizza	300–800 g	
	Chicken wings/ chicken nuggets	200–600 g	
	Quiche	200–800 g	

Cooking

The «Cooking»  automatic programme can be used to cook food automatically and to prepare popcorn. The following types of food can be selected:

Symbol	Type of food	Weight	Accessories
	Baked potatoes	200–1000 g	
	Fresh vegetables	200–800 g	
	Frozen vegetables	200–800 g	
	Tinned vegetables	200–600 g	
	Popcorn	90–100 g	-



Risk of damage to the appliance from sparks! Do not place tin cans in the cooking space!

Always empty vegetables from a tin can onto a plate or into a bowl before placing them in the cooking space.

Baking

The following types of food can be baked using the automatic programme  «Bake»:

Symbol	Type of baked good	Weight	Accessories
	Croissants	-	
	Bread	400–800 g	
	Cake	500–1000 g	
	Soufflé	-	
	Muffins	-	
	Biscuits	-	
	Meringues	-	

Melting

The «Melting»  programme can be used to melt 50–250 g of butter/margarine  or chocolate .

- ▶ Cut the butter into small pieces and place on a plate. Turn or stir halfway through.
- ▶ Break the chocolate into small pieces and place on a plate. Turn or stir halfway through.

Softening

The «Softening»  programme can be used to soften 50–250 g of butter/margarine  or 250–1000 g of ice cream , e.g. for further processing in cakes or desserts.

- ▶ Turn or stir halfway through.

Warming plates

2–8 shallow plates can be heated using  «Plate warmer». Food takes longer to cool down if it is served on warm plates.

- ▶ Put the low wire rack in the cooking space and place the plates on it.

7.2 Selecting and starting automatic programme



The cooking space must be cool, otherwise the required cooking time cannot be calculated correctly.

- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Press the  sensor button.
- ▶ Select the required automatic programme.
- ▶ Select the food group if necessary.
- ▶ Specify the weight or quantity if necessary.
 - The summary of the operating mode and any accessories that should be used is displayed.
- ▶ Press the  sensor button.

In some automatic programmes, an acoustic signal is emitted during operation and a prompt to stir or turn the food is displayed. The duration does not continue to run.

- ▶ Open the appliance door, take out the food and stir or turn it.
- ▶ Close the appliance door.
- ▶ Press the  sensor button.



If the appliance door is not opened within 2 minutes of the message, operation is aborted and the appliance switches itself off.

8 Tips and tricks

8.1 Unsatisfactory cooking result...

Baking and roasting

Result	Solution
<ul style="list-style-type: none">▪ The baking or roast looks good on the outside but is still doughy or raw on the inside.	<ul style="list-style-type: none">▶ Next time, set a lower temperature and extend the operating time.▶ Check that the settings used correspond to those recommended in «Tips on settings».

Cake

Result	Solution
<ul style="list-style-type: none">▪ The cake collapses.	<ul style="list-style-type: none">▶ Compare the settings with the separate «Tips on settings».▶ Next time, set a lower temperature and extend the operating time.▶ Stir the cake mixture well. When finished, bake immediately.▶ For whisked sponges, beat the egg yolks/ egg whites to a foam a little longer and then carefully fold into the mixture. When finished, bake immediately.▶ Follow the instructions on how much baking powder to add.

Uneven browning

Result	Solution
<ul style="list-style-type: none"> ▪ The food/baked good has browned unevenly. 	<ul style="list-style-type: none"> ▶ Next time, set a lower temperature and adjust the operating time. ▶ If using ,  and , check that the levels and accessories used correspond to those recommended in the separate «Tips on settings». ▶ Do not push baking tins or bulky food/baked goods right to the back of the cooking space.
<ul style="list-style-type: none"> ▪ The baked good is very pale. 	<ul style="list-style-type: none"> ▶ Compare the settings with the separate «Tips on settings».



Some uneven browning is normal. More even browning is generally achieved at lower temperatures.

8.2 Saving energy

- ▶ Avoid opening the appliance door frequently.
- ▶ For gratins, use the residual heat: after a duration of 30 minutes, turn the appliance off 5–10 minutes before the end of baking.
- ▶ Minimize preheating.
- ▶ Only preheat the cooking space if the baking result depends on it.



You can reduce the power consumption to a minimum by selecting «Time display», «Invisible» in the user settings. Despite automatic energy-saving stand-by, all safety functions are active.

9 User settings

9.1 Selecting user settings

The following user settings can be changed:

- | | | | |
|--|-----------------|---|------------------|
|  | Language | °C/°F | Temperature unit |
|  | Childproof lock | 12/24 | Time format |
|  | Time display |  | Contrast |
|  | Illumination |  | Factory settings |
|  | Acoustic signal | | |

9.2 Adjusting user settings

You can adjust the user settings:

- ▶ When the appliance is switched off, hold the adjusting knob depressed for 5 seconds.

Or:

- ▶ When the appliance is switched on, press the  sensor button until the display goes black. Press and hold the adjusting knob down for 5 seconds.
 - The user settings menu appears in the display.
- ▶ Select the required user setting, make the setting and confirm.
 - The user settings menu appears in the display.
- ▶ To exit the user settings, press the  sensor button.
 - The appliance switches off.



The user settings are retained in the event of a power failure.

9.3 Language

The language in the display can be changed. Different languages are available for selection.

9.4 Childproof lock

The childproof lock prevents an operating mode from being started accidentally. When you try to start an operating mode, an acoustic signal is emitted and the message «Childproof lock» appears in the display.

The childproof lock is activated:

- When the appliance is switched on
- 1 minute after the appliance door has been closed if no operating mode starts and neither a sensor button nor the adjusting knob is pressed
- 4 minutes after the end of operation

All of the sensor buttons except for ► can be pressed at any time.

Deactivating the childproof lock

- ▶ Open the appliance door and close it again.

Acknowledging the message «Childproof lock»

- ▶ Press any sensor button or the adjusting knob.

9.5 Clock functions



The time cannot be changed if an operating mode is running or if a delayed start has been set.

The time is not displayed if a timer has been set or if the user setting «Time display» «Invisible» has been activated.

Setting the time

- ▶ If the appliance is switched off, first press the adjusting knob.
- ▶ Press the ⊖ sensor button.
 - The current time is displayed. The hours flash.
- ▶ Set and/or confirm the hours.
 - The minutes flash in the display.
- ▶ Set and/or confirm the minutes.
 - The time is shown in the digital display.
 - The operating modes menu appears in the display.



The settings are not saved if the ⏻ or ↶ sensor buttons are pressed while making the settings.

After a power failure



After a power failure, the time must be set before the appliance can be operated normally again.

- The  sensor button is illuminated in white.
-  flashes in the digital display.

► Set the time and confirm.

Time display

With the «Visible» setting (factory setting), the time is dimmed between 00:00 and 06:00 (24-hour format) and 12:00 a.m. and 06:00 a.m. (12-hour format). With the «Invisible» setting, the time is never displayed.



To reduce power consumption to a minimum, select «Invisible» in the user settings. Despite automatic energy-saving stand-by, all safety features are active.

9.6 Illumination

There are 3 possible settings:

A	«With appliance door»	The illumination is switched on/off when the appliance door is opened/closed.
B	«With appliance door and during operation»	The illumination is switched on during operation and when the appliance door is opened. The illumination switches off automatically 3 minutes after the end of an operating mode or the last time the appliance door is opened.
C	«No illumination»	The illumination always remains switched off.

9.7 Acoustic signal

The acoustic signal can either be switched on or off.



An acoustic signal is emitted when there is a fault or when the appliance is switched off – even if the setting is set to «Off» (safety function).

9.8 Temperature unit

The temperature can be displayed in «°C» or «°F».

- °C: Degrees Celsius
- °F: Degrees Fahrenheit

9.9 Time format

The time can be displayed in the European 24-hour time format or the US 12-hour format (a.m./p.m.).

9.10 Contrast

With this function, the readability of the display can be adjusted based on how the appliance is installed.

9.11 Factory settings

If one or more user settings have been changed, these can be reset to the factory settings.

10 Care and maintenance



Risk of burns from hot surfaces!

Allow the appliance and the accessories to cool down before cleaning them.

Risk of leaking microwaves!

Regularly check the appliance door, the door seal and the door lock. If these parts are damaged, do not use the appliance any more.

Improper use can result in damage to the appliance!

Do not use scouring or acidic cleaning agents, sharp or scouring metal scrapers, steel wool, scouring pads, etc. These products will scratch the surfaces. Glass surfaces that are scratched can crack.

Never use a steam cleaner to clean the appliance.

10.1 Cleaning the exterior

- ▶ Remove any soiling or excess cleaning solution immediately.
- ▶ Clean the surfaces with a soft cloth dampened with water and a little washing-up liquid – for metallic surfaces rub in the direction of the original polish lines.
- ▶ Wipe dry with a soft cloth.

10.2 Cleaning the appliance door



Under no circumstances may the appliance door be removed, otherwise the protection against leaking microwaves is no longer guaranteed.

Do not use abrasive cleaning agents or cleaning aids such as steel wool, knives, glass scrapers, razor blades, etc. to clean the door glass. Scratches on the door glass could cause a breakage.

- ▶ Clean the appliance door with a soft cloth dampened with water and a little washing-up liquid.
- ▶ Wipe dry with a soft cloth.



Remove cleaning products from the door seal and trim kit immediately.

Risk of damage to plastic. Protection from leaking microwaves is not guaranteed if the seals are damaged.

10.3 Cleaning the door seal

- ▶ Clean the door seal with a soft cloth dampened with water, but do not use any cleaning agent.
- ▶ Wipe dry with a soft cloth.

10.4 Cleaning the cooking space



Always replace the turntable roller and glass turntable after cleaning. Do not use oven cleaner or any other abrasive cleaning agents. Do not use scouring pads, wire wool, etc., as such products will damage the surface.

- ▶ Take all accessories out of the cooking space before cleaning.
- ▶ Clean the cooking space regularly, especially when food has been spilt. Immediately clean away grease splashes or food residue.
- ▶ Remove any soiling from the cooking space while still warm to the touch using a soft cloth dampened with water and a little washing-up liquid. Wipe dry with a soft cloth.
- ▶ For stubborn dirt deposits heat up a glass of water at maximum microwave power level for 2–3 minutes. The steam that is produced will soften the soiling.
- ▶ To eliminate unpleasant odours, heat up a glass of water with lemon juice for 2–3 minutes at maximum microwave power level.

10.5 Cleaning the accessories



Allow the glass turntable and the CombiCrunch plate to cool down before cleaning. Never immerse the CombiCrunch plate when still hot in detergent water or hold it under running water to it cool down. Cooling down the plate quickly can damage it. Do not use abrasive scouring pads, wire wool, etc. since they damage the surface.

The following accessories can be cleaned in the dishwasher:

- Turntable roller
- Glass turntable
- Food cover
- CombiCrunch grip
- Wire shelf



The CombiCrunch plate must not be cleaned in the dishwasher, as this could damage the coating.

- ▶ To clean the CombiCrunch plate, use a mild cleaning agent, water and a sponge.



The baking tray can be cleaned in the dishwasher, but this will affect the non-stick coating.

- ▶ To clean the baking tray, use a mild cleaning agent, water and a sponge.

10.6 Replacing the halogen light bulb

For safety reasons, the halogen light bulb must be replaced by our Customer Services.

11 Troubleshooting

11.1 What to do if ...

This section lists faults that can be solved simply by following the instructions given. If another fault is displayed or the fault cannot be remedied, please call Customer Services.



Before calling Customer Services, please note down the error message in full as well as the serial number (FN) of your appliance.

The serial number can be found on the identification plate.

... the appliance is not working

Possible cause	Solution
▪ A household fuse or circuit breaker has tripped.	▶ Change the fuse. ▶ Reset the circuit breaker.
▪ The fuse or circuit breaker keeps blowing.	▶ Call Customer Services.
▪ An interruption in the mains power supply.	▶ Check the power supply.
▪ The appliance is faulty.	▶ Call Customer Services.

... the appliance was switched on without any food in it

Possible cause	Solution
	The appliance will be undamaged if only switched on for a short time. ▶ Do not switch appliance on without any food in it.

... a scratching noise can be heard when the appliance is switched on

Possible cause	Solution
▪ Cooking space floor and turntable roller are soiled.	▶ Clean the floor of the cooking space and the turntable roller regularly.

... the appliance is causing interference with television or radio reception

Possible cause	Solution
<ul style="list-style-type: none"> ▪ Appliance is not defective. When in use, it can cause interference with television or radio reception. This is a similar kind of interference to that caused by small electrical appliances (mixers, vacuum cleaners, etc.). 	

... hot air flows out of the appliance during microwave operation

Possible cause	Solution
<ul style="list-style-type: none"> ▪ Normal functional state. The heat emitted by the food warms the air in the cooking space. This is then discharged to the outside. The heated air contains no microwaves. 	<ul style="list-style-type: none"> ▶ Ventilation slots must be kept unobstructed.

... the appliance switches off prematurely

Possible cause	Solution
<ul style="list-style-type: none"> ▪ Appliance is overheated. 	<ul style="list-style-type: none"> ▶ Check ventilation slots. These must be freely accessible.
<ul style="list-style-type: none"> ▪ Ventilation slots are obstructed. 	<ul style="list-style-type: none"> ▶ Remove any obstructions from the ventilation slots.
	<ul style="list-style-type: none"> ▶ Wait for the appliance to cool down. ▶ Restart the appliance.
	<ul style="list-style-type: none"> ▶ If the appliance still switches off prematurely, contact Customer Services.

11.2 After a power failure

After a power failure, the sensor button  illuminates and  flashes in the digital display.

- ▶ Setting the time (see page 45).




The user settings remain unchanged.


12 Accessories and spare parts

Please give model number of the appliance and exact description of the accessory or spare part when ordering parts.

Turntable roller

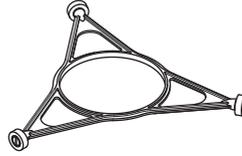


Glass turntable

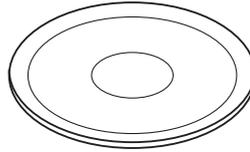


Food cover




CombiCrunch plate

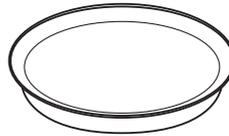

CombiCrunch grip

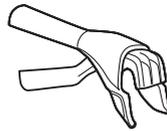


Wire rack

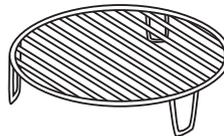


12 Accessories and spare parts

High wire rack

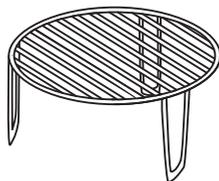

Baking tray

 


13 Technical data

Dimensions

- ▶ See installation instructions

Electrical connection

- ▶ See identification plate **1**

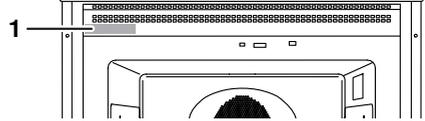

13.1 Temperature measurement

The temperature inside the cooking space is measured when the cooking space is empty according to an internationally accepted standard. Own measurements can be imprecise and are not suitable for checking the accuracy of the temperature.

13.2 Automatic energy-saving stand-by

The appliance is equipped with automatic energy-saving stand-by to avoid consuming energy unnecessarily.



To reduce power consumption to a minimum, select «Time display» «invisible» in the user settings. Despite automatic energy-saving stand-by, all safety functions remain active.

14 Index

A

Aborting the operation	34
Accessories	11, 17, 53
Acoustic signal	46
Ambient temperature	19
Appliance door	
Cleaning	48
Automatic programme	
Starting	41
Automatic programmes	37
Automatic reheating	38
AutomaticPlus	37

B

Baking	40
Baking tray	12, 18, 54
Before using for the first time	8

C

Care	48
Changing	
Duration	32
Microwave power level	31
Operating mode	31
Temperature setting	31
Changing the duration	32
Childproof lock	45
Cleaning	
Accessories	50
Appliance door	48
Cooking space	49
Door seal	49
Exterior	48
Combi mode	
Grill-forced convection	28
Hot air	24
With grill	26
CombiCrunch	
Grip	17, 53
Plate	12, 17, 53
Continuing	33
Contrast	47
Cooking	39
Cooking space	
Temperature measurement	55
Cookware	12
Crispy baking	39

D

Defrosting	38
Delayed start	30
Dimensions	55
Disconnection	13
Disposal	13
Door seal	
Cleaning	49
Duration	30

E

Electrical connection	55
End of operation	34
Extending operation	35

F

Factory settings	47
Fast heating	25
Faults	51
Favourite	20
Saving	20
Setting	20
Starting	20
Food cover	12, 18, 53

G

Glass turntable	11, 17, 53
Grill	25
Combi mode	26
Grill-forced convection	27
Combi mode	28

H

Halogen light bulb	50
Hot air	24

I

Identification plate	55
Illumination	46
Initial set-up	8
Installation	19
Instructions for use	8
Interrupting	33

K

Keep warm	39
-----------------	----

L		Spare parts	53
Language.....	44	Stand-by.....	55
M		Symbols.....	5
Maintenance	48	T	
Melting	40	Technical data.....	55
Microwave	21	Technical questions.....	59
Note on use.....	21	Television interference	52
Tableware	21	Temperature unit.....	47
Tips	22	Time	
Model number.....	2	Setting	45
N		Time display.....	46
Notes.....	58	Time format.....	47
O		Timer	32
Operating and display elements.....	15	Touch buttons.....	15
Operating modes		Turntable roller	11, 17, 53
Changing	31	Type.....	2
CombiCrunch.....	23	U	
Fast heating.....	25	Uneven browning.....	43
Grill.....	25	User settings.....	44
Grill-forced convection	27	Adjusting	44
Hot air.....	24	Selection	44
Operation.....	29	Using for the first time.....	14
P		V	
Packaging	13	Validity.....	2
PerfectDefrost	38	Ventilation fan	19
Plate warmer.....	40	W	
Power failure.....	52	Warranty extensions.....	59
Preheating	43	Wire rack	12, 53
Product family.....	2	Wire shelf.....	18
R			
Radio interference	52		
S			
Safety	13		
Safety precautions			
Appliance-specific	7		
Before using for the first time	8		
Correct use.....	8		
General.....	6		
Saving energy.....	43		
Scratching noise	51		
Selecting the operating mode	30		
Service & Support.....	59		
Softening.....	40		

Notes

15 Service & Support



The «Troubleshooting» chapter provides valuable information for dealing with minor operating faults. This saves you the time, effort and potential cost of having to call out a service technician.

Information on the V-ZUG warranty can be found at www.vzug.com →Service →Warranty information. Please read this information carefully.

Please register your V-ZUG appliance online immediately at www.vzug.com →Service →Warranty registration. This will allow you to take advantage of the best possible support in the event of an fault in the appliance during the warranty period. You will require the serial number (FN) and appliance designation to complete the registration process. This information can be found on the identification plate for your appliance.

My appliance information:

FN: _____ **Appliance:** _____

Always have this appliance information to hand when you contact V-ZUG. Thank you.

- ▶ Open the appliance door.
 - The identification plate is located to the left above the cooking space.

Your repair order

At www.vzug.com →Service→Service number you will find the telephone number of your nearest V-ZUG service centre.

Technical questions, accessories, warranty extensions

V-ZUG is happy to help you with any general administrative or technical queries, to take your orders for accessories and spare parts and to inform you about our progressive service agreements.

Quick instructions

Please first read the safety precautions in the operating instructions.

- ▶ If the appliance is switched off, first press the adjusting knob.

Setting the time

- ▶ Press the ⌚ touch button.
- ▶ Turn the adjusting knob to set the hours and press to confirm.
- ▶ Use the adjusting knob to set the minutes and confirm.

Selecting and starting the operating mode

- ▶ Press the 📺 touch button.
- ▶ Select the operating mode and adjust the settings.
- ▶ Press the ▶ touch button.

Switching the appliance off

- ▶ Press the ⏻ touch button.

Setting the timer

- ▶ Press the 🔔 touch button.
- ▶ Set the hours and minutes and confirm.

J24009352-R05



400011043948

