

Note for testing institutes

41147, 41162, 41171, 41173

Table of contents

english 3



Contents

1	Note for testing institutes
----------	------------------------------------

1 Note for testing institutes

1.1 General information




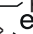 
Test standard

AS/NZS 2007.1:2021; AS/NZS 2007.2:2021; AS/NZS 6400:2016

AdoraDish V6000 models (AS6T...)

The appliances are equipped with a water tank. For hygiene reasons, the tank is automatically emptied 36 hours after being filled. The tank is filled only on the third programme if twice in a row the waiting time between programmes is less than 36 hours. To ensure the tank is full, the following must be carried out before conducting the test:

Applies to all AdoraDish V6000 models:


- ▶ Add the detergent.
- ▶ Run the «Intensive»  programme.
 - Manufacturing residues are removed during the wash cycle.
- ▶ Run the «Pre-rinsing»  programme.
- ▶ Run the «Eco»  programme.
- ▶ When the «Eco»  programme ends, disconnect the appliance from the mains power supply.

These three programmes should be run on one and the same day. The test can be started the next day. After waiting for a period of about 12 hours, it can be ensured model AS6T-41121 (with heat pump) has reached room temperature.

1.2 AdoraDish EURO 60 AS2T/AS6T

General information

The load applies to the following models: **AS2T-41162, AS6T-41171, AS6T-41173**

Size system:	EURO 60
Capacity:	14 place settings
Loading:	See following images
Detergent dosage:	5 g reference detergent on the inner door panel and 27.5 g in the detergent dispenser
Rinse agent dosage:	Level 10 (reference rinse agent)
Declaration programme:	«Eco»  programme

Electrical connection

Models	Country group	Connection	Rated load	Fuse
AS2T-41162	AU	220-240V~ 50 Hz	2200 W	10 A
AS6T-41171, AS6T-41173	AU	220-240V~ 50 Hz	2200 W	10 A


Drying measurements

- The appliance door opens automatically during the drying phase.

Lower basket



ET	14	plates
ST	14	soup plates
DT	10	dessert plates

- Position the plates so that the spinach is at the top.

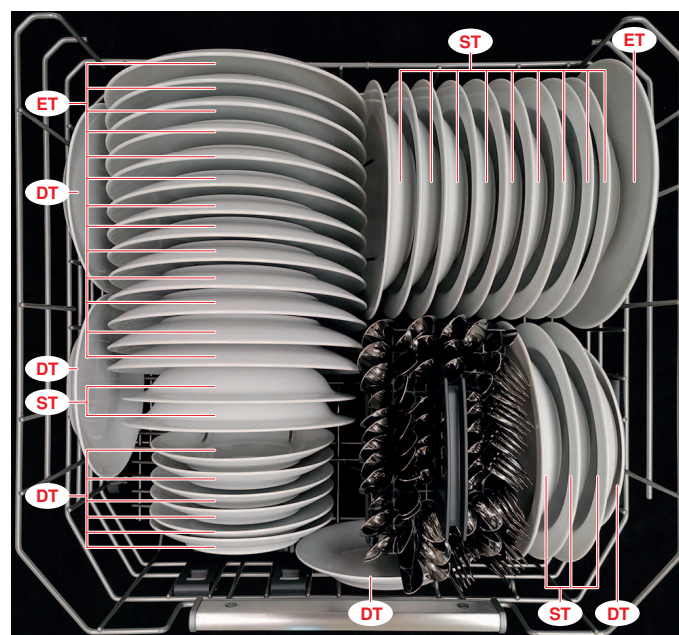

Cutlery basket


Tlf	14	tea spoons
Dlf	14	dessert spoons
Slf	14	soup spoons
M	14	knives
G	14	forks

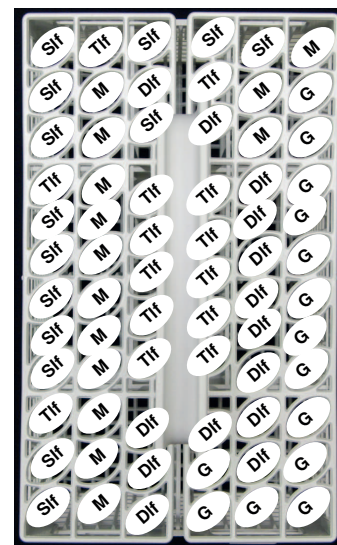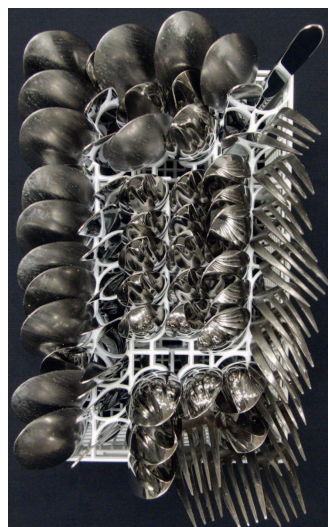

Upper basket

T, T1	14	cups
UT	14	saucers
G, G1, G2	14	glasses
DT	4	dessert plates

- Position the plates so that the spinach is at the top.

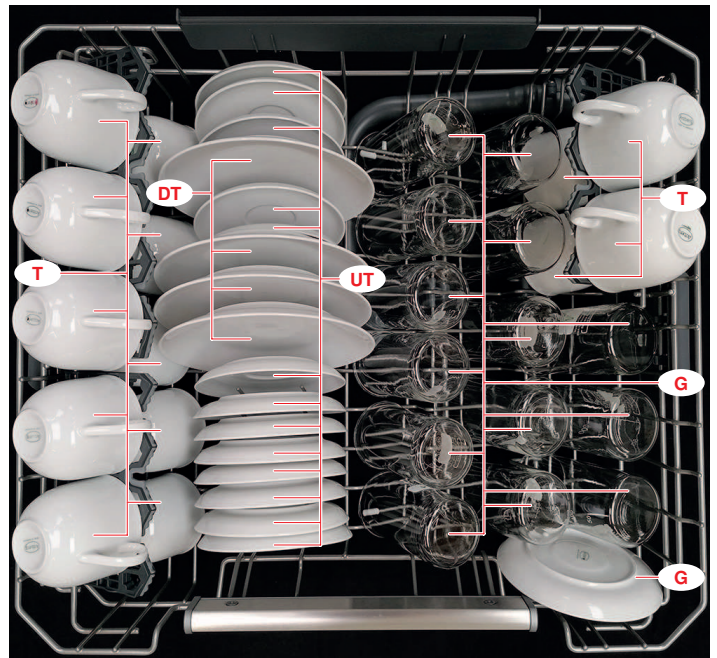

- Push the cups on the racks in the corners as far inwards as possible.



- Lower the basket right down.
- Remove the small-parts holder (if any).
- Remove racks that are not being used.
- The cups **T** on the rack must lie against the rack cam and not lie against the basket.
- Rest the cups **T** not sitting on the rack with their handles up against the wires of the basket.



- Place the foremost saucer right at the front.




- **AS2T** appliances come with glass holders **1 and 2**.
- **AS6T** appliances come with glass holders **1–4**.
- Fold up glass holders **1 and 2** and fold down glass holders **3 and 4**.



1.3 AdoraDish V6000 with cutlery drawer (60 extra height)

General information

The load applies to the following models: **AS6T-41147**

Size system:	EURO 60
Capacity:	15 place settings
Loading:	See following images
Detergent dosage:	5 g reference detergent on the inner door panel and 28.75 g in the detergent dispenser
Rinse agent dosage:	Level 10 (reference rinse agent)
Declaration programme:	«Eco»  programme


Electrical connection

Models	Country group	Connection	Rated load	Fuse
AS6T-41147	AU	220-240V~ 50 Hz	2200 W	10 A

Lower basket

ET	15	plates
ST	15	soup plates
DT	13	dessert plates
G	2	glasses


- Position the plates so that the spinach is at the top.

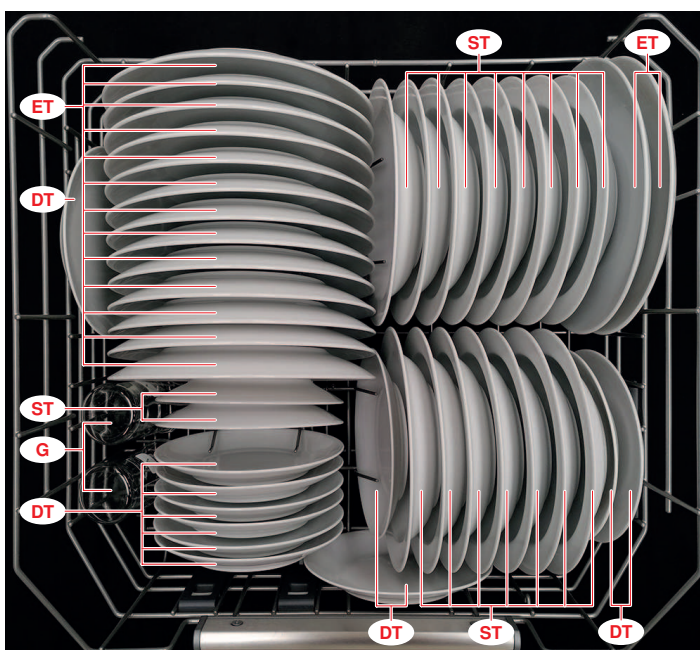

Upper basket

T	15	cups
UT	15	saucers
G, G1, G2	13	glasses
DT	2	Dessert plates


- Position the plates so that the spinach is at the top.

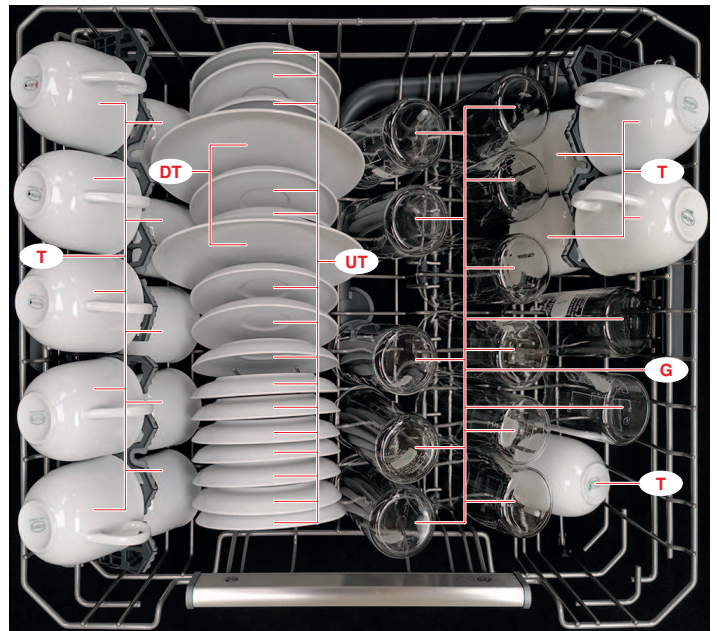

- Push the cups on the racks in the corners as far inwards as possible.



- Lower the basket right down.
- Remove the small-parts holder (if any).
- Remove racks that are not being used.
- The cups **T** on the rack must lie against the rack cam and not lie against the basket.
- Rest the cups **T** not sitting on the rack with their handles up against the wires of the basket.

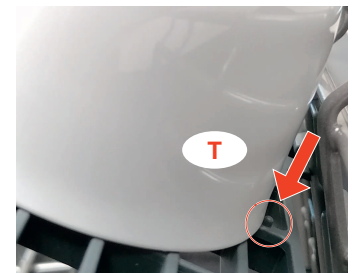

- Place the foremost saucer right at the front.



- Fold up all glass holders **1–4**.



Cutlery drawer

Tlf	15	tea spoons
Dlf	15	dessert spoons
Slf	15	soup spoons
M	15	knives
G	15	forks

- Arrange cutlery slightly diagonally (see image).
 ► Carefully push in the cutlery drawer and make sure it does not collide with the cups.

