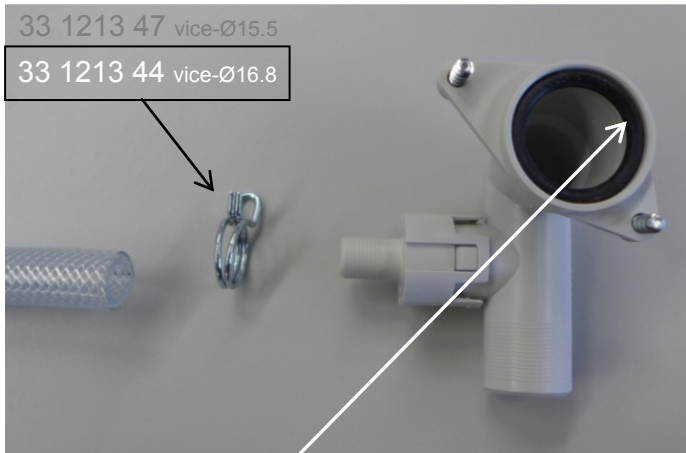


Kombiablaufset W55969

Dichtung auf Anschlag drücken,
vor Montage benetzen.

Appuyer le joint contre la buttée
humecter avant monter.

Premere il sigillo fino al tocco
imunidire prima di montare.

Seal pressed to edge, moisture
before assembly.

Anschluss WT - kein Knicken!
Ne pas plier le tuyau – connexion du sèche-linge!
Collegamento asciugatrice – non piegare il tubo!
TD Connection hose – do not kink!

**W55969****Kombiablaufset****Set d'écoulement combiné****Set di scarico combinato****Combi drainage set**

0,01 kg

ww/jj