

# Laundry room appliances

Australia collection Planning aid 2024

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



#### Note on content

#### Please note

This planning aid applies to the specified model numbers only. Older planning aids for earlier generation models may be requested in electronic form from our Customer Services.

This planning aid is not to be used as installation instructions! The regulations and instructions binding for the appliance installation are to be obtained from the installation instructions packed with the appliances. The installation instructions can also be downloaded from the internet from www.vzug.com/b2b.

#### Modifications

Text, diagrams and data correspond to the technical standard of the appliances at the time this planning aid went to press. The right to make technical modifications for the purpose of the further development of the appliances is reserved. The German, English, French and Italian versions are binding. V-ZUG accepts no liability for translations in other languages.

#### Symbols used



Denotes important safety precautions.

Failure to observe said precautions can result in injury or in damage to the appliance or fittings!

- ▶ Indicates an instruction.
- · Indicates a list.



Information and precautions that should be observed.


#### Supplementary documents

In this planning aid, occasional reference is made to supplementary documents. These documents can be requested from the Head Office in Zug by sending an e-mail to service-support@vzug.com.

#### **Useful links**

- www.vzug.com
- www.vzug.com/b2b
- · www.lifestyle.vzug.com

#### **Explanation of terms**

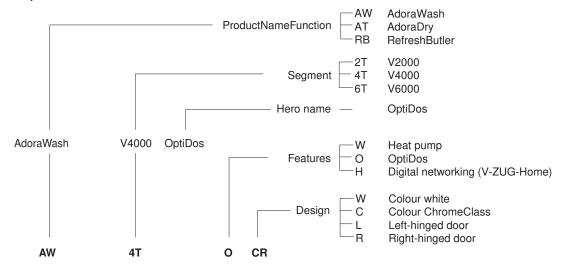

V-ZUG Ltd, Industriestrasse 66, CH-6302 Zug service-support@vzug.com, www.vzug.com

Laundry room appliances
Australia collection
Planning aid

1042424-09

06.06.23



# Contents

1	App	liance overview	4
	1.1	Validity	
	1.2	Installation plate	. 4
	1.3	Washer-dryer towers	
	1.4	Convenient storage drawer	. 5
2	Elec	trical connections	6
	2.1	General operating conditions	
	2.2	Using residual current devices in house wiring system / fault current	6
3	Plun	nbing in	7
	3.1	Washing machines	. 7
	3.2	Tumble dryers	
	3.3	Washer-dryer combination	9
4	Insta	allation plate (W40653)	12
	4.1	General condition	
	4.2	Fastening to the floor	12
5	Was	hing machines	13
	5.1	Electrical connection data	
	5.2	Dimensions	
	5.3	Installation space	
	5.4	Positioning	
6		ble dryers	17
	6.1	Electrical connection data	
	6.2	Dimensions	
	6.3 6.4	Installation space	
_		Positioning	
7		sher-dryer towers	23
	7.1 7.2	Installation space	
•			
8		venient storage drawer	27
_	8.1	Dimensions	
9		tile care system	28
	9.1 9.2	Electrical connection data	
	9.2	Installation space	
	9.4	Positioning	
10		essories	34
10		Washing machines	-
		Tumble dryers	
		Textile care system	
11		JG-Home	35
• • •		Internet access	
		Connecting to the home network	
	Inde		36
12	Note		37
14	HOLE		JI

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



# 1 Appliance overview

# 1.1 Validity

The model number corresponds to the first alphanumerics of the serial number SN (or FN) on the identification plate.


# **Excellence Line**

Product	Model number	Product	Model number
Washing machines		Tumble dryers	
AdoraWash V2000	11021	AdoraDry V2000	12011
AdoraWash V4000	11023	AdoraDry V6000	12013
AdoraWash V6000	11025		
Textile care system			
RefreshButler V6000	14003		


# 1.2 Installation plate

The installation plate W40653 supplied must be used with all Excellence Line appliances (see page 12).

#### AdoraWash



# AdoraDry



# Laundry room appliances

Australia collection Planning aid


1042424-09

06.06.23




# 1.3 Washer-dryer towers

Washing machines and tumble dryers from the Excellence Line can be combined to form a washer-dryer tower (see page 23), in which case the installation plate W40653 must be used.



# 1.4 Convenient storage drawer

Appliances from the Excellence Line can be combined with a convenient storage drawer (see page 27), in which case the installation plate W40653 must be used (see page 12).

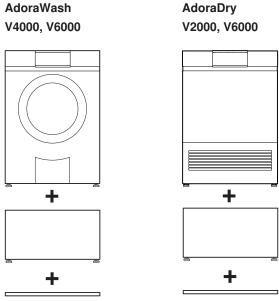



All the necessary installation accessories are supplied with the convenient storage drawer.

Appliance overview 5

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



#### 2 Electrical connections



Electrical connections must be carried out by qualified experts in accordance with the guidelines and standards for low-voltage installations and the specifications of the local electricity supply companies.

A plug-in appliance may only be connected to a socket outlet with earthing contact, installed according to specifications. An all-pole mains isolating device with 3 mm contact opening should be provided in the house wiring system. Switches, plug and socket devices, circuit breakers and fusible cut-outs which are accessible after installation and which have all-poles switching are permissible as isolating devices. Effective earthing and separately installed neutral and earth conductors ensure safe and fault-free operation. After installation, live parts and cables with basic insulation must not be accessible. Check old installations.



Before connecting the appliance ensure that the installation is designed for appliances with a rated current of over 13 A. If you are unsure, consult an authorized electrician.

## 2.1 General operating conditions



Detailed information on the electrical connection data can be found at the beginning of each section.

Value	Nominal value	Minimum	Maximum
Voltage	220–240 V	198 V	253 V
Frequency	50 Hz sinusoidal	49 Hz sinusoidal	51 Hz sinusoidal

- Short duration frequency variation in the mains: ±1 Hz
- Long duration frequency stability in the mains (for synchronous clocks): ±10 ppm
- Protection type IP: IP-X4
- Operating height: Electrical safety is guaranteed up to 2,000 m above sea level.

## 2.2 Using residual current devices in house wiring system / fault current

Washing machines have an inherently high fault current. The values can be affected by various factors and vary widely. In accordance with the norm, fault currents of up to approximately 10 mA per appliance are permissible. The values are measured in the warm operating state.

If residual current devices (RCDs) are used in the house wiring system, we recommend that the above-mentioned appliances have their own RCD protection, separate from the power supply for the rest of the system. The tripping current of the RCD should be selected to be 30 mA or higher.

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



# 3 Plumbing in

# 3.1 Washing machines

Comply with the regulations laid down by the local water supply authority for the layout of the supply pipe and drainage.

#### General operating conditions

Value		Nominal value	Minimum	Maximum
Mains pressure	Static	0.3 MPa	0.1 MPa	1.0 MPa
(0.1 MPa = 1 bar)	Flowing	_	0.08 MPa	1.0 MPa
Water hardness *		_	0.5 °fH	50 °fH
Water inlet temperature	Cold water	_	5 °C	35 °C
Water inlet		G3⁄4"	_	_
Drainage cross-section		ø internal 57 mm (on-site)	ø internal min. 19 mm	_

<sup>\*</sup> For special cases with water hardness in excess of 50 °fH, an external water softener is recommended.

## Water inlet





Appliance	Hose	Length	Connection	Optimal working pressure	Possible pressure range
AdoraWash V2000, V6000	Inlet hose with Aquastop	1.5 m	G3⁄4"	0.3 MPa (3 bar)	0.1-1.0 MPa (1-10 bar)



Connection to a mixer tap or a continuous flow heater is not permitted!



Special lengths must be connected directly to the appliance. Using extensions to lengthen the inlet and drain hoses is not permitted. The connection point is the responsibility of the owner.

# Laundry room appliances

Australia collection Planning aid

1042424-09


06.06.23




#### Water outlet




V-ZUG does not supply or install drain-traps. Follow the drain-trap manufacturer's instructions.

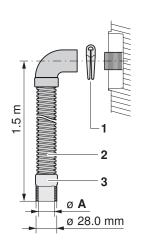

2 I >350



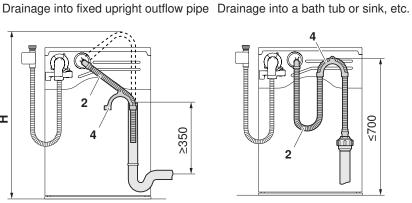

▶ Drain hose 2 may not be shortened!

- 1 Hose clamp
- 2 Drain hose
- 3 Rubber connection
- 4 Hose support

Appliance	Drain hose material	Hose length	Connection A	Pumping height H of drain pump from floor
AdoraWash V2000, V6000	Corrugated plastic hose	1.5 m	ø internal 21.5 mm	≤1200 mm

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



# 3.2 Tumble dryers




V-ZUG does not supply or install drain-traps. Follow the drain-trap manufacturer's instructions.

## Direct drainage

- ▶ Use a drain trap with an open-top fixed upright outflow pipe.
- ► For a connection to a sink drain trap, position the drain hose above the overflow line 1.

#### AdoraDry

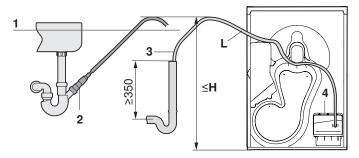

- 1 Overflow line
- 2 Connection to sink drain trap, set W53070 (see page 34)
- 3 Condensate drain kit W56298 (series standard)
- 4 Drain pump

Appliance	Drain hose material	Hose length L	Connection	Pumping height H of drain pump 4 from floor
AdoraDry V2000, V6000	Smooth PVC hose	2.5 m	ø external 10.5 mm	≤1200 mm

# 3.3 Washer-dryer combination




V-ZUG does not supply or install drain-traps. Follow the drain-trap manufacturer's instructions.

#### Connection to drain trap with open-top fixed upright outflow pipe

#### Appliances installed side by side with separately routed drainage pipe

▶ Position the drain hose from the tumble dryer above the overflow line 1.

#### AdoraWash & AdoraDry

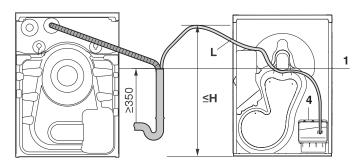

Appliance	Drain hose material	Hose length L	Connection	Pumping height H of drain pump 4 from floor
AdoraDry V2000, V6000	Smooth PVC hose	2.5 m	ø external 10.5 mm	≤1200 mm

Plumbing in 9

# Laundry room appliances

Australia collection Planning aid

1042424-09


06.06.23



# Appliances installed side by side with combi drainage set W55969

- ► Fix hose end with hose support 2.
- ▶ Secure drain hose to lugs 3 on the tumble dryer so that it cannot kink.

#### AdoraWash & AdoraDry

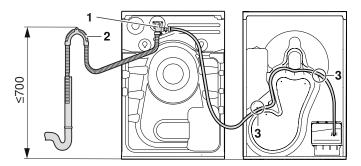


- 1 Combi drainage set W55969 (see page 34)
- 2 Hose support
- 3 Lugs

# Washer-dryer tower with combi-drainage set W55969

- ► Fix hose end with hose support 2.
- ► Secure drain hose to lugs 3 on the tumble dryer so that it cannot kink.

#### AdoraWash & AdoraDry

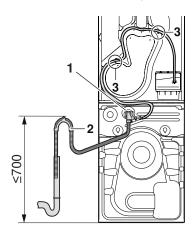

- 1 Combi drainage set W55969 (see page 34)
- 2 Hose support
- 3 Lugs

10 Plumbing in

# Laundry room appliances

Australia collection Planning aid


1042424-09

06.06.23



#### Connection to concealed drain-trap

V-ZUG does not supply or install concealed drain traps. Unused connections to the concealed drain trap must be sealed off. Where possible, the washing machine and tumble dryer should be connected to a separate concealed drain trap. Secure drain hoses with a clamp (included in the scope of delivery).





Water must be prevented from flowing from the washing machine into the tumble dryer!




A washing machine and tumble dryer may only be connected to the same concealed drain trap 1 if the two appliances remain hydraulically separate from one another.

#### Without combi drainage set

Appliances installed side by side

Washer-dryer towers

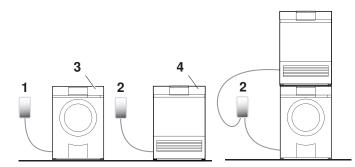

Appliances installed side by side

If a tumble dryer and washing machine are installed side by side, each appliance must be connected to a separate concealed drain trap.

**Tip:** The combi drainage set **5** may be used if there is only one concealed drain trap **1**.


#### Washer-dryer towers

If a washing machine and tumble dryer from the Excellence Line without a combi drainage set are combined to form a washer-dryer tower, a concealed double drain trap can be used.

#### With combi drainage set W55969

Appliances installed side by side

Washer-dryer towers

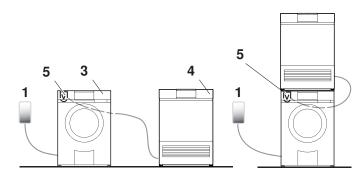

Tumble dryers from the Excellence Line can be retrofitted with the accessory combi drainage set W55969 (5). It permits the water outlet of a washing machine and a tumble dryer into one water outlet (concealed drain trap 1). The water from the tumble dryer is pumped by the pump into the water outlet of the washing machine.

- 1 Concealed drain trap
- 2 Concealed double drain trap
- 3 Washing machine
- 4 Tumble dryer
- 5 Combi drainage set W55969

Plumbing in 11

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



# 4 Installation plate (W40653)

#### 4.1 General condition



The installation plate is used as an installation aid and its use is obligatory. It can be fixed to the floor with double-sided adhesive tape or it can be screwed to the floor.

Failure to observe said precautions can result in injury or in damage to the appliance or fittings!


# 4.2 Fastening to the floor



If a room has underfloor heating the installation plate may only be adhered (fastening material is included in the scope of delivery).

Failure to observe said precautions can result in injury or in damage to the appliance or fittings!


#### With underfloor heating

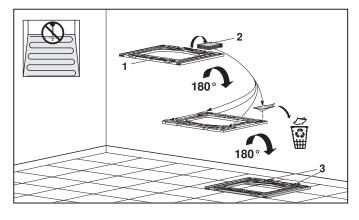

#### ► Remove the double-sided adhesive tape 2.

- ► Turn the installation plate 1 over so that the underside is facing upwards.
- ► Adhere the adhesive tape 2 to the underside of the installation plate 1.
- ► Turn the installation plate 1 back over on its front.
- ► Fold out spacers 3.
- ▶ Position and **adhere** the installation plate **1** to the floor according to the dimension specifications.

#### Without underfloor heating

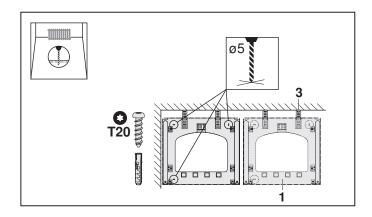

- ► Fold out spacers 3.
- ▶ Position and **screw** the installation plate **1** to the floor according to the dimension specifications.

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



# 5 Washing machines

#### 5.1 Electrical connection data



General information on the electrical connections and an overview of the positions can be found in the Electrical connections (see page 6) section.


Appliance	Mains connection	Rated load	Fuse	Mains connection cable
AdoraWash V6000	220–240 V~ 50 Hz	2100 W	10 A	1.8 m, with plug
AdoraWash V2000, V4000	220–240 V~ 50 Hz	2300 W	10 A	1.8 m, with plug

# 5.2 Dimensions





The stated dimensions do not include distances from walls. To prevent disturbing noise and vibration the appliances must not come into contact with the surrounding walls of their installation location.

## AdoraWash V2000, V4000, V6000

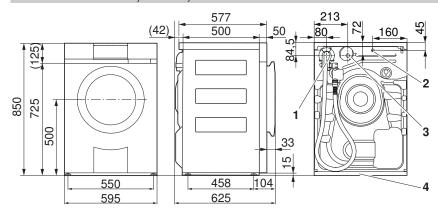

- 1 Cold water connection
  - Length of inlet hose with Aquastop: 1.5 m
  - Connection G<sup>3</sup>/<sub>4</sub>"
- 2 Outlet mains connection cable
  - · Length: 1.8 m, with plug
- 3 Drain hose connection with elbow
  - · Length of drain hose: 1.5 m
  - Pumping height of drain pump: ≤1200 mm
- 4 Installation plate

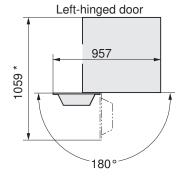

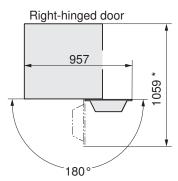

\* In order that the detergent dispenser drawer can be used without obstruction and be taken out for cleaning, the clearance space must be observed across the entire front of the appliance.

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



## 5.3 Installation space

#### General condition



All Adora appliances are delivered with a transport lock fitted. It must be removed when installing and before using the appliance for the first time.

Damage to the appliance and surrounding equipment or furniture cannot otherwise be ruled out! Any costs incurred will not be borne by the appliance manufacturer.



All Adora appliances must be mounted on the installation plate supplied. Only in this case is problem-free operation guaranteed. The appliances must be levelled by means of adjustable feet.



The appliance actively balances unbalanced loads during spinning. To ensure problem-free operation, no soft, sound insulating underlay may be used.

#### Room temperature

Permissible room temperature: 5 °C to 35 °C

#### 5.4 Positioning



To prevent disturbing noise and vibration the appliance must not come into contact with the surrounding walls of its installation location. It is imperative to comply with the supplied installation instructions for positioning the appliance.

- ▶ The appliance must stand level and stable. Check with a spirit level.
- ▶ The appliance must not wobble in case of a crosswise load.

# Installation plate (W40653)




The installation plate is used as an installation aid and its use is obligatory (see page 12). It can be fixed to the floor with double-sided adhesive tape or it can be screwed to the floor.

Failure to observe said precautions can result in injury or in damage to the appliance or fittings!

#### Free-standing position



The minimum distances to the side and back walls as well as between the two installation plates must be observed. The installation plates for washing machines and tumble dryers are the same.

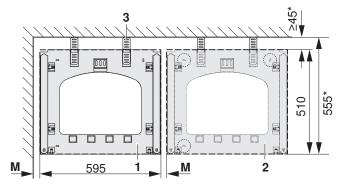

Appliance on installation plate 1	Appliance on installation plate 2	Lateral distance M
Washing machine / Tumble dryer	Washing machine / Tumble dryer	≥5 mm
Convenient storage drawer	Washing machine / Tumble dryer	≥10 mm

- \* Dimensions only apply if no plumbing fittings are to be installed behind the appliance.
- ► Fold out spacers 3.
- ▶ Position the installation plate 1/2 to the floor according to the dimension specifications.
- ▶ In the case of underfloor heating adhere the installation plate 1/2 into place, otherwise screw it into place (see page 12).
- ► Slide the appliances in.



The condensed water hose and connection cable must not be crushed between the rear of the appliance and the wall or kinked during installation.

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



## Installing in a niche




Do not install in closed niches or in cabinets with doors. If no programme selection is made, the appliance door opens automatically after 5 minutes and this can cause damage to the washing machine door and/or the niche door.

V-ZUG accepts no responsibility for any bacteria/germs and odours that form or any damage that may arise as a result.


# Open niche

#### **Niche**

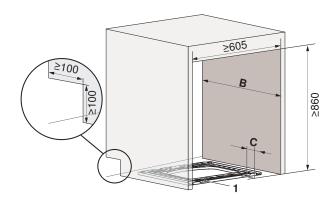


#### Niche front variants 2


Washing machine front 3

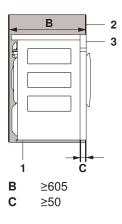

Washing machine door 4



#### Installation plate 1

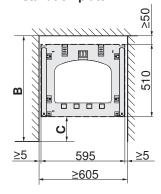

#### Openings that must be provided in the side wall of the niche

► For connections and fresh air supply: Provide an opening of ≥100 × 100 mm in the left or right side wall of the niche.

#### Installing

- ▶ Centre and position the installation plate 1 in the niche according to the niche dimensions.
- ▶ In the case of underfloor heating adhere the installation plate 1 into place, otherwise screw it into place (see page 12).
- ► Slide the appliance in.



The condensed water hose and connection cable must not be crushed between the rear of the appliance and the wall or kinked during installation.

Washing machines 15

# Laundry room appliances

Australia collection Planning aid

1042424-09


06.06.23




#### Closed niche (variant A)

In the case of niche variant A, the niche door must be left open when the appliance is in operation.

#### **Niche**

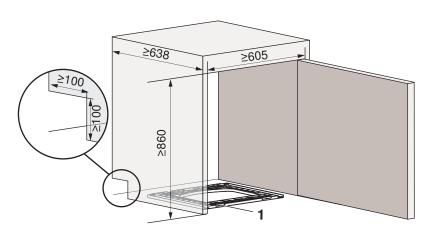

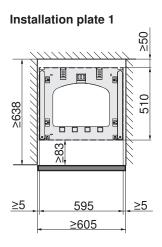

#### Openings that must be provided in the side wall of the niche

► For connections and fresh air supply: Provide an opening of ≥100 × 100 mm in the left or right side wall of the niche.

#### Installing

- ► Centre and position the installation plate 1 in the niche according to the niche dimensions.
- ▶ In the case of underfloor heating adhere the installation plate 1 into place, otherwise screw it into place (see page 12).
- ► Slide the appliance in.




The condensed water hose and connection cable must not be crushed between the rear of the appliance and the wall or kinked during installation.

#### Closed niche (variant B)

In the case of niche variant B, the niche door may be left closed at all times.

#### Niche

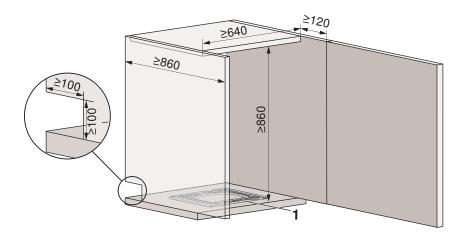

# 

#### Openings that must be provided in the side wall of the niche

- ► For connections and fresh air supply: Provide an opening of ≥100 × 100 mm in the left or right side wall of the niche.
- ► For fresh air supply: Provide an opening of ≥120 × 640 mm (= 800 cm²) across the entire width of the niche between the niche door and the appliance.

#### Installing

- ▶ Centre and position the installation plate 1 in the niche according to the niche dimensions.
- ▶ In the case of underfloor heating adhere the installation plate 1 into place, otherwise screw it into place (see page 12).
- ► Slide the appliance in.



The condensed water hose and connection cable must not be crushed between the rear of the appliance and the wall or kinked during installation.

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



#### 6 **Tumble dryers**

The following tumble dryers are condenser dryers with a heat pump. The process circuit of the heat pump dryer is completely closed. The hot humid air is cooled and condensed in the 1st heat exchanger and then re-heated in the 2nd heat exchanger.

The heat pump dryer has roughly half the energy consumption of conventional tumble dryers, a higher air flow rate and a lower drying temperature. This results in particularly gentle drying, especially suitable for heat-sensitive textiles such as synthetics and blended fabric.

#### 6.1 Electrical connection data



General information on the electrical connections and an overview of the positions can be found in the Electrical connections (see page 6) section.


Appliance	Mains connection	Rated load	Fuse	Mains connection cable
AdoraDry V6000	220–240 V~ 50 Hz	1050 W	10 A	1.8 m, with plug
AdoraDry V2000	220–240 V~ 50 Hz	750 W	10 A	1.8 m, with plug

#### 6.2 **Dimensions**



The stated dimensions do not include distances from walls. To prevent disturbing noise and vibration the appliances must not come into contact with the surrounding walls of their installation location.


# AdoraDry V2000, V6000

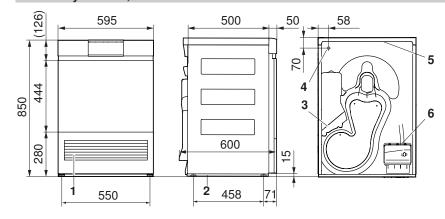


- Cooling air inlet 1
- 2 Installation plate
- 3 Cooling air outlet
- 4 Outlet mains connection cable
  - · Length: 1.8 m, with plug
- 5 Tower panel
- Condensate drain
  - Drain connection: ø10.5 mm
  - Length of drain hose: 2.5 m
  - Pumping height of drain pump: ≤1200 mm

Left-hinged door

Right-hinged door

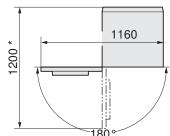

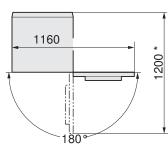

<sup>\*</sup> Clearance space across the whole width of the front

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



# 6.3 Installation space

#### General condition



To prevent an impermissible rise in temperature and humidity, inlet and outlet openings to an adjacent room or to the outside must be available (open windows, ventilation grilles or slots in the door, ventilation systems). On the other hand there is the possibility of using the waste heat.

Normal bathroom extractor fans are not adequate for optimal room ventilation. They switch off with the light after a preset after-running time.

Heat pump dryers affect their environment like a heater blower with a heat output of approx. 700 W.



All Adora appliances must be mounted on the installation plate supplied. Only in this case is problem-free operation guaranteed. The appliances must be levelled by means of adjustable feet.

The room must be kept free of dust and fluff.

#### Room temperature

Permissible room temperature: 5 °C to 35 °C




The room temperature must be kept between the range of 15–25 °C to ensure the economic running of the appliance. A room temperature of over 35 °C is critical and extends the duration of the individual programmes. High temperatures can also result in error messages and impair the service life of the appliance.

#### Ventilation

As a general rule, rooms containing heat pump dryers should be ventilated as these produce a small amount of moisture. For each heat pump dryer, the passage of exhaust and intake air must be guaranteed. EXHAUST AIR requires INTAKE AIR. At least the same amount of air must be supplied to as is being extracted from the room.


#### Ventilation concepts

Installation room volume <20 m<sup>3</sup>

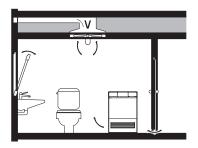

- ► There must be air inlet and outlet openings (open window, ventilation grille or slits in the door, ventilation system) to the adjacent room or to the outside.
- ▶ Operation is trouble-free with an air circulation rate from 15 m³/h.

Installation room volume ≥20 m<sup>3</sup>, room kept closed

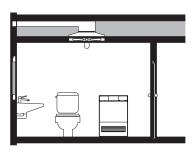

- ► Condensation may form on thermal bridges!
- ► The room must be aired (by opening the door to or a window in the room) between consecutive drying programmes!

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



#### 6.4 Positioning



To prevent disturbing noise and vibration the appliance must not come into contact with the surrounding walls of its installation location. It is imperative to comply with the supplied installation instructions for positioning the appliance.

- ▶ The appliance must stand level and stable. Check with a spirit level.
- ▶ The appliance must not wobble in case of a crosswise load.

#### Installation plate (W40653)




The installation plate is used as an installation aid and its use is obligatory (see page 12). It can be fixed to the floor with double-sided adhesive tape or it can be screwed to the floor.

Failure to observe said precautions can result in injury or in damage to the appliance or fittings!

#### Free-standing position



The minimum distances to the side and back walls as well as between the two installation plates must be observed. The installation plates for washing machines and tumble dryers are the same.

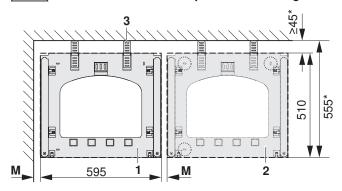

Appliance on installation plate 1	Appliance on installation plate 2	Lateral distance M
Washing machine / Tumble dryer	Washing machine / Tumble dryer	≥5 mm
Convenient storage drawer	Washing machine / Tumble dryer	≥10 mm

<sup>\*</sup> Dimensions only apply if no plumbing fittings are to be installed behind the appliance.

- ► Fold out spacers 3.
- ▶ Position the installation plate 1/2 to the floor according to the dimension specifications.
- ▶ In the case of underfloor heating adhere the installation plate 1/2 into place, otherwise screw it into place (see page 12).
- ► Slide the appliances in.



The condensed water hose and connection cable must not be crushed between the rear of the appliance and the wall or kinked during installation.

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23




# Installing in a niche


#### Open niche



If a tumble dryer is installed in a niche, a 130° door stop must be provided (article no. W54086).

#### **Niche**

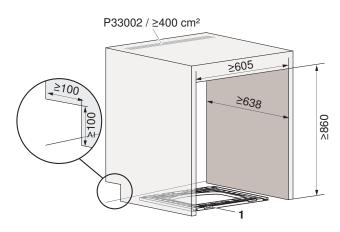

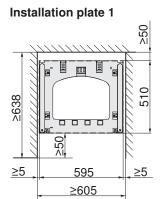

#### Openings that must be provided in the side wall of the niche

- ► For connections and fresh air supply: Provide an opening of ≥100 × 100 mm in the left or right side wall of the niche.
- ► For heat dissipation: Provide a ventilation cross-section of ≥400 cm² or use two ventilation grilles P33002 in the niche ceiling to conduct away the heat that is emitted from the rear of the appliance.

#### Installing

- ▶ Centre and position the installation plate 1 in the niche according to the niche dimensions.
- ▶ In the case of underfloor heating adhere the installation plate 1 into place, otherwise screw it into place (see page 12).
- ► Slide the appliance in.



The condensed water hose and connection cable must not be crushed between the rear of the appliance and the wall or kinked during installation.

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



#### Closed niche (variant A)

In the case of niche variant A, the niche door must be left open when the appliance is in operation.




If a tumble dryer is installed in a niche, a 130° door stop must be provided (article no. W54086).




If a tumble dryer is installed in a niche with a niche door, then both the niche door and the appliance door must be hinged on the same side.

#### **Niche**

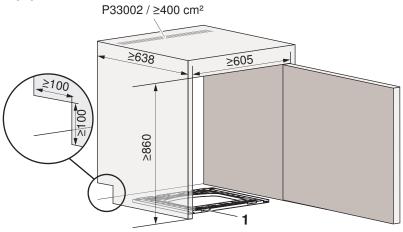

# Installation plate 1

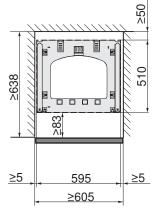

#### Openings that must be provided in the side wall of the niche

- ► For connections and fresh air supply: Provide an opening of ≥100 × 100 mm in the left or right side wall of the niche.
- ► For heat dissipation: Provide a ventilation cross-section of ≥400 cm² or use two ventilation grilles P33002 in the niche ceiling to conduct away the heat that is emitted from the rear of the appliance.

#### Installing

- ▶ Centre and position the installation plate 1 in the niche according to the niche dimensions.
- ▶ In the case of underfloor heating adhere the installation plate 1 into place, otherwise screw it into place (see page 12).
- ► Slide the appliance in.



The condensed water hose and connection cable must not be crushed between the rear of the appliance and the wall or kinked during installation.

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



#### Closed niche (variant B)

In the case of niche variant B, the niche door may be left closed at all times.





If a tumble dryer is installed in a niche, a 130° door stop must be provided (article no. W54086).



If a tumble dryer is installed in a niche with a niche door, then both the niche door and the appliance door must be hinged on the same side.

#### **Niche**

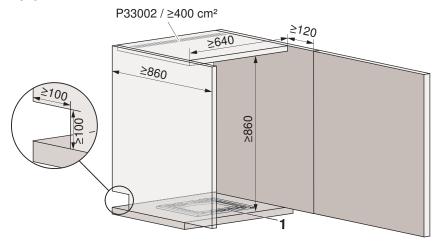

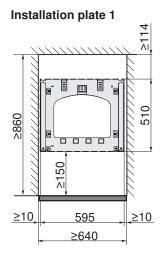

#### Openings that must be provided in the side wall of the niche

- ► For connections and fresh air supply: Provide an opening of ≥100 × 100 mm in the left or right side wall of the niche.
- ► For heat dissipation: Provide a ventilation cross-section of ≥400 cm² or use two ventilation grilles P33002 in the niche ceiling to conduct away the heat that is emitted from the rear of the appliance.
- ► For fresh air supply: Provide an opening of ≥120 × 640 mm (= 800 cm²) across the entire width of the niche between the niche door and the appliance.

#### Installing

- ▶ Centre and position the installation plate 1 in the niche according to the niche dimensions.
- ▶ In the case of underfloor heating adhere the installation plate 1 into place, otherwise screw it into place (see page 12).
- ► Slide the appliance in.



The condensed water hose and connection cable must not be crushed between the rear of the appliance and the wall or kinked during installation.

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23

ZŬG

# 7 Washer-dryer towers



For safety reasons, tumble dryers standing upon washing machines are never to be mounted and operated without the associated installation plate (see page 12).

Disconnection points must be provided for the water supply and electrical connection, which must be capable of being actuated without moving the appliances.

# 7.1 Installation space

For washer-dryer towers, both the room conditions for washing machines and those for tumble dryers apply.

#### Washing machines


Follow the instructions in the section on the installation space (see page 14).

# **Tumble dryers**

Follow the instructions in the section on the installation space (see page 18).

# 7.2 Positioning

# Free-standing position

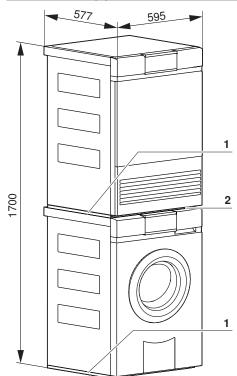

Installation plate

1

2 Tower panel (when delivered, attached to the cover plate at the back of the tumble dryer)

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



#### Installing in a niche



Do not install in closed niches or in cabinets with doors. If no programme selection is made, the appliance door opens automatically after 5 minutes and this can cause damage to the washing machine door and/or the niche door.


V-ZUG accepts no responsibility for any bacteria/germs and odours that form or any damage that may arise as a result.

#### Open niche




If a tumble dryer is installed in a niche, a 130  $^{\circ}$  door stop must be provided (article no. W54086).


#### Niche

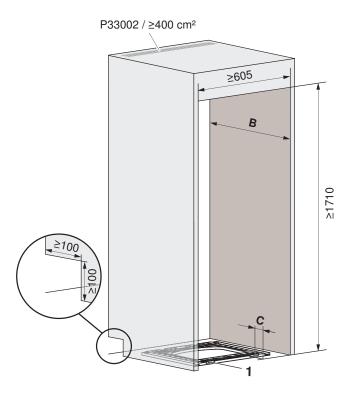


#### Niche front variants 2

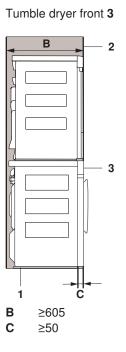

#### Washing machine door 4

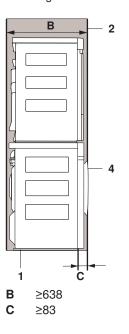

# Installation plate 1

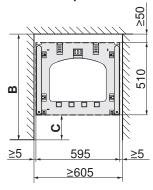

#### Openings that must be provided in the side wall of the niche

- ► For connections and fresh air supply: Provide an opening of ≥100 × 100 mm in the left or right side wall of the niche.
- ► For heat dissipation: Provide a ventilation cross-section of ≥400 cm² or use two ventilation grilles P33002 in the niche ceiling to conduct away the heat that is emitted from the rear of the appliance.

#### Installing

- ▶ Centre and position the installation plate 1 in the niche according to the niche dimensions.
- ▶ In the case of underfloor heating adhere the installation plate 1 into place, otherwise screw it into place (see page 12).
- ► Slide the appliance in.



The condensed water hose and connection cable must not be crushed between the rear of the appliance and the wall or kinked during installation.

24 Washer-dryer towers

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



# Closed niche (variant A)

In the case of niche variant A, the niche door must be left open when the appliance is in operation.




If a tumble dryer is installed in a niche, a 130  $^{\circ}$  door stop must be provided (article no. W54086).




If a tumble dryer is installed in a niche with a niche door, then both the niche door and the appliance door must be hinged on the same side.

#### **Niche**

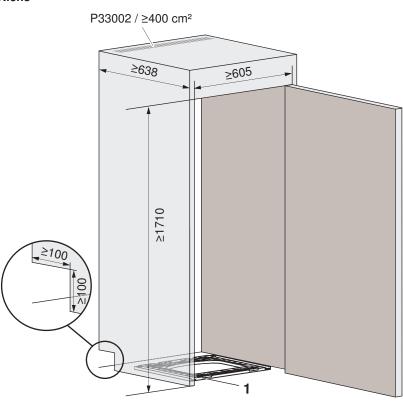

#### Installation plate 1

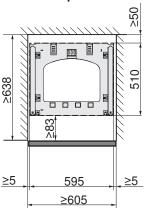

#### Openings that must be provided in the side wall of the niche

- ► For connections and fresh air supply: Provide an opening of ≥100 × 100 mm in the left or right side wall of the niche.
- ► For heat dissipation: Provide a ventilation cross-section of ≥400 cm² or use two ventilation grilles P33002 in the niche ceiling to conduct away the heat that is emitted from the rear of the appliance.

#### Installing

- ▶ Centre and position the installation plate 1 in the niche according to the niche dimensions.
- ▶ In the case of underfloor heating adhere the installation plate 1 into place, otherwise screw it into place (see page 12).
- ► Slide the appliance in.



The condensed water hose and connection cable must not be crushed between the rear of the appliance and the wall or kinked during installation.

Washer-dryer towers 25

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



#### Closed niche (variant B)

In the case of niche variant B, the niche door may be left closed at all times.





If a tumble dryer is installed in a niche, a 130  $^{\circ}$  door stop must be provided (article no. W54086).



If a tumble dryer is installed in a niche with a niche door, then both the niche door and the appliance door must be hinged on the same side.

#### **Niche**

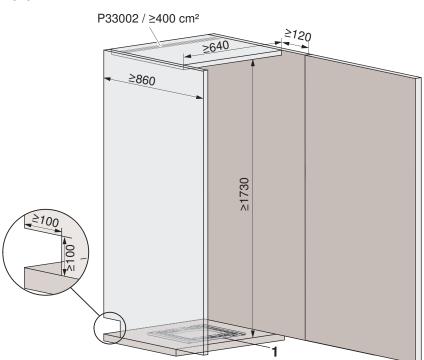

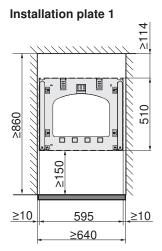

# Openings that must be provided in the side wall of the niche

- ► For connections and fresh air supply: Provide an opening of ≥100 × 100 mm in the left or right side wall of the niche.
- ► For heat dissipation: Provide a ventilation cross-section of ≥400 cm² or use two ventilation grilles P33002 in the niche ceiling to conduct away the heat that is emitted from the rear of the appliance.
- ► For fresh air supply: Provide an opening of ≥120 × 640 mm (= 800 cm²) across the entire width of the niche between the niche door and the appliance.

#### Installing

- ► Centre and position the installation plate 1 in the niche according to the niche dimensions.
- ▶ In the case of underfloor heating adhere the installation plate 1 into place, otherwise screw it into place (see page 12).
- ► Slide the appliance in.



The condensed water hose and connection cable must not be crushed between the rear of the appliance and the wall or kinked during installation.

26 Washer-dryer towers

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



# 8 Convenient storage drawer




Do not stand a washer-dryer tower on a convenient storage drawer.

With appliances from the Excellence Line, a convenient storage drawer – by raising the height of the tumble dryer or washing machine – makes for comfortable use of the appliance. The drawer can also be used for storing washing detergent, accessories, etc.

#### 8.1 Dimensions



The stated dimensions do not include distances from walls. To prevent disturbing noise and vibration the appliances must not come into contact with the surrounding walls of their installation location.

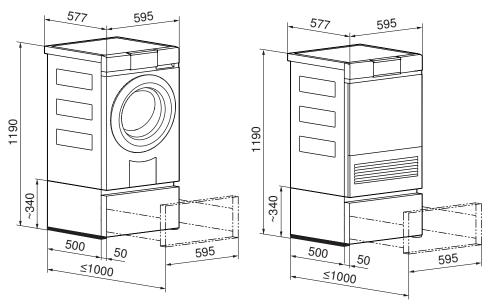



Only safe from tipping over when drawer fully loaded (max. load 25 kg) if installation plate is in place and secured with screws.

For adhered installation plates and installation on an uneven base, the maximum load guaranteed is only up to 8 kg.

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



# 9 Textile care system

#### 9.1 Electrical connection data



General information on the electrical connections and an overview of the positions can be found in the Electrical connections (see page 6) section.


Appliance	Mains connection	Rated load	Fuse	Mains connection cable
RefreshButler V6000	220–240 V~ 50 Hz	1200 W	10 A	2.2 m, with plug

#### 9.2 Dimensions




The stated dimensions do not include distances from walls. To prevent disturbing noise and vibration the appliances must not come into contact with the surrounding walls of their installation location.

#### RefreshButler V6000

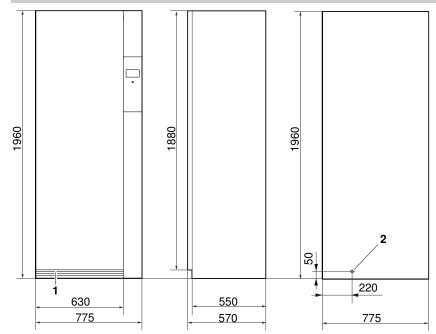

- 1 Cooling air inlet
- 2 Outlet mains connection cable
  - Length: 2.2 m, with plug

#### Left-hinged door

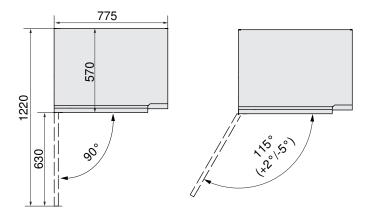

## Laundry room appliances


Australia collection Planning aid

1042424-09

06.06.23



## **Decor panel**

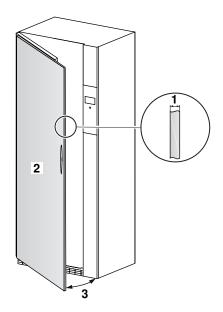

- 1 Thickness of decor panel: 10–19 mm, recommendation: 16 mm
- 2 Maximum permissible weight of decor panel according to hinge manufacturer: 35 kg
- **3** Opening angle: 115° (+2° / -5°)

# 9.3 Installation space

#### General condition



To prevent an impermissible rise in temperature and humidity, the room must be min. 20 m³ in size and sufficiently large inlet and outlet openings to an adjacent room or to the outside must be available (open windows, ventilation grilles or slots in the door, ventilation systems). On the other hand there is the possibility of using the waste heat. Normal bathroom extractor fans are not adequate for optimal room ventilation. They switch off with the light after a preset after-running time.

Heat pump dryers affect their environment like a heater blower with a heat output of approx. 700 W.

The appliance can be levelled by means of adjustable feet. The room must be kept free of dust and fluff.

#### Room temperature

Permissible room temperature: 5 °C to 30 °C



The room temperature should be kept as low as possible to ensure the economic running of the appliance. A room temperature of over 30 °C is critical and extends the duration of the individual programmes. High temperatures can also result in error messages and impair the service life of the appliance.

### Ventilation

As a general rule, rooms containing a textile care appliance must be ventilated as these produce some humidity. For each heat pump dryer, the passage of exhaust and intake air must be guaranteed. EXHAUST AIR requires INTAKE AIR. At least the same amount of air must be supplied to as is being extracted from the room. If the room is kept closed, the installation room volume must be min. 20 m<sup>3</sup>.

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



# 9.4 Positioning




To prevent disturbing noise and vibration the appliance must not come into contact with the surrounding walls of its installation location. It is imperative to comply with the supplied installation instructions for positioning the appliance.

- ▶ The appliance must stand level and stable. Check with a spirit level.
- ▶ The appliance must not wobble in case of a crosswise load.

# Free-standing position



When positioning a RefreshButler so that it is free-standing, a distance of min. 3 mm must be kept to the walls to the left and right.

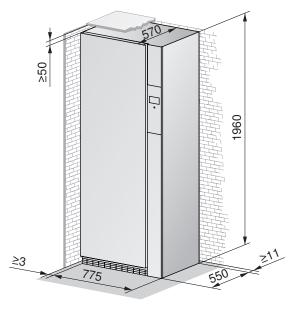

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23





# Positioning in a niche (without decor panel)


The cabinet door extends across entire width of opening. There is no connection to the RefreshButler door.



If the niche is fitted with a door, hinge the niche door on the same side as the appliance door. Ensure that the niche door is left open during the process.

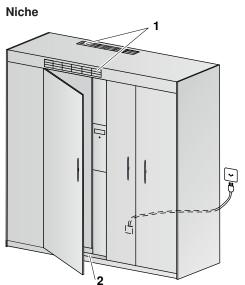

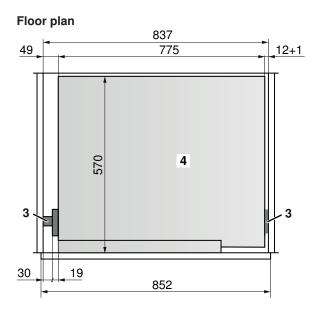

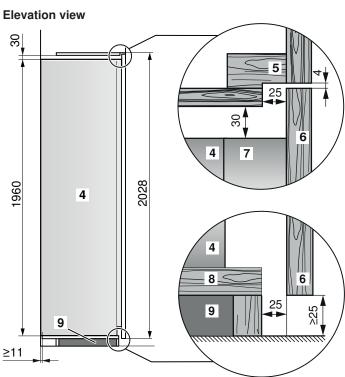

- Provide a ventilation slit 1 of ≥200 cm² on the top at the back or above the cabinet door.
- Observe load-bearing capacity of cabinet floor 2 (min. 170 kg).
- Set the cabinet ceiling 5 and cabinet base 8 back 25 mm for air circulation.
- ► Provide base reinforcement 9 for appliance.
- ▶ If required, mount filler strip 3 before installing the appliance.

- 1 Ventilation slit
- 2 Cabinet floor
- 3 Filler strip
- 4 RefreshButler
- 5 Cabinet ceiling
- 6 Cabinet door
- 7 RefreshButler door
- 8 Cabinet base
- 9 Base reinforcement

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23




# Positioning in a niche (with decor panel)


The decor panel 2 is fastened to the RefreshButler door 6.


# Niche 1

#### Floor plan

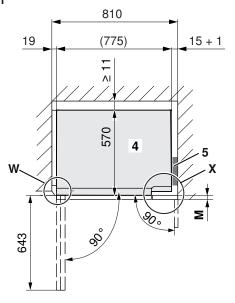

#### RefreshButler door and decor panel

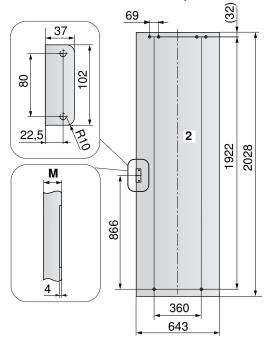

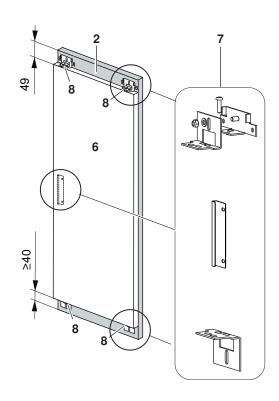

- Provide a ventilation slit 1 of ≥200 cm² on the top at the back or above the cabinet door.
- Load-bearing capacity of cabinet floor 3: min. 170 kg + weight of decor panel 2(max. 35 kg)
- ▶ Determine the thickness **M** of the decor panel **2** (recommendation: 16 mm).
- ► Fasten the decor panel 2 to the RefreshButler door 6 with the angle brackets 5. Two threaded holes (M4) are pre-drilled in the RefreshButler door per angle bracket.
- ▶ If required, mount filler strip 5 before installing the appliance.

- 1 Ventilation slit
- 2 Decor panel (max. 35 kg)
- 3 Cabinet floor
- 4 RefreshButler
- 5 Filler strip
- 6 RefreshButler door
- 7 5 angle brackets, included in the scope of delivery (see installation set W56295)
- 8 Pre-drilled with metric screw holes for mounting the lower/upper angle brackets 7

# Laundry room appliances


Australia collection Planning aid

1042424-09

06.06.23



#### Detail W: RefreshButler door

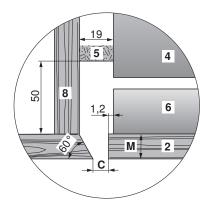


- 2 Decor panel
- 4 RefreshButler
- 5 Filler strip
- 6 RefreshButler door
- 8 Cabinet inside panel

Variants	Thickness M of decor panel 2	Min. gap dimension C
Permissible	<10 mm	4 mm
Permissible	10-19 mm	(( <b>M</b> -10)/1.5) + 3
Recommended	16 mm	7 mm
Not recommended	>19 mm	(3*( <b>M</b> -20)/2) + 11



Decor panel thicknesses over 19 mm are not recommended, as gap dimension C also increases with increasing decor panel thickness M. An installation test must be performed in any case.

Detail X: Door of RefreshButler display

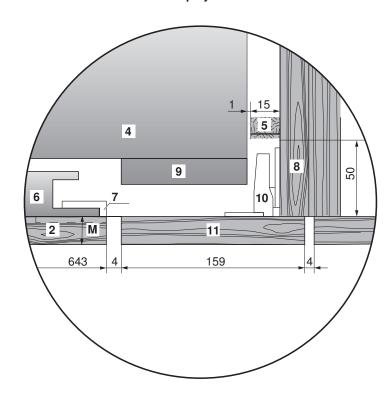

- 2 Decor panel
- 4 RefreshButler
- 5 Filler strip
- 6 RefreshButler door
- 7 Middle angle bracket
- 8 Cabinet inside panel
- 9 RefreshButler display
- 10 Hinge
- 11 Door of RefreshButler display

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



# 10 Accessories

# 10.1 Washing machines

Designation	Remarks	Article no.	Suitable for use with following models
Convenient storage drawer		W31357	AdoraWash V4000, V6000
4 m drain hose set	can be shortened: max.permissible drain height ≤ water outlet out of appliance ~80 cm	W33543	AdoraWash V2000, V6000
Hose support	1 hose support is included in the 4 m drain hose set	80868039	AdoraWash V2000, V6000

# 10.2 Tumble dryers

Designation	Remarks	Article no.	Suitable for use with following models
Convenient storage drawer		W31357	AdoraDry V2000, V6000
Ventilation grille		P33002	AdoraDry V2000, V6000
Fixing discs	1 set of 2 discs	81131132	AdoraDry V2000, V6000
Combi drainage set		W55969	AdoraDry V2000, V6000
Condensate drain kit	1 kit is supplied with the appliance.	W56298	AdoraDry V2000, V6000
Non-return valve set		W50028	AdoraDry V2000, V6000
Drying basket set		W55884	AdoraDry V2000, V6000
Tower panel	1 tower panel is supplied with the appliance.	W55687	AdoraDry V2000, V6000
130° door hinge	for niche installation	W54086	AdoraDry V2000, V6000
Set containing connection for sink drain trap		W53070	AdoraDry V2000, V6000

Designation	Remarks	Article no.	Suitable for use with following model
1 clothes hanger	5 clothes hangers are supplied with the appliance.	W54789	RefreshButler V6000
1 basket	1 basket is supplied with the appliance. Appliance can accommodate max. 2 baskets.	W56746	RefreshButler V6000
1 durgol swiss steamer descaler	1 bottle of descaler is supplied with the appliance.	B28006	RefreshButler V6000

V-ZUG Ltd, Industriestrasse 66, CH-6302 Zug service-support@vzug.com, www.vzug.com

# Laundry room appliances

Australia collection Planning aid

1042424-09

06.06.23



# 11 V-ZUG-Home

#### 11.1 Internet access



Internet access is required for use of V-ZUG-Home.

# 11.2 Scope of delivery

For appliances with V-ZUG-Home, the V-ZUG-Home module is integrated in the appliance and ready for operation. Models with a V-ZUG-Home module are connected to the home network via WLAN/Wi-Fi.

Type of appliance	Model designation Model number	
Washing machines	AdoraWash V2000, V6000	11021, 11023, 11025
Tumble dryers	AdoraDry V2000, V6000	12011, 12013

# 11.3 Connecting to the home network

# **WLAN** connection



Establishing a connection between an appliance and a wireless network is described in the operating instructions for «V-ZUG-Home». These can be found at home.vzug.com.

V-ZUG Ltd, Industriestrasse 66, CH-6302 Zug info@vzug.com, www.vzug.com

Laundry room appliances
Australia collection
Planning aid

1042424-09

06.06.23



# Index

C Combi drainage set
Concealed drain trap
D
Decor panel for RefreshButler
Dimensions of AdoraWash
Dimensions of convenient storage drawer
Door hinge for AdoraDry
Door hinge for AdoraWash
Door hinge for RefreshButler
E
Electrical connections
Fault current
Excellence Line
Explanation of terms
F
Fault current
H
Hose support
1
Installation plate
Mains pressure
N
Notes
P
Plumbing in
R
Residual current device (RCD)
S
Sink drain trap
Symbols used
U
Useful links
V
Validity
Ventilation concepts
W
Water hardness 7 Water inlet 7
Traco mot

V-ZUG Ltd, Industriestrasse 66, CH-6302 Zug service-support@vzug.com, www.vzug.com

# Laundry room appliances Australia collection Planning aid

1042424-09

06.06.23



# 12 Notes

V-ZUG Ltd, Industriestrasse 66, CH-6302 Zug info@vzug.com, www.vzug.com

**Laundry room appliances** Australia collection Planning aid

1042424-09

06.06.23



V-ZUG Ltd, Industriestrasse 66, CH-6302 Zug service-support@vzug.com, www.vzug.com

# Laundry room appliances Australia collection Planning aid

1042424-09

06.06.23



**CONTACT POINT IN AUSTRALIA** 

Services & Support Australia:

Tel. +61 1300 898 428 service.au@vzug.com

**CONTACT IN SWITZERLAND** 

V-ZUG Ltd Industriestrasse 66 6302 Zug/Switzerland www.vzug.com Service & Support International Tel. +41 58 767 67 78 service-support@vzug.com

