55162 - 60312 Warming drawer / system drawer / vacuum drawer



J34008113-R03 22/04/2016



The appliance should be installed by qualified personnel only. Each step must be carried out and checked in full in the order specified.

Validity

These installation instructions apply to the models: 34008, 34009, 34010, 34011, 34012, 34013, 34014, 35001, 35002 and 36001.

General notes



If installing into a combustible material, the guidelines and standards for low voltage installations and fire protection must be strictly observed.

Identification plate

Remove the drawer. The identification plate is located on the left-hand side next to the dial.

Electrical connections



Electrical connections must be carried out by qualified personnel in accordance with the guidelines and standards for low-voltage installations and the specifications of the local electricity supply companies.

A plug-in appliance may only be connected to a socket outlet with earthing contact, installed according to specifications. An all-pole mains isolating device with 3 mm contact opening should be provided in the house wiring system. Switches, plug and socket devices, circuit breakers and fusible cut-outs which are accessible after installation and which have all-poles switching are permissible as isolating devices. Effective earthing and separately installed neutral and earth conductors ensure safe and fault-free operation. After installation, live parts and cables with basic insulation must not be accessible. Check old installations.

- ▶ The appliance is designed for use up to a max. altitude of 2000 m above sea level.
- Refer to the identification plate for information on the required mains voltage, current type and fuse protection.



The mains plug must not be cut off.

55162 - 60312

Warming drawer / system drawer / vacuum drawer



22/04/2016

Installation




The drawer must be secured in place by the 4 screws supplied to prevent tipping.




Make sure that the mains cable is not pinched or kinked. After installation, the mains cable must not touch the back or the bottom of the appliance.

Bracket set 55

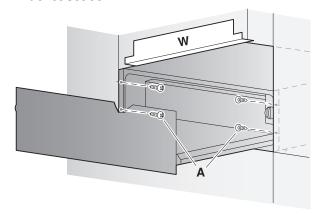

Bracket set 60

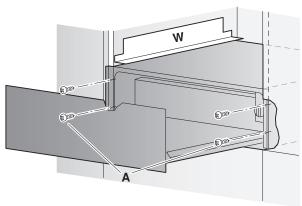

- 1. Fix bracket set 55 or 60 (not included in the scope of delivery) for an appliance located above or below.
- 2. Place appliance in front of the niche and connect the mains plug to the mains socket.
- 3. Carefully slide appliance into the niche until it is flush with the front of the cabinets, ensuring that the mains cable is not pinched.
- 4. Open the drawer and secure in place using the 4 screws **A** supplied, see table below.

Model	Width in cm	Height in mm	Screw A	Designation
34008	55	162	Secure at the sides	Warming drawer
34009	55	220	Secure at the sides	Warming drawer
34010	60	144	Secure at the front	Warming drawer
34011	60	162	Secure at the front	Warming drawer
34012	60	220	Secure at the front	Warming drawer
34013	60	283	Secure at the front	Warming drawer
34014	60	312	Secure at the front	Warming drawer
35001	60	144	Secure at the front	System drawer
35002	60	76	Secure at the front	System drawer
36001	60	144	Secure at the front	Vacuum drawer

22/04/2016

55162 - 60312 Warming drawer / system drawer / vacuum drawer







Built-in solo

Size system 55





Size system 60

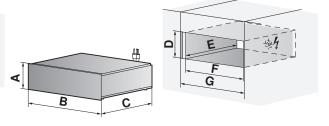


Model	Width in cm	Height in mm	Α	В	С	D	E	F	G
34008	55	162	160	548	547	162	605	550	_
34009	55	220	218	548	547	220	605	550	_
34010	60	144	142	596	547	144	min. 550	560-568	600
34011	60	162	160	596	547	162	min. 550	560-568	600
34012	60	220	218	596	547	220	min. 550	560-568	600
34013	60	283	281	596	547	283	min. 550	560-568	600
34014	60	312	310	596	547	312	min. 550	560-568	600
35001	60	144	142	596	547	144	min. 550	560-568	600
35002	60	76	74	596	547	76	min. 550	560-568	600
36001	60	144	142	596	547	144	min. 550	560-568	600


Installation combinations



If a second appliance is installed in the same niche (above or below), use bracket set W to support the upper appliance.

Below oven, Coffee-Center

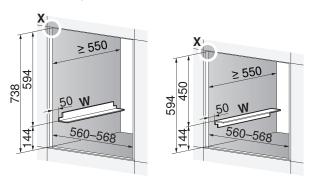

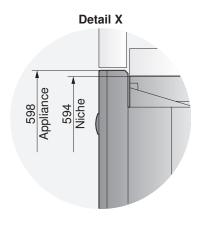


22/04/2016

Warming drawer / system drawer / vacuum drawer



Installation combinations

Installing with an oven

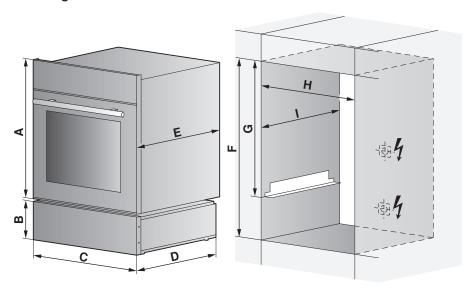


Model	Width in cm	Height in mm	Α	В	С	D	Ε	F	G	Н	I
34008	55	162	598	160	548	547	567	762	600	550	605
34009	55	220	378	218	548	547	567	600	380	550	605


Installation combinations



If a second appliance is installed in the same niche (above or below), use bracket set W to support the upper appliance.

Below oven, Coffee-Center

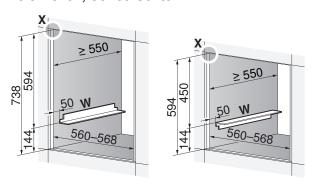

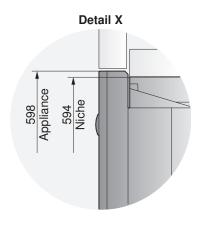





22/04/2016

Installation combinations


Installing with oven

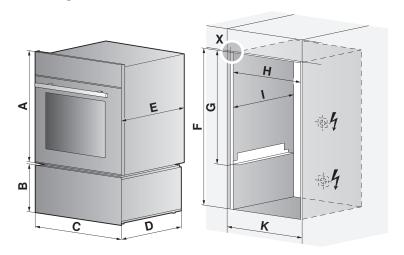


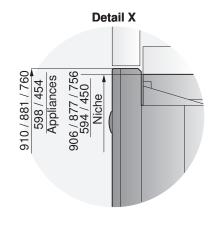

Model	Width in cm	Height in mm	Α	В	С	D	Е	F	G	Н	I	K
34010	60	144	454	142	596	547	567	594	450	560-568	min. 550	600
34011	60	162	598	160	596	547	567	756	594	560-568	min. 550	600
34012	60	220	378	218	596	547	567	594	374	560-568	min. 550	600
34013	60	283	598	281	596	547	567	877	594	560-568	min. 550	600
34014	60	312	598	310	596	547	567	906	594	560-568	min. 550	600
35001	60	144	454	142	596	547	567	594	450	560-568	min. 550	600
35002	60	76	378	74	596	547	567	450	374	560-568	min. 550	600
36001	60	144	454	142	596	547	567	594	450	560-568	min. 550	600

Installing system drawer with Coffee-Center

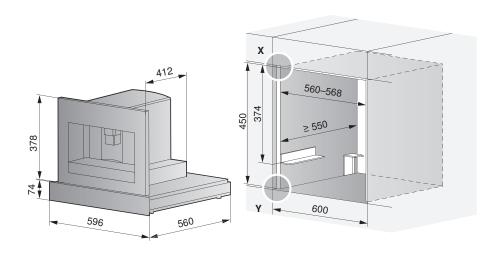

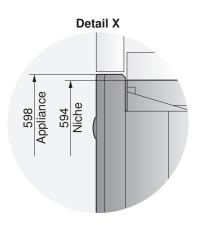

55162 - 60312 Warming drawer / system drawer / vacuum drawer



J34008113-R03 22/04/2016


Depth and height adjustment

Depth adjustment




Only applicable for warming drawers.

1.

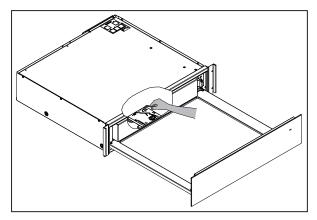

- ▶ Pull the drawer out as far as it will go.
- ► Slide hand and hexagon wrench between stop and drawer housing.

2.

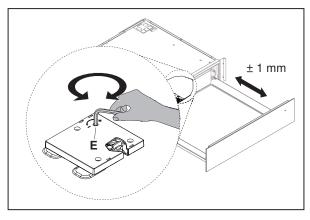


► Turn eccentric **E** with hexagon wrench until drawer is flush with the front.

Only applicable for model 34010:

- ► Remove drawer from drawer housing.
- ► Disassemble drawer.
- ► Turn eccentric **E** with hexagon wrench.
- Fit drawer and check whether it is flush with the front.
- ► Repeat steps if necessary.


Height adjustment

For warming drawers:

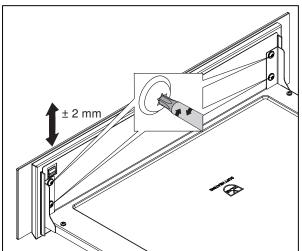

- ▶ Pull the drawer out as far as it will go.
- ► Loosen screws slightly.
- ► Set the required height.
- ► Tighten screws.

For vacuum drawers:

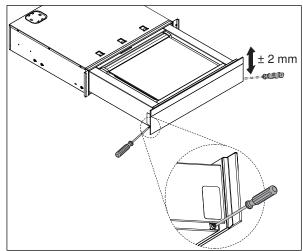

- ▶ Pull the drawer out as far as it will go.
- ► Loosen screws slightly.
- ► Set the required height.
- ► Tighten screws.

Warming drawer / system drawer / vacuum drawer



J34008113-R03 22/04/2016

Air filter assembly




Only applicable for vacuum drawers.




Do not tip vacuum drawer! Vacuum drawer may only be transported and fitted horizontally!


Risk of oil escaping.

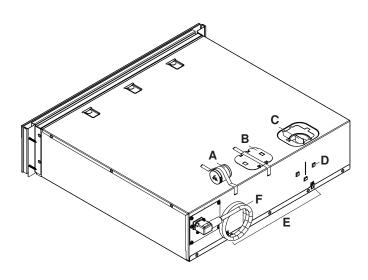


5.

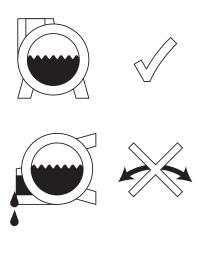


1.

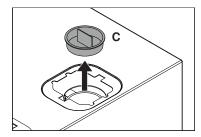

► Pull out locking cap **C** with pliers.

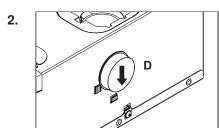


► Insert locking cap **C** in the holder **D** provided for it.

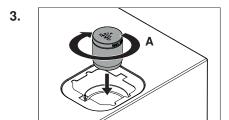


Use a slotted screwdriver to screw air filter A into the air filter opening.

4.

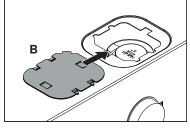

► Slide air filter cover **B** over air filter opening.

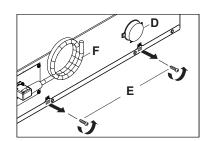

Unscrew transport locks E under connection cable F and holder D.



The transport locks must be removed before starting up for the first time to avoid damage to the appliance.



Disassemble appliance in reverse order. Correctly fit locking cap C in the process.

Risk of oil escaping during transport.